


Replacing the LCD Module

Replacing the LCD module consists of the following tasks:

- ◆ “[Removing the LCD Module](#)”
- ◆ “[Installing the LCD Module](#)”
- ◆ “[Completing the Replacement Process](#)”

Removing the LCD Module

To remove the LCD module, complete the following steps, using the figure for reference:

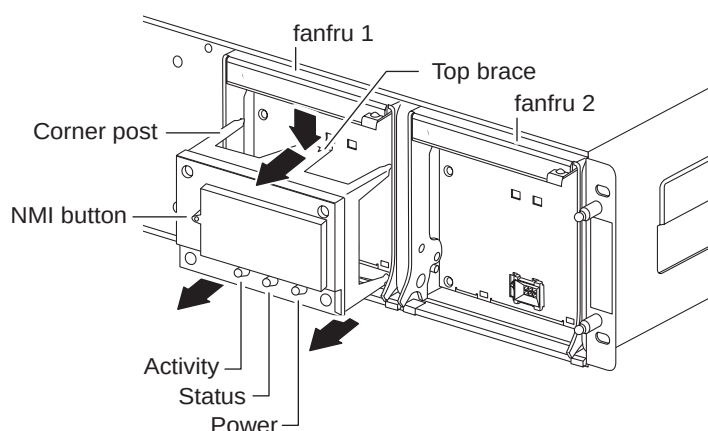

1. Ground yourself to the system chassis using the grounding leash, and then remove the bezel. The LCD module is mounted on fan module labeled fanfru 1.
2. Grasp the LCD module from the front and gently squeeze the top brace of the module. This releases the locking tabs that hold the LCD module in the fan module.
3. Pull the LCD module straight out from the fan module.

Installing the LCD Module

To install the LCD module, complete the following steps:

1. Ground yourself to the system chassis using the grounding leash, and then remove the bezel, if necessary.
2. Align the support posts and top brace of the LCD module with the openings in the front of the fan module, squeeze the top brace of the module, and then push the LCD module into the fan module.

3. Make sure that the LCD module is properly seated, by wiggling it and observing the Status and Power LEDs on the module. If they flicker or are not lit, repeat Step 2.
4. Reinstall the bezel.

Completing the Replacement Process

Return the failed part to Network Appliance, as described in the SRA instructions shipped with the kit. Contact NetApp® technical support at 408-822-6686 if you need the SRA or additional help with the replacement procedure.