


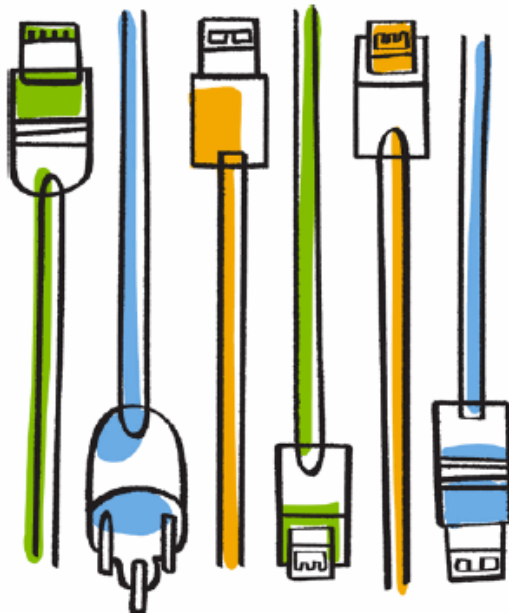

NetApp® AltaVault® Cloud Integrated Storage 4.2

Command-Line Reference Guide



NetApp, Inc.
495 East Java Drive
Sunnyvale, CA 94089
U.S.

Telephone: +1 (408) 822-6000
Fax: + 1 (408) 822-4501
Support telephone: +1(888) 463-8277
Web: www.netapp.com
Feedback: doccomments@netapp.com

Part number: 215-10999_A0
April 2016

Contents

Chapter 1 - Using the Command-Line Interface	3
Connecting to the CLI	3
Overview of the CLI	4
Entering Commands	5
Accessing CLI Online Help	5
Error Messages	5
Command Negation	5
Running the Configuration Wizard	6
Saving Configuration Changes	6
Chapter 2 - User-Mode Commands	7
Entering User-mode Commands	7
System Administration Commands	8
Displaying System Data	11
Chapter 3 - Enable-Mode Commands	27
Entering Enable-mode Commands	27
System Administration Commands	27
Displaying System Data	42
Chapter 4 - Configuration-Mode Commands	53
Entering Configuration Mode Commands	53
System Administration Commands	54
AltaVault Appliance Feature Configuration Commands	125
Displaying System Data	184
Entering KMIP commands	202
Chapter 5 - Troubleshooting	207

CHAPTER 1 Using the Command-Line Interface

This section describes how to access and use the CLI. It includes the following sections:

- “Connecting to the CLI” on page 3
- “Overview of the CLI” on page 4
- “Entering Commands” on page 5
- “Accessing CLI Online Help” on page 5
- “Error Messages” on page 5
- “Command Negation” on page 5
- “Running the Configuration Wizard” on page 6
- “Saving Configuration Changes” on page 6

Connecting to the CLI

This section assumes you have already performed the initial setup of the appliance using the configuration wizard. For detailed information, see the *NetApp AltaVault Cloud Integrated Storage Installation Guide*.

To connect the CLI

1. You can connect to the CLI using one of the following options:
 - An ASCII terminal or emulator that can connect to the serial console. It must have the following settings: 9600 baud, 8 bits, no parity, 1 stop bit, and no flow control.
 - A computer with an SSH client that is connected on the same network as the appliance Primary port.
 - By default, hmac-sha1 is turned off. Verify that you have hmac-sha2.256 or hmac-sha2.512 available to be able to connect using SSH client.
2. At the system prompt enter the following command if the appliance resolves to your local DNS:

```
ssh admin@host.domain
```

otherwise at the system prompt enter the following command:

```
ssh admin@ipaddress
```

- When prompted, enter the administrator password. This is the password you set during the initial configuration process. The default password is **password**. For example:

```
login as: admin
NetApp
Last login: Wed Jan 20 13:02:09 2010 from 10.0.1.1
CLI >
```

You can also log in as a monitor user (**monitor**). Monitor users cannot make configuration changes to the system. Monitor users can view statistics and system logs.

Overview of the CLI

The CLI has the following modes:

- User** - When you start a CLI session, you begin in the default, user-mode. From user-mode you can run common network tests such as ping and view network configuration settings and statistics. You do not enter a command to enter user-mode. To exit this mode, enter exit at the command line.
- Enable** - To access system monitoring commands, you must enter enable-mode. From enable-mode, you can enter any enable-mode command or enter configuration-mode. You must be an administrator user to enter enable-mode. In enable-mode you can perform basic system administration tasks, such as restarting and rebooting the system. To exit this mode, enter disable at the command line.

You cannot enter enable-mode if you are a monitor user.

- Configuration** - To make changes to the running configuration, you must enter configuration-mode. To save configuration changes to memory, you must enter the write memory command. To enter configuration-mode, you must first be in enable-mode. To exit this mode, enter exit at the command line.

The commands available to you depend on which mode you are in. Entering a question mark (?) at the system prompt provides a list of commands for each command mode.

Mode	Access Method	System Prompt	Exit Method	Description
user	Each CLI session begins in user-mode.	host >	exit	- Perform common network tests, such as ping. - Display system settings and statistics.
enable	Enter the enable command at the system prompt while in user-mode.	host #	disable	- Perform basic system administration tasks, such as restarting and rebooting the system. - Display system data and statistics. - Perform all user-mode commands.
configuration	Enter the configure terminal command at the system prompt while in enable-mode.	host (config) #	exit	- Configure system parameters. - Perform all user and enable-mode commands.

Entering Commands

The CLI accepts abbreviations for commands. The following example is the abbreviation for the configure terminal command:

```
CLI # configure t
```

You can press the tab key to complete a CLI command automatically.

Accessing CLI Online Help

At the system prompt, type the full or partial command string followed by a question mark (?). The CLI displays the command keywords or parameters for the command and a short description. You can display help information for each parameter by typing the command, followed by the parameter, followed by a question mark.

To access CLI online help

- At the system prompt enter the following command:

```
CLI (config) # show ?
```

- To display help for additional parameters, enter the command and parameter:

```
CLI (config) # access ?
enable          Enable secure network access
inbound         Secure access inbound configuration
CLI (config) # access inbound ?
rule            Secure access inbound rule configuration
CLI (config) # access inbound rule ?
add             Add a secure network access rule
edit            Edit a secure network access rule
move            Move a secure network access rule
```

Error Messages

If at any time the system does not recognize the command or parameter, it displays the following message:

```
CLI (config) # logging files enable
% Unrecognized command "enable".
Type "logging files ?" for help.
```

If a command is incomplete, the following message is displayed:

```
CLI (config) # logging
% Incomplete command.
Type "logging ?" for help.
```

Command Negation

You can type **no** before many of the commands to negate the syntax. Depending on the command or the parameters, command negation disables the feature or returns the parameter to the default value.

Running the Configuration Wizard

You can restart the configuration wizard so that you can change your initial configuration parameters.

To restart the configuration wizard

- Enter the following set of commands at the system prompt:

```
enable
configure terminal
configuration jump-start
```

Saving Configuration Changes

The **show configuration running** command displays the current configuration of the system. When you make a configuration change to the system, the change becomes part of the running configuration.

The change does not automatically become part of the configuration file in memory until you write the file to memory. If you do not save your changes to memory, they are lost when the system restarts.

To save all configuration changes to memory, you must enter the **write memory** command while in configuration-mode.

CHAPTER 2 User-Mode Commands

This section is a reference for user-mode commands. It includes the following sections:

- [“System Administration Commands” on page 8](#)
- [“Displaying System Data” on page 11](#)

User-mode commands enable you to enter enable-mode, display system data, and perform standard networking tasks. Monitor users can perform user-mode commands. All commands available in user-mode are also available to administrator users. For detailed information about monitor and administrator users, see the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

Entering User-mode Commands

You need to connect to the CLI to enter the user-mode commands.

To enter user-mode

- Connect to the CLI and enter the following command:

```
login as: admin
password:1234
NetApp AltaVault
Last login: Tue Feb 10 22:27:43 2015 from 10.39.5.180
CLI >
```

System Administration Commands

This section describes the system administration commands that are available in user mode.

asup enable

Enables sysdump upload to Auto Support backend.

Syntax

[no] asup enable

Parameters

None

Usage

The **no** command option disables asup.

Example

```
CLI > asup enable
```

asup send message

Sends user specified message.

Syntax

asup send message <message>

Parameters

message	Specify the message to be sent.
----------------	---------------------------------

Example

```
CLI > asup send message
```

asup send test email

Email that will receive receipt confirmation.

Syntax

asup send test email <email>

Parameters

email	Specify the email of the recipient.
--------------	-------------------------------------

Example

```
CLI > asup send test email
```

logging facility user

Configures facility for user messages.

Syntax

logging facility user *system *perprocess

Parameters

system	Configure facility for system message
preprocess	Configure facility for system messages

Example

```
CLI > logging facility user
```

enable

Enters enable mode.

Syntax

enable

Parameters

None

Example

```
CLI > enable
```

exit

Exits the CLI when in user mode; exits configuration mode when in configuration mode.

Syntax

exit

Parameters

None

Example

```
CLI > exit
```

ping

Executes the ping utility to send ICMP ECHO_REQUEST packets to network hosts using IPv4 addresses, for troubleshooting.

Syntax

ping [<options>]

Parameters

<options>	The ping command takes the standard Linux options. For detailed information, see the Linux manual (man) page.
------------------------	---

Usage

The ping command without any options pings from the primary interface and not data interfaces.

If the primary interfaces are not on the same network as the data interfaces, you will not be able to ping an IP address on the data interface network unless you have a gateway between the two networks.

To ping from a data interface, use the following syntax:

```
ping -I <data interface IP address> <destination IP address>
```

Example

```
CLI > ping -I 10.1.1.1 10.11.22.15
```

```
PING 10.11.22.15 (10.11.22.15) from 10.1.1.1: 56(84) bytes of data.
64 bytes from 10.11.22.15: icmp_seq=0 ttl=64 time=0.044 ms
64 bytes from 10.11.22.15: icmp_seq=1 ttl=64 time=0.038 ms
64 bytes from 10.11.22.15: icmp_seq=2 ttl=64 time=0.040 ms
```

ping6

Sends ICMP6_ECHO_REQUEST packets to a network host or gateway using IPv6 addresses, for troubleshooting.

Syntax

ping6 [<options>]

Parameters

<options>	The ping6 command takes the standard Linux options. For detailed information, see the Linux manual (man) page.
-----------	--

Usage

The ping6 command without any options pings from the primary.

Example

```
CLI > ping6 fe80::20e:b6ff:fe04:2788 fe80::20e:b6ff:fe02:b5b0

PING fe80::20e:b6ff:fe04:2788 (fe80::20e:b6ff:fe04:2788) from fe80::20e:b6ff:fe02:b5b0 primary: 56
data bytes
64 bytes from fe80::20e:b6ff:fe04:2788: icmp_seq=0 ttl=64 time=1.14 ms
64 bytes from fe80::20e:b6ff:fe04:2788: icmp_seq=1 ttl=64 time=0.186 ms
--- fe80::20e:b6ff:fe04:2788 ping statistics ---
2 packets transmitted, 2 received, 0% packet loss, time 1001ms
rtt min/avg/max/mdev = 0.186/0.667/1.148/0.481 ms, pipe 2::0101:B3FF:FE1E:8937
2001:38dc:52::e9a4:c5:1001
```

terminal

Sets terminal settings.

Syntax

terminal {length <lines> | type <terminal_type> | terminal width <number of characters>}

Parameters

terminal length <lines>	Sets the number of lines 0-1024; 0 to disable paging. The no command option disables the terminal length.
[no] terminal type <terminal_type>	Sets the terminal type. The no command option disables the terminal type.
terminal width <number of characters>	Sets the width number of characters. The no command option disables the terminal width.

Usage

The **no** command option disables terminal settings.

Example

```
CLI > terminal width 1024
```

upgrade firmware

Upgrading system firmware.

Syntax**upgrade firmware****Parameters**

None

Usage

Run this command to upgrade firmware. Before running this command, optimization service needs to be disabled.

Example

```
CLI > upgrade firmware
```

Displaying System Data

This section describes the commands to display system data. Monitor users can display non-sensitive system data (for example, data that does not include passwords or user information).

show access inbound rules

Displays secure network access inbound configuration.

Syntax**show access inbound rules****Example**

```
CLI > show access inbound rules
Secure network access enabled: no
```

Rule	AL	Prot	Service/ports	Src network	iface	Description

	A	udp	all	10.1.2.30/32		DNS Server

No secure network access rules are configured.

show access status

Displays secure network access status.

Syntax**show access status****Example**

```
CLI > show access status
```

show alarm

Displays the status of the specified alarm.

Syntax**show alarm <type>**

Parameters

<type>	Displays the alarm type.
---------------------	--------------------------

Example

```
CLI # show alarm warning_temp
Alarm Id: Warning Temperature
Alarm Description: The temperature of the appliance is above normal
Enabled: yes
Alarm State: ok
Error threshold: 70
Clear threshold: 67
Last error at: None
Last clear at: None
```

show alarms

Displays the status of all alarms. For detailed information about alarms, see the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

Syntax

show alarms [triggered]

Parameters

triggered	Displays status and configuration of triggered alarms.
------------------	--

Example

```
chief-csa28 # show alarms
Alarm ID:      admission_control
Alarm Description: Admission Control
Status:        ok
-----
Alarm ID:      avg_evicted_age
Alarm Description: Datastore Eviction
Status:        ok
-----
Alarm ID:      cpu_util_indiv
Alarm Description: CPU Utilization
Status:        ok
-----
Alarm ID:      critical_temp
Alarm Description: Critical Temperature
Status:        ok
-----
Alarm ID:      dirty_cloud
Alarm Description: Cloud Bucket Consistency
Status:        ok
-----
Alarm ID:      fan_error
Alarm Description: Fan Error
Status:        ok
<<this is a partial listing>>
```

show bootvar

Displays the software image that is booted upon the next reboot.

Syntax

show bootvar

Parameters

None

Example

```
CLI > show bootvar
Installed images:
  Partition 1:
    rbt_cb 1.3.1-beta #75 2012-01-30 01:05:14 x86_64 root@athens:svn://svn.nbtttech
    .com/mgmt/tags/liberty_75

  Partition 2:
    rbt_cb 1.3.1-beta #81 2012-02-07 01:04:47 x86_64 root@athens:svn://svn.nbtttech
    .com/mgmt/tags/liberty_81

Last boot partition: 2
Next boot partition: 2
```

show cli

Displays current CLI settings.

Syntax**show cli****Parameters**

None

Example

```
CLI > show cli
CLI current session settings
Maximum line size: 8192
Terminal width:    157 columns
Terminal length:   15 rows
Terminal type:     xterm
Auto-logout:       30 minutes
Paging:            enabled
CLI defaults for future sessions
Auto-logout:       30 minutes
Paging:            enabled
```

show clock

Displays current date and time.

Syntax**show clock [all]****Parameters**

all	Displays the system time, date, and ntp peers.
------------	--

Example

```
CLI > show clock
Time: 15:11:13
Date: 2008/10/18
Zone: America North United_States Pacific
```

show email

Displays the current email settings.

Syntax

show email

Parameters

None

Example

```
CLI > show email
Mail hub:          exchange
Mail hub port:    30
Domain:           example.com
Event emails
  Enabled: yes
  Recipients:
    example@netapp.com
Failure emails
  Enabled: yes
  Recipients:
    example@netapp.com
Autosupport emails
  Enabled: no
  Recipient:
    autosupport@eng.netapp.com
Mail hub:
  eng.netapp.com
```

show hardware error-log

Displays IPMI system event log entries.

Syntax

show hardware error-log all | new

Parameters

all	Displays all IPMI SEL entries.
new	Display IPMI SEL entries since the last show hardware error-log command.

Example

```
CLI > show hardware error-log all
1 | 11/28/2006 11:55:10 | Event Logging Disabled SEL | Log area reset/cleared |
  Asserted = yes.
2 | 01/04/2007 21:09:07 | Slot/Connector Drive | Fault Status | Asserted = yes.
3 | 01/07/2007 03:24:07 | Slot/Connector Drive | Fault Status | Asserted = yes.
```

show hardware watchdog

Displays hardware watchdog information.

Syntax

show hardware watchdog

Parameters

None

Example

```
CLI > show hardware watchdog
Enable: yes
Last Ping: 2006-05-12 14:31:49.412973153 -0700
Saved Ping: 2006-04-21 07:25:51.000000000 -0700
```

show hosts

Displays system hosts.

Syntax

show hosts

Parameters

None

Example

```
CLI > show hosts
Hostname: CLI
Name server: 10.0.0.2 (configured)
Domain name: domain.com (configured)
Domain name: domain.com (configured)
IP 107.0.0.1 maps to hostname localhost
```

show images

Displays the available software images and which partition the appliance boots the next time the appliance is restarted.

Syntax

show images

Parameters

None

Example

```
CLI > show images
Images available to be installed:
webimage.tbz
rbtsh/linux 4.0 #12 2007-05-15 11:54:52 root@test:CVS_TMS/HEAD
image.img
rbtsh/linux 4.0 #17 2007-05-22 16:39:32 root@test:CVS_TMS/HEAD
Installed images:
Partition 1:
rbtsh/linux 4.0-HEAD-2007-06-15-07:19:19 #0 2007-06-15 07:19:19 root@test:CVS_TMS/HEAD
Partition 2:
rbtsh/linux 4.0 2007-05-15 11:54:52 root@test:CVS_TMS/HEAD
Last boot partition: 2
Next boot partition: 2
```

show info

Displays the system information, including the current state of the system.

Syntax**show info****Parameters**

None

Example

```

CLI > show info
Current User:      admin

Status:           Degraded
Config:           working
Appliance Up Time: 3d 18h 56m 17s
Service Up Time:  2d 18h 15m 35s
Number of CPUs:   8
CPU load averages: 0.47 / 0.22 / 0.12
Temperature (C):  34

Serial:           R74SJ00002713
Model:            1050
Revision:         A
Version:          1.3.1

```

show logging

Displays logging and logging filter settings.

Syntax**show logging <cr> | filter****Parameters**

filter	Displays per-process logging configuration information.
---------------	---

Example

```

CLI > show logging filter
Local logging level: info
CLI > show logging
Local logging level: info
Default remote logging level: notice
Remote syslog receiver: 10.10.10.2 (logging level: info)
Number of archived log files to keep: 10
Log rotation frequency: daily

```

show ntp

Displays NTP settings.

Syntax**show ntp all****Parameters**

all	Display NTP settings and active peers.
------------	--

Example

```

CLI > show ntp
NTP enabled: yes

```

```
No NTP peers configured.
NTP server: 190.6.38.127 (version 4)
NTP server: 46.187.224.4 (version 4)
NTP server: 46.187.233.4 (version 4)
```

show raid diagram

Displays the physical layout of the RAID disks and the state of each drive: Online, Offline, Fail, Rebuild, Missing, and Spare.

Syntax

show raid diagram

Parameters

None

Example

```
CLI > show raid diagram
[      0 : online      ][      1 : online      ][      2 : missing      ][
      3 : missing      ]
```

show raid error-msg

Displays RAID error messages.

Syntax

show raid error-msg

Parameters

None

Example

```
CLI > show raid error-msg
Alarm raid_error:  ok
```

show raid info

Displays RAID information.

Syntax

show raid info [detail]

Parameters

detail Displays detailed RAID information.

Example

```
CLI > show raid info
alpha-sh116 > show raid info
System Serial          => R98HV00008D14
System Model           => 710
Number of Arrays       => 4
Max Rebuild Rate       => 40000 MB/s
Array Name             => swap
      Array Status     => online
```

```

        Raid Type           => raid6
        Stripe Size         => 64
Array Name                 => var
        Array Status        => online
        Raid Type           => raid6
        Stripe Size         => 64
Array Name                 => shadow
        Array Status        => online
        Raid Type           => raid6
        Stripe Size         => 64
Array Name                 => data
        Array Status        => online
        Raid Type           => raid6
        Stripe Size         => 64

```

show raid physical

Displays RAID physical details.

Syntax

show raid physical

Parameters

None

Example

```

CLI > show raid physical
-----
Physical Drive 0
-----
Status: online           Type: disk
Product: ST3500320NS      Capacity: 465 GB
Serial: 5QM1AFWP          Firmware: SN06
Licensed: True

-----
Physical Drive 1
-----
Status: online           Type: disk
Product: ST3500320NS      Capacity: 465 GB
Serial: 5QM1ABAD          Firmware: SN06
Licensed: True

```

show service

Displays whether services are running.

Syntax

show service

Parameters

None

Example

```

CLI > show service
Storage Optimization Service: ready

```

show snmp

Displays SNMP server settings.

Syntax

show snmp

Parameters

None

Example

```
CLI > show snmp
SNMP enabled: yes
System location:
System contact:
Engine ID: 0x8000430b806d082d854f14e7be
Read-only community: netapp
Traps enabled: yes
Interface listen enabled: no
Trap interface: primary
Persistent ifindex: no
No Listen Interfaces.
No trap sinks configured.
```

show snmp acl-info

Displays SNMP access control list settings.

Syntax

show snmp acl-info

Parameters

None

Example

```
CLI > show snmp acl-info
Security Names
-----
Security name          Community string      Source address
-----
There are no configured security names
Groups
-----
Group name             Security model        Security name
-----
There are no configured groups
Views
-----
There are no configured views
Access control lists
-----
Group name             Security level Read view
-----
```

show snmp ifindex

Displays the ifindex values for all interfaces.

Syntax

show snmp ifindex

Parameters

None

Example

```
CLI > show snmp ifindex
Interface      Ifindex
-----
```

show snmp usernames

Displays SNMP user settings.

Syntax

show snmp usernames

Parameters

None

Example

```
CLI > show snmp usernames
```

```
Username          Authentication Protocol  Authentication Key
There are no configured users
```

show ssh server

Displays the ssh server.

Syntax

show ssh server [allowed-ciphers| publickey]

Parameters

allowed-ciphers	Display SSH server allowed ciphers.
publickey	Display SSH server-public host key.

Example

```
CLI > show ssh server publickey
SSH server public key: ssh-rsa AAAAB3NzaC1yc2EAAAQEAwz7zKAc1NbTKSp40mRg7J
9YV5CeGRQoCEPS17ValtEQbepaQygdifueiejht39837482y74982u7ridejbvgiIYZs/E23zmn2l2kj
dXFda8zJxJm07RIKOxNDEBUbAUUp8h8dkeiejgfoeoriu39438598439gfjeNLfhjWghldzeGYycaAoEA
K21Igg+Sg0ELGq2cJ8mMzsSsCq5PnOmj63RAMuRgBdrtBdIAd32fy642PQJveqtf17MBN6IwTDECRpex
F3Ku98pRefc2h0u44VZNT9h4tXCe8qHpuO5k98oA
```

```
CLI > show ssh server allowed-ciphers
SSH server allowed ciphers:
-----
aes128-ctr
```

```

aes192-ctr
aes256-ctr

```

show stats alarm

Displays status and configuration of statistics-based alarms.

Syntax

show stats alarm

Parameters

None

Example

```

CLI > show stats alarm
Alarm Id:          avg_evicted_age
Alarm Description: Datastore Eviction
Status:            ok
-----
Alarm Id:          cpu_util_indiv
Alarm Description: CPU Utilization
Status:            ok
-----
Alarm Id:          critical_temp
Alarm Description: Critical Temperature
Status:            ok
-----
Alarm Id:          dirty_cloud
Alarm Description: Cloud Bucket Consistency
Status:            ok
-----
Alarm Id:          fan_error
Alarm Description: Fan Error
Status:            ok
-----
Alarm Id:          flash_error
Alarm Description: Flash Error
Status:            ok
-----
Alarm Id:          fs_mnt
Alarm Description: System Disk Full
Status:            ERROR
-----
Alarm Id:          ipmi
Alarm Description: IPMI
Status:            ok
-----
Alarm Id:          license
Alarm Description: Licensing
Status:            ok
-----
<<this is a partial display>>

```

show stats alarm <alarm name>

Displays status and configuration of statistics-based alarms.

Syntax

show stats alarm <alarm name>

Parameters

<alarm name> Specify the name of the alarm for which you want to display statistics.

Example

```
CLI > show stats alarm replication_error
Alarm Id:          replication_error
Alarm Description: Storage Optimization Service Replication Error
  Enabled:          yes
  Alarm state:      ok
  Rising error threshold: yes
  Rising clear threshold: yes
  Falling error threshold: no
  Falling clear threshold: no
  Rate limit bucket counts: { 5, 20, 50 }
  Rate limit bucket windows: { 3600, 86400, 604800 }
  Last checked at:   2012/03/05 11:15:52
  Last checked value: false
  Last event at:
  Last rising error at:
  Last rising clear at:
  Last falling error at:
  Last falling clear at:
```

show stats data

Displays statistics report.

Syntax

show stats data

Parameters

None

Usage

This command displays statistics about replicated data and replication bytes that are pending.

Example

```
CLI > show stats data
Storage Optimization
Expanded Data: 536.87 MB
Deduplicated Data: 188.05 MB
Deduplication factor: 2.85

Replication Data
Cloud Synchronized Until: 2014/10/15 21:54:15
Time to complete replication: Data replication complete
Replication bytes pending: 0.00 B

Disk Storage Allocation
Used: 139.36 MB
Free: 2.06 TB
Total: 2.06 TB

Inode usage
Used inodes: 2104
```

Total inodes: 126728110

Cloud Storage allocation

Used: 188.21 MB

Total: 18.45 EB

show stats cpu

Displays CPU statistics.

Syntax

show stats cpu

Parameters

None

Example

```
chief-csa28 # show stats cpu
```

CPU 1 Utilization

Most recent average:	0% over 10 seconds
Average for last hour:	0%
Peak for last hour:	24% over 5 seconds
Peak Time:	2012/08/06 11:22:20

CPU 2 Utilization

Most recent average:	0% over 10 seconds
Average for last hour:	0%
Peak for last hour:	36% over 5 seconds
Peak Time:	2012/08/06 12:06:50

CPU 3 Utilization

Most recent average:	0% over 10 seconds
Average for last hour:	0%
Peak for last hour:	13% over 5 seconds
Peak Time:	2012/08/06 11:36:20

CPU 4 Utilization

Most recent average:	0% over 10 seconds
Average for last hour:	0%
Peak for last hour:	15% over 5 seconds
Peak Time:	2012/08/06 11:21:20

CPU 5 Utilization

Most recent average:	0% over 10 seconds
Average for last hour:	0%
Peak for last hour:	24% over 5 seconds
Peak Time:	2012/08/06 11:21:20

CPU 6 Utilization

Most recent average:	0% over 10 seconds
Average for last hour:	0%
Peak for last hour:	20% over 5 seconds
Peak Time:	2012/08/06 11:21:20

CPU 7 Utilization

Most recent average:	0% over 10 seconds
Average for last hour:	0%
Peak for last hour:	14% over 5 seconds
Peak Time:	2012/08/06 11:21:20

CPU 8 Utilization

Most recent average:	0% over 10 seconds
Average for last hour:	0%
Peak for last hour:	11% over 5 seconds
Peak Time:	2012/08/06 11:21:20

show stats ecc-ram

Displays the Error-Correcting Code (ECC) error counts.

Syntax

show stats ecc-ram

Parameters

None

Example

```
CLI > show stats ecc-ram
No ECC memory errors have been detected
```

show stats fan

Displays the fan statistics.

Syntax

show stats fan

Parameters

None

Example

```
CLI > show stats fan
FanId   RPM      Min RPM  Status
1       3825    750     ok
2       3750    750     ok
```

show tcpdump-x

Displays currently running tcpdumps.

Syntax

show tcpdump-x

Parameters

None

Example

```
CLI > show tcpdump-x
No running capture
```

show terminal

Displays terminal settings.

Syntax

show terminal

Parameters

None

Example

```
CLI > show terminal
CLI current session settings
  Terminal width:      80 columns
  Terminal length:     24 rows
  Terminal type:       xterm
```

show version

Displays the installed software version, including build number.

Syntax

show version <cr> | [**all** | **concise** | **history**]

Parameters

all	Displays version information for the current system image. This option displays the product name, product release, build ID, build date, build architecture, built by, uptime, product model, system memory, number of CPUs, and CPU load averages.
concise	Displays the installed software version without build information.
history	Displays upgrade version history.

Example

```
chief-csa28 # show version all
Product name:      rbt_cb
Product release:   2.0.0-beta
Build ID:          #209
Build date:        2012-08-06 01:18:15
Build arch:        x86_64
Built by:          root@edinburgh

Uptime:            39m 40s

Product model:     510
System memory:     7667 MB used / 196 MB free / 7864 MB total
Number of CPUs:    8
CPU load averages: 0.01 / 0.03 / 0.08
```

show web

Displays current Web settings.

Syntax

show web

Parameters

None

Example

```
CLI (config) # show web
Web-based management console enabled: yes
  HTTP enabled: yes
  HTTP port: 80
  HTTPS enabled: yes
  HTTPS port: 443
  Web server timeout: 3600
  SOAP server enabled: no
  SOAP server port: 9001
```

```

REST server enabled: no
Configure Mode TRAP: yes
Inactivity timeout: 1000 minutes
Session timeout: 1000 minutes
Session renewal threshold: 500 minutes
Timeout during report auto-refresh: yes
SSLv2 enabled: no
SSLv3 enabled: no
TLSv1 enabled: yes
Listen enabled: yes
No Listen Interfaces.

```

show web prefs

Displays the current Web preferences.

Syntax

show web prefs

Parameters

None

Example

```

CLI > show web prefs
Default Login ID:   admin
Log Lines Per Page: 100

```

show web ssl cert

Displays details about the current SSL certificate used for securing HTTPS connections to the Web Management Console.

Syntax

show web ssl cert

Parameters

None

Example

```

CLI(config) # show web ssl cert
Issued To:
  Common Name:      oak-sword8
  Email:            admin@oak-sword8
  Organization:     NetApp
  Organization Unit:
  Locality:         Sunnyvale
  State:            CA
  Country:          US
Issued By:
  Common Name:      oak-sword8
  Email:            admin@oak-sword8
  Organization:     NetApp
  Organization Unit:
  Locality:         Sunnyvale
  State:            CA
  Country:          US
Validity:
  Issued On:        Apr 19 05:24:18 2013 GMT
  Expires On:       Apr 19 05:24:18 2015 GMT
Fingerprint:
  SHA1:             A9:F3:E5:3D:FA:DD:AA:B1:E3:0E:0C:FB:C7:D8:E3:B7:3C:E2:89:D2

```

CHAPTER 3 Enable-Mode Commands

This section is a reference for enable-mode commands. It includes the following sections:

- [“System Administration Commands” on page 27](#)
- [“Displaying System Data” on page 42](#)

You can perform basic system administration tasks in enable mode. Only administrator users can perform enable-mode commands. All commands available in user mode are also available in enable mode.

[Chapter 4, “Configuration-Mode Commands”](#) describes some enable commands because they are more easily understood in relationship to the feature set of which they are a part. The usage section for these enable-mode commands remind you that you can also access these commands while in enable mode.

Entering Enable-mode Commands

You need to connect to the CLI to enter enable-mode commands.

To enter enable-mode

- Connect to the CLI and enter the following command:

```
login as: admin
NetApp AltaVault
Last login: Wed Jan 20 13:02:09 2014 from 10.0.1.1
gen1-sh139 > enable
gen1-sh139 #
```
- To exit enable-mode, enter **exit**. For information about the **exit** command, see [“exit” on page 9](#).

System Administration Commands

This section describes the system administration commands that are available in enable-mode.

For debugging commands, see [“Debugging Commands” on page 132](#).

clear arp-cache

Clears dynamic entries from the ARP cache. This command does not clear static entries.

Syntax**clear arp-cache****Parameters**

None

Example

```
CLI # clear arp-cache
```

clear hardware error-log

Clears IPMI System Event Log (SEL).

Syntax**clear hardware error-log****Parameters**

None

Usage

The amber LED light on the system stops blinking.

Example

```
CLI # clear hardware error-log
```

clear hardware edac-ue-alarm

Clears the edac (Error Detection and Correction) ue (Uncorrectable Error) alarm.

Syntax**clear hardware edac-ue-alarm****Parameters**

None

Usage

The amber LED light stops blinking on the system.

Example

```
CLI # clear hardware edac-ue-alarm
```

clock set

Sets the system date and time.

Syntax**clock set {<yyyy/mm/dd>/<hh:mm:ss>}****Parameters**

<yyyy/mm/dd>/<hh:mm:ss>	Specify the date and time (year, month, day, hour, minutes, and seconds).
--	---

Example

```
CLI # clock set 2003/12/31 23:59:59'
```

configure terminal

Enables configuration from the terminal by entering the configuration subsystem. You must execute the “enable” command first to enter configuration mode.

Syntax

[no] configure terminal

Parameters

None

Usage

To exit the configuration subsystem, type **exit**.

The **no** command option disables the terminal configuration.

Example

```
CLI # configure terminal
```

disable

Exits enable mode.

Syntax

disable

Parameters

None

Example

```
CLI # disable
```

file stats delete

Deletes the statistics file.

Syntax

file stats delete <filename>

Parameters

<filename>	Specify the name of the file to delete.
------------	---

Example

```
CLI # file stats delete throughput
```

file stats move

Renames the statistics file.

Syntax

file stats move <source filename> <destination filename>

Parameters

<source filename>	Specify the source file to rename.
<destination filename>	<Specify the new filename.

Example

```
CLI # file stats move throughput throughput2
```

file stats upload

Uploads the statistics report file to a remote host.

Syntax

```
file stats upload <filename>
<URL, scp://, or ftp://username:password@hostname/path/filename>
```

Parameters

<URL, scp://, or ftp:// username:password@hostname/ path/filename>	Specify the upload protocol, the location, and authentication credentials for the remote file.
--	--

Example

```
CLI # file stats upload throughput http://www.test.com/stats
```

file tcpdump

Deletes or uploads a TCP dump file.

Syntax

```
file tcpdump {delete <filename> | upload <filename>
<URL or scp://username:password@hostname/path/filename>}
```

Parameters

delete <filename>	Deletes the tcpdump file.
upload <filename> <URL or scp:// username:password@hostname/ path/filename>	Uploads a tcpdump output file to a remote host. Specify the upload protocol, the location, and authentication credentials for the remote configuration file.

Example

```
CLI # file tcpdump delete dumpfile
CLI # file tcpdump upload dump http://www.test.com/stats
```

image delete

Deletes the specified software image.

Syntax

```
image delete <image-filename>
```

Parameters

<image-filename>	Specify the name of the software image to delete.
------------------	---

Example

```
CLI # image delete snkv1.0
```

image delete-all

Deletes all software images in the AltaVault.

Syntax

image delete-all

Parameters

None

Example

```
CLI # image delete-all
```

image fetch

Downloads a software image from a remote host.

Syntax

image fetch <URL, scp:// or ftp://username:password@hostname/path/filename> <image-filename> version <version_number>

Parameters

<URL, scp:// or ftp:// username:password@hostname/ path/filename>	Specify the upload protocol, the location, and authentication credentials for the remote image file. Press the Enter key to download the image. The image retains the same name it had on the server.
<image-filename>	Specify a local filename for the image.

Example

```
CLI # image fetch http://www.domain.com/ww3.0 version 3.0
```

image install

Installs the software image on the backup boot partition.

Syntax

image install <image-filename>

Parameters

<image-filename>	Specify the software image filename to install.
------------------	---

Example

```
CLI # image install upgrade.img
```

image upgrade

Upgrades the software image to a later version.

Syntax

image upgrade <image-filename>

Parameters

<image-filename>	Specify the software image filename to upgrade to.
------------------	--

Example

```
CLI # image upgrade upgrade.img
```

image move

Moves or renames an inactive system image on the hard disk.

Syntax

image move <source-image-name> <new-image-name>

Parameters

<source-image-name>	Specify the name of the software image to move or rename.
<new-image-name>	Specify the new name of the software image.

ntpdate

Conducts a one-time synchronization with a specified NTP server.

Syntax

ntpdate <ip-addr>

Parameters

<ip-addr>	Specify the NTP server with which to synchronize.
-----------	---

Example

```
CLI # ntpdate 10.10.10.1
```

reload

Reboots the system.

Syntax

reload [clean halt] | halt | force

Parameters

clean halt	Clears the data store, then reboots or shuts down the system.
halt	Shuts down the system.
force	Force an immediate reboot of the system even if it is busy.

Example

```
CLI # reload
```

The session will close. It takes about 2-3 minutes to reboot the appliance.

stats alarm

Configures alarms based on sampled or computed statistics.

Syntax

[no] stats alarm <alarm_name> clear | enable | falling clear-threshold | falling error-threshold | rate-limit count <long | medium | short > | rate-limit reset | rate-limit window <long | medium |short> | rising clear-threshold | rising error-threshold

Parameters

alarm <alarm_name>	Specify the alarm name: avg_evicted_age - Datastore eviction cpu_util_indiv - CPU utilization critical_temp - Critical temperature dirty_cloud - Cloud bucket consistency fan_error - Fan error flash_error - Flash error fs_mnt - System disk full ipmi - IPMI license - Licensing linkstate - Link state low_space - Datastore low space megastore_guid_error - Cloud bucket disparity memory_error - Memory error over_capacity - Capacity licensing paging - Memory paging power_supply - Power supply raid_error - RAID replication_error - Storage optimization service replication error replication_pause - Storage optimization service replication paused secure_vault_unlocked - Secure vault service_error - Storage optimization service configuration error sticky_staging_dir - Process dump staging directory inaccessible warning_temp - Warning temperature
clear	Clears the alarm.
enable	Enables the alarm.
falling clear-threshold	Clears the alarm if the statistic exceeds the falling clear-threshold value.
falling error-threshold	Triggers an alarm if the statistic falls below the error threshold.
rate-limit count <long medium short>	Specify the alarm event rate limit value (long, medium, or short).
rate-limit window <long medium short>	Specify the alarm event rate limit window (long, medium, or short).
rising clear-threshold	Clears the alarm if the statistic falls below the rising clear-threshold. For example, if the rising error-threshold is 50 and the rising clear-threshold is 25, then when the alarm value is over 50, the alarm is triggered; it is cleared
rising error-threshold	Specify the rising threshold. When the statistic reaches the rising threshold, the alarm is activated. The default value is 90%.

Example

```
CLI # stats alarm raid_error
```

Usage

The **no** command option disables the alarm.

stats clear-all

Clears data for all samples, computed history data points (CHDs), and status for all alarms.

Syntax

stats clear-all

Parameters

None

Example

```
CLI # stats clear-all
```

stats export

Exports statistics to a file.

Syntax

stats export <csv> <report name> <cr> | after <yyyy>/<mm>/<dd> <hh>:<mm>:<ss> <cr> | before <yyyy>/<mm>/<dd> <hh>:<mm>:<ss> <cr> | email <email address> | filename <filename> <cr>]

Parameters

csv	Exports statistics in CSV (comma-separated value) format.
<report name>	Specify the report name: • expanded_bytes - Expanded Bytes statistics • encoders_active - Encoders Active statistics • encode_calls - Encode calls statistics • encode_errors - Encode errors statistics • encode_commits - Encode commits statistics • encode_aborts - Encode aborts statistics • encode_bytes - Encode bytes statistics • encode_anchor_hits - Encode anchor hits statistics • encode_anchor_misses - Encode anchor misses statistics • encode_data_hits - Encode data hits statistics • encode_data_misses - Encode data misses statistics • decoders_active - Decoders active statistics • decode_calls - Decode calls statistics. • decode_errors - Decode errors statistics • decode_bytes - Decode bytes statistics • decode_hits - Decode hits statistics • decode_misses - Decode misses statistics • deleters_active - Deleters active statistics • delete_calls - Delete calls statistics • delete_errors - Delete errors statistics • delete_pending - Delete pending statistics • delete_commits - Delete commits statistics • delete_aborts - Delete Aborts statistics

-
- **slab_count** - Slab count statistics
 - **slab_bytes** - Slab bytes statistics
 - **slab_ref_bytes** - Slab reference bytes statistics
 - **slab_cref_bytes** - Slab cref bytes statistics
 - **slab_sealed_cref_bytes** - Slab sealed cref bytes statistics
 - **slab_labels** - Slab labels statistics
 - **slab_dead_labels** - Slab dead labels statistics
 - **slab_read_bytes** - Slab read bytes statistics
 - **slab_read_count** - Slab read count statistics
 - **slab_write_bytes** - Slab write bytes statistics
 - **slab_write_count** - Slab write count statistics
 - **map_count** - Map count statistics
 - **map_bytes** - Map bytes statistics
 - **map_read_bytes** - Map read bytes statistics
 - **map_read_count** - Map read count statistics
 - **map_write_bytes** - Map write bytes statistics
 - **map_write_count** - Map write count statistics
 - **metadata_bytes** - Metadata bytes statistics
 - **anchor_bytes** - Anchor bytes statistics
 - **log_bytes** - Log bytes statistics
 - **repair_calls** - Repair calls statistics
 - **repair_aborts** - Repair aborts statistics
 - **repaired_labels** - Repaired labels statistics
 - **replicated_used_bytes** - Replicated used bytes statistics
 - **replicated_write_bytes** - Replicated write bytes statistics
 - **replicated_slabs** - Replicated slabs statistics
 - **replicated_slabrefs** - Replicated slab reference statistics
 - **replicated_maps** - Replicated maps statistics
 - **replicated_slabs_pending** - Replicated slabs pending statistics
 - **replicated_slabrefs_pending** - Replicated slabrefs pending statistics
 - **replicated_maps_pending** - Replicated maps pending statistics
 - **replicated_txns_pending** - Replicated txns pending statistics
 - **replication_errors** - Replication errors statistics
-

-
- **restored_bytes** - Restored bytes statistics
 - **restored_slabs** - Restored slabs statistics
 - **evicted_bytes** - Evicted bytes statistics
 - **evicted_age** - Evicted age statistics
 - **evicted_count** - Evicted count statistics
 - **create_bucket_ops** - Create bucket operations statistics
 - **list_all_bucket_ops** - List all bucket operations statistics
 - **list_bucket_ops** - List bucket operations statistics
 - **delete_bucket_ops** - Delete bucket operations statistics
 - **put_ops** - Put operations statistics
 - **re_put_ops** - Re-put operations statistics
 - **copy_ops** - Copy operations statistics
 - **get_ops** - Get operations statistics
 - **delete_ops** - Delete operations statistics
 - **head_ops** - Head operations statistics
 - **used_bytes** - Used bytes statistics
 - **replicated_bytes_pending** - Replicated bytes pending statistics
 - **segs_created** - Segments created statistics
 - **replicated_segs** - Replicated segments statistics
 - **replicated_segs_pending** - Replicated segments pending statistics
 - **slab_segment_bytes** - Slab segment bytes statistics
 - **cpu_util** - CPU utilization
 - **memory** - Memory utilization
 - **paging** - Paging input and output
-

after <yyyy>/
<mm>/<dd>
<hh>:<mm>:<ss>
<cr>

Specify the date and time to include statistics collected after a specific time.

before <yyyy>/
<mm>/<dd>
<hh>:<mm>:<ss>
<cr>

Specify the date and time to include statistics collected before a specific time.

email <email
address>

Specify the address where the report should be emailed.

filename
<filename>

Specify filename for the new report.

Example

```
CLI # stats export csv expanded_bytes after 2012/01/01 filename test
```

stats restore

Restores statistics of an old model.

Syntax

stats restore

Parameters

None

Example

```
amnesia # stats restore
```

stats restore continue

Continue to restore statistics of an old

Syntax

stats restore continue

Parameters

None

Example

```
CLI # stats restore continue
```

tcpdump

Executes the tcpdump utility. You can quickly diagnose problems and take traces for NetApp Support. The tcpdump command takes the standard Linux options. For detailed information, see the Linux man page.

Syntax

tcpdump [<options>] [<filter string>]

Parameters

<options>	-c Exit after receiving count packets. -d Dump the compiled packet-matching code in a human readable form to standard output and stop. -dd Dump packet-matching code as a C program fragment. -ddd Dump packet-matching code as decimal numbers (preceded with a count). -e Print the link-level header on each dump line. -E Use secret algorithm for decrypting IPsec ESP packets. -f Print foreign internet addresses numerically rather than symbolically. -F Use file as input for the filter expression. An additional expression given on the command line is ignored. -i Listen on interface. If unspecified, tcpdump searches the system interface list for the lowest numbered, configured up interface. -n Do not convert addresses, such as host addresses and port numbers to names. -N Do not print domain name qualification of hostnames. For example, if you specify this flag, then tcpdump will print nic instead of nic.ddn.mil. -m Load SMI MIB module definitions from file module. This option can be used several times to load several MIB modules into tcpdump. -q Quiet output. Print less protocol information so output lines are shorter. -r Read packets from created with the -w option. -S Print absolute, not relative, TCP sequence numbers. -v (Slightly more) verbose output. For example, the time to live, identification, total length and options in an IP packet are printed. Also enables additional packet integrity checks such as verifying the IP and ICMP header checksum. -w Write the raw packets to a file rather than parsing and printing them out. They can later be printed with the -r option. Standard output is used if file is -. -x Print each packet without its link level header in hexi-decimal format. The smaller of the entire packet or bytes will be printed. -X When printing hex, print ascii too. Thus if -x is also set, the packet is printed in hex/ascii. This option enables you to analyze new protocols. For detailed information, see the Linux man page.
------------------------	---

Usage

Make sure you take separate tcpdumps for the LAN and WAN to submit to NetApp Support. Make sure you take the tcpdump on the in-path interface.

The most common options are:

- n Do not resolve addresses via DNS
- i <interface> capture on <interface>
- e display layer 2 headers, MAC addresses, and VLAN tags
- s <bytes> capture up to <bytes> bytes per packet

The default is 96 bytes; not enough for deep packet inspection for NetApp Support, instead use:

- s 0 to capture full frames
- w <file> store the trace in <file> (needed when taking traces for offline analysis)

Common Packet Filters

- src host <ip> - source IP address is <ip>
- dst host <ip> - destination IP address is <ip>
- host <ip> - either source or destination is <ip>
- Same for src port, dst port, and port
- Can connect multiple filters together with logical operators: and, or, and not. Use parentheses to override operator precedence. For example:

```
tcpdump -i primary
```

To diagnose a problem communicating to a cloud provider on the back-end, use the command:

```
tcpdump -i primary host <cloud storage provider's IP address>
```

To diagnose a problem backing up to a AltaVault on the front end:

```
tcpdump -i e0A host <backup server> and (port 445 or port 2049)
```

NetApp recommends offline analysis of trace files with a tool such as Wireshark. To write the captured packets to a file instead of displaying them on the screen, use the `-w <filename>` option then retrieve the pcap file using the web UI or the "file tcpdump upload" CLI command.

Keep the tcpdump running and establish a connection.

Sometimes you can capture very large traces of data and traffic you are interested in is a small subset of the entire trace. To work around this problem, run tcpdump through its own trace to cut down on the number of packets. Use the `-r <file>` option, to read from a file instead of capture on an interface

```
tcpdump -n -r my_trace.cap -w my_filtered_trace.cap host 5.5.5.5 and port 2323
```

Example

```
CLI # tcpdump
tcpdump: listening on primary
18:59:13.682568 CLI.domain.com.ssh > dhcp-22.domain.com.3277: P 3290808290:3290808342(52) ack
3412262693 win 5840 (DF) [dscp 0x10]
18:59:13.692513 CLI.domain.com.ssh > dhcp-22.domain.com.3277: P 0:52(52) ack 1 win 5840 (DF) [dscp
0x10]
18:59:13.702482 CLI.domain.com.ssh > dhcp-22.domain.com.3277: P 0:52(52) ack 1 win 5840 (DF) [dscp
0x10]
```

tracert

Executes the tracert utility for IPv4 addresses. The tracert command takes the standard Linux options.

Syntax

tracert [**<options>**]

Parameters

<options>	The tracert command takes the standard Linux options. For detailed information, see the Linux manual (man) page.
------------------------	--

Example

```
CLI > tracert CLI
tracert to CLI.domain.com (10.0.0.3), 30 hops max, 38 byte packets
1 CLI (10.0.0.3) 0.035 ms 0.021 ms 0.013 ms
```

tracert6

Executes the tracert utility for IPv6 addresses. The tracert6 command takes the standard Linux options.

Syntax

tracert6 [**<options>**]

Parameters

<type>	The tracert6 command takes the standard Linux options. For detailed information, see the Linux manual (man) page.
---------------------	---

Example

```
CLI > tracert6 CLI
tracert6 to CLI.domain.com (2001:38dc:52::e9a4:c5:6282/64), 30 hops max, 38 byte packets
```

```
1 CLI (2001:38dc:52::e9a4:c5:6282/64) 0.035 ms 0.021 ms 0.013 ms
```

Displaying System Data

This section describes the **show** commands that require you to be in enable-mode. These commands are not available in user-mode because the output can include sensitive system administration data such as passwords. This type of data is not available to monitor users; it is only available to administrator users.

Note: All the **show** commands that are available in user-mode are available in enable-mode.

show aaa

Displays the authentication methods used for log in.

Syntax

show aaa

Parameters

None

Example

```
CLI # show aaa
AAA authorization:
    Default User: admin
    Map Order: remote-first
Authentication fallback mode: always fallback
Authentication method(s): for console login
    local
Authentication method(s): for remote login
    local
Per-command authorization method(s):
    local
Per-command accounting method(s):
    local
```

show arp

Displays the contents of the Address Resolution Protocol (ARP) cache. The ARP cache includes all statically configured ARP entries, as well as any that the system has acquired dynamically.

Syntax

show arp [static]

Parameters

static	Displays static ARP addresses.
---------------	--------------------------------

Example

```
CLI # show arp
ARP cache contents
IP 10.0.0.1 maps to MAC 00:07:E9:70:20:15
IP 10.0.0.2 maps to MAC 00:05:5D:36:CB:29
```

IP 10.0.100.22 maps to MAC 00:07:E9:55:10:09

show banner

Displays the banner settings.

Syntax

show banner

Parameters

None

Example

```
CLI # show banner
Banners:
Banners:
    MOTD:
    Issue: NetApp AltaVault
    Net Issue: NetApp AltaVault
```

show configuration

Displays the current and saved configuration settings that differ from the default settings.

Syntax

show configuration

Parameters

None

Example

```
CLI # show configuration
##
## Network interface configuration
##
##
## Routing configuration
##
    ip default-gateway "10.0.0.1"
##
## Other IP configuration
##
    ip domain-list nbtttech.com
    ip domain-list netapp.com
    ip domain-list lab.nbtttech.com
    hostname "gen-at3"
    ip name-server 10.16.0.30
##
## Logging configuration
##
    logging 10.1.10.200
    logging 10.1.10.200 trap "info"
##
## General Settings
##
    replication bw-limit schedule start "08:00" end "18:00" rate 0 weekend unsche
```

```

duled
  replication provider type s3 bucket-name "yoga_foo_bar_123" hostname s3.amazo
naws.com port 443

##
## Network management configuration
##
## Miscellaneous other settings (this is a partial list of settings)

```

show configuration files

Displays the list of active and backup configuration files or the contents of a specified file.

Syntax

show configuration files [<filename>]

Parameters

<filename>	Specify a specified configuration file. The default filenames are: • initial • initial.bak • cold • working (active) • working.bak
-------------------------	---

Example

```

CLI # show configuration files initial
##
## Network interface configuration
##
<<this is a partial display>>

```

show configuration running

Displays running configuration settings that are different from the defaults.

Syntax

show configuration running [full]

Parameters

running	Displays system CLI commands to recreate current running configuration.
full	Displays all system CLI commands and does not exclude commands that set default values.

Parameters

Example

```

CLI # show configuration running
##
## Network interface configuration
##

##(displays running configuration; this is a partial list of settings.)

```

show files debug-dump

Displays a list of debug dump files.

Syntax

show files debug-dump [<filename>]

Parameters

<filename>	Displays the contents of the specified file name.
------------	---

Example

```
CLI # show files debug-dump
sysinfo-sysdump-CLI-20050725-183016.txt
sysdump-CLI-20050606-140826.tgz
```

show files process-dump

Displays a list of crash dump files.

Syntax

show files process-dump

Parameters

None

Example

```
CLI # show files process-dump
CLI-rfsd-20120119-111704.tar.gz
CLI-rfsd-20120131-165003.tar.gz
CLI-mgmt-d-20120131-173110.tar.gz
```

show files stats

Displays performance statistics files.

Syntax

show files stats

Parameters

None

Usage

You export performance statistics to files using the **stats export** command.

Example

```
CLI # show files stats
```

show files tcpdump

Displays files saved by the tcpdump utility.

Syntax

show files tcpdump

Parameters

None

Example

```
CLI # show files tcpdump
unopt.cap
big-noopt.cap
big-opt.cap
big.tgz
big-opt2.cap
```

show hardware all

Displays hardware information such as the current slot configuration.

Syntax

show hardware all

Parameters

None

Example

```
CLI # show hardware all
Hardware revision: A
Mainboard: Platform 1UABA Motherboard, 400-00100-01
Slot 0: ..... 4 Port Copper GigE Network Bypass Module, Integrated
System led: Yellow
```

show interfaces

Displays the running state settings and statistics.

Syntax

show interfaces [**<intname>**] | [**brief** | **configured**]

Parameters

<intname>	Specify the interface name. For example, lan0_0 , wan0_0 , primary , in-path0_0 , lo .
brief	Displays the running state settings without statistics.
configured	Displays configured settings for the interface.

Usage

The set of settings and statistics displayed varies when using DHCP.

Example

```
CLI # show interfaces configured
```

```
Interface primary configuration
  Enabled:          yes
  DHCP:             no
  Dynamic DNS DHCP: no
  IP address:       10.0.170.3
  Netmask:          255.255.0.0
  Speed:            auto
  Duplex:           auto
  MTU:              1500
```

show ip default-gateway

Displays the IP default gateway.

Syntax

show ip default gateway [static]

Parameters

static	Displays the static default gateway.
---------------	--------------------------------------

Example

```
CLI # show ip default-gateway static
Configured default gateway: 10.0.0.1
```

show ip route

Displays active routes, both dynamic and static.

Syntax

show ip route [static]

Parameters

static	Displays configured static routes.
---------------	------------------------------------

Example

```
CLI # show ip route static
Destination      Mask           Gateway
default          0.0.0.0        10.0.0.4
```

show job

Displays the status of a scheduled job.

Syntax

show job <job-id>

Parameters

<job-id>	Specify the job identification number.
-----------------------	--

Example

```
CLI # show job 10
job {job_id}: 10
Status: pending
Name: myjob
Comment: this is a text
Absolute range:
Commands:
show info.
show connections.
show version.
```

show jobs

Displays a list of all jobs.

Syntax**show jobs****Parameters**

None

Example

```
CLI # show jobs
% No jobs configured.
```

show license

Displays installed (active) licenses.

Syntax**show license****Parameters**

None

Example

```
CLI # show license
Local: XXX-XXXX-XXXX-XXXX-X-XXXX-XXXX-XXXX
  Index:      1
  Feature:    VLAB
  Valid:      yes
  Active:     yes
  Start date:
  End date:
```

show licenses

Displays installed (active) licenses.

Syntax**show licenses [capacity]****Parameters****capacity** Report the total cloud capacity.**Example**

```
CLI # show licenses
License:
AVAPAVAV_2_4_0G03242016E03252017S123459DSMC0CFQCQVfUNnvgXumR2ipbDs/E3a7GMLAIUJLicFjc8dO2XPK3DL/
k8jDG1Aw4=
  Active:      true
  Serial Number: 123459
  Software version: 4
  Generation Date: 2016/03/24
  Expiration Date: 2017/03/25
```

```
CLI # show licenses capacity
Licensed Capacity: 11.00 TB (10.00 TiB)
```

show log

Displays the system logs.

Syntax

show log [**continuous** | **files** <log number> | **reverse** | **matching**]

Parameters

continuous	Displays the log continuously, similar to the Linux tail -f command.
files <log number>	Displays a list of log files or a specific log file.
reverse	Displays the log information, in reverse order, with the latest entry at the top.
matching	Displays a list of matching log files.

Example

```
CLI # show log
May 22 20:00:00 localhost /usr/sbin/crond[784]: (root) CMD (/usr/sbin/logrotate /etc/
logrotate.conf)
May 22 20:00:00 localhost cli[555]: [cli.INFO]: user admin: CLI got signal 2 (SIGINT)
May 22 20:02:31 localhost cli[555]: [cli.INFO]: user admin: Executing command: show ip route
May 22 20:02:38 localhost cli[555]: [cli.INFO]: user admin: CLI got signal 2 (SIGINT)
Dec 22 20:03:16 localhost cli[555]: [cli.INFO]: user admin: CLI got signal 2 (SIGINT)
May 22 20:04:00 localhost cli[555]: [cli.INFO]: user admin: Executing command: show ip route static
May 22 20:05:02 localhost cli[555]: [cli.INFO]: user admin: Executing command: show licenses
Dec 22 20:05:09 localhost cli[555]: [cli.INFO]: user admin: CLI got signal 2 (SIGINT)
May 22 20:06:44 localhost cli[555]: [cli.INFO]: user admin: Executing command: show limit bandwidth
May 22 20:06:49 localhost cli[555]: [cli.INFO]: user admin: CLI got signal 2 (SIGINT)
May 22 20:07:12 localhost cli[555]: [cli.INFO]: user admin: Executing command: show log
```

show radius

Displays RADIUS configuration settings.

Syntax

show radius

Parameters

None

Example

```
CLI # show radius
RADIUS defaults:
  key:
  timeout: 3
  retransmit: 1
No RADIUS servers configured.
```

show remote ip

Displays the current IP network settings for the remote management port.

Syntax

show remote ip

Parameters

None

Example

```
CLI # show remote ip
```

show running-config

Displays the running configuration settings that differ from the defaults.

Syntax

show running-config [full]

Parameters

full	Displays all settings, including those set to the default value.
-------------	--

Example

```
CLI # show running-config
(displays running configuration)
```

show stats memory

Displays memory statistics for the time period specified.

Syntax

show stats memory <1min | 5min | hour | day | week | month>

Parameters

1min	Displays memory statistics for the last 1 minute.
5min	Displays memory statistics for the last 5 minutes.
hour	Displays memory statistics for the last hour.
day	Displays memory statistics for the last day.
week	Displays memory statistics for the last week.
month	Displays memory statistics for the last month.

Example

```
CLI # show stats memory
Total Swapped for Last hour:    60 Pages
Average Swapped for Last hour:  0 Pages per 10 Seconds
Peak Swapped for Last hour:     60 Pages over 5 Seconds
Peak Swapped Time:              2012/08/06 10:57:20
```

show tacacs

Displays TACACS+ settings.

Syntax

show tacacs

Parameters

None

Example

```
CLI # show tacacs
No tacacs settings.
```

show userlog

Displays current user log file in a scrollable page.

Syntax

show userlog [**continuous** | **files** <file number>]

Parameters

continuous	Displays new user log messages as they occur.
files <file number>	Displays archived user log files.

Example

```
CLI # show userlog
Mar 14 12:20:05 gen-at3 webasd[4703]: [web.INFO]: web: User admin viewing setupC
louds page.
Mar 14 12:20:09 gen-at3 mgmtd[3839]: [mgmtd.NOTICE]: Service restart required.
Mar 14 12:20:27 gen-at3 webasd[4703]: [web.INFO]: web: User admin viewing setupC
louds page.
Mar 14 12:20:34 gen-at3 last message repeated 2 times
Mar 14 12:20:37 gen-at3 mgmtd[3839]: [mgmtd.NOTICE]: Service restart required.
Mar 14 12:20:38 gen-at3 mgmtd[3839]: [mgmtd.NOTICE]: Cloud connection check succ
essful.
Mar 14 12:20:38 gen-at3 webasd[4703]: [web.INFO]: web: User admin viewing setupC
louds page.
Mar 14 12:21:04 gen-at3 last message repeated 3 times
Mar 14 12:21:07 gen-at3 webasd[4703]: [web.INFO]: web: User admin viewing setupA
ppliance_upgrade page.
Mar 14 12:21:08 gen-at3 webasd[4703]: [web.INFO]: web: User admin viewing setupA
ppliance_upgrade page.
Mar 14 12:21:58 gen-at3 cli[32670]: [cli.NOTICE]: user admin: CLI launched for u
ser admin and rbm admin
Mar 14 12:22:02 gen-at3 cli[32670]: [cli.INFO]: user admin: Executing command: e
nable
Mar 14 12:22:06 gen-at3 cli[32670]: [cli.INFO]: user admin: Executing command: s
how userlog
<<this is partial display>>
```

show usernames

Displays a list of user accounts.

Syntax

show usernames <user name> **detailed**

Parameters

None

Example

```
CLI # show usernames
```

User	Expire	Lock	Login Failures	Comment
@admin	Never	Never	0	
-monitor	N/A	N/A	N/A	
rpc	Never	Never	0	

```

@ = current user, * = also logged in, - = disabled,
! = locked out due to failed logins
```

show usernames <user name> detailed

Displays detailed user account information.

Syntax

show usernames <user name> detailed

Parameters

None

Example

```
CLI # show usernames admin detailed
```

```
User admin details
```

Current User:	Yes
Logged In:	Yes
Disabled:	No
Password Expired:	Never
Account Locked:	Never
Login Failure Lock Out:	No
Login Failure Count:	0
Last Login Failure:	None
Comment:	

CHAPTER 4 Configuration-Mode Commands

This section is a reference for configuration-mode commands. It includes the following sections:

- [“Entering Configuration Mode Commands” on page 53](#)
- [“System Administration Commands” on page 54](#)
- [“AltaVault Appliance Feature Configuration Commands” on page 125](#)
- [“Displaying System Data” on page 184](#)
- [“Entering KMIP commands” on page 202](#)

You can perform configuration tasks while in configuration mode. Only administrator users can perform configuration mode and enable mode commands. All commands available in user mode and enable mode are also available in configuration mode. Monitor users cannot perform configuration tasks.

Entering Configuration Mode Commands

You need to connect to the CLI to enter configuration mode commands.

To enter configuration mode

1. Connect to the CLI and enter the following commands:

```
login as: admin
NetApp AltaVault
Last login: Fri Feb 24 12:21:43 2012 from 10.35.64.136
CLI > enable
CLI # configure terminal
CLI (config) #
```

You are now in configuration mode.

To exit configuration mode, enter **exit**. For information about the **exit** command, see [“exit” on page 9](#).

NetApp strongly recommends that you do not use the CLI to perform AltaVault configuration tasks. NetApp recommends that you use the AltaVault Management Console to perform configuration, system administration, and system reporting and monitoring tasks.

For an alphabetical list of commands, see the Index at the end of this book.

System Administration Commands

This section describes commands you use to perform system administration tasks. It includes the following commands:

- [“Alarm Commands” on page 54](#)
- [“Displaying Role-Based Management Configuration Settings” on page 58](#)
- [“AAA, Role-Based Management, Radius, and TACACS+ Commands” on page 59](#)
- [“Account Control Management Commands” on page 68](#)
- [“ACL Management Commands” on page 74](#)
- [“Secure Shell Access Commands” on page 77](#)
- [“CLI Terminal Configuration Commands” on page 81](#)
- [“Web Configuration Commands” on page 83](#)
- [“Configuration File Commands” on page 92](#)
- [“Notification Commands” on page 98](#)
- [“SNMP Commands” on page 101](#)
- [“Logging Commands” on page 109](#)
- [“License and Hardware Upgrade Commands” on page 114](#)
- [“System Administration and Service Commands” on page 115](#)
- [“Host Setup Commands” on page 117](#)
- [“Virtual Interface \(VIF\) Configuration Command” on page 123](#)

Alarm Commands

This section describes the commands to configure alarm settings.

alarm clear

Clears the specified alarm type.

Syntax

alarm <type> clear

Parameters

<type> See the [“alarm enable”](#) command for a complete list and description of alarm types.

Usage

Use this command to clear the status of the specified alarm type. If you clear an alarm and the error condition still exists, the alarm might be triggered again immediately. If you need to clear an alarm permanently, use the **no alarm enable** command.

Example

```
CLI (config) # alarm secure_vault_unlocked clear
```

alarm clear-threshold

Sets the threshold to clear the specified alarm type.

Syntax

[no] alarm <type> clear-threshold <threshold level>

Parameters

<type>	See the “ alarm enable ” command for a complete list and description of alarm types.
<threshold level>	Specify the threshold level. The threshold level depends on the alarm type, as do the possible values.

Usage

Use this command to set the threshold at which the alarm is cleared.

The **no** command option resets the clear threshold to the default level.

Example

```
CLI (config) # alarm cpu_util_indiv clear-threshold 70
```

alarm enable

Enables the specified alarm.

Syntax

[no] alarm <type> enable

Parameters

-
- <type>**
- **admission_control** - This alarm occurs when the AltaVault reaches admission control, which limits the number of connections made to the AltaVault so that you do not over-consume resources on your system. This alarm clears when the AltaVault moves out of this condition. By default, this alarm is enabled. Do not disable this alarm.
 - **avg_evicted_age** - This alarm occurs when the average evicted age decreases below a certain threshold. This happens when the AltaVault experiences such a huge workload that more and more recent data has to be evicted from the appliance to make space for incoming data. This is an anomalous event indicating that the appliance is handling a much larger workload than expected. The alarm is useful in detecting whether the appliance is undersized relative to the your normal workload. If the alarm is constantly triggered, then you should consider moving your data to a larger AltaVault model with a larger disk cache.
 - **cpu_util_indiv** - This alarm indicates whether the system has reached the CPU threshold for any of the CPUs in the system. If the system has reached the CPU threshold, check your settings. If your alarm thresholds are correct, reboot the AltaVault.
 - **critical_temp** - This alarm indicates that the CPU temperature has exceeded the critical threshold. The default value for the rising threshold temperature is 80° C; the default reset threshold temperature is 70° C.
 - **dirty_cloud** - This alarm indicates that there is data in the cloud although the AltaVault data store is empty. Enable replication and recovery to ensure that the cloud storage is synchronized with the data store.
 - **fan_error** - This alarm indicates that the system has detected a fan error.
 - **flash_error** - This alarm indicates that the system has detected an error with the flash drive hardware.
 - **fs_mnt** - This alarm indicates that one of the mounted partitions is full or almost full. The alarm is triggered when only 7% of free space is remaining.
 - **hardware** - This alarm indicates the overall health of the hardware.
 - **ipmi** - This alarm indicates that the system has detected an Intelligent Platform Management (IPMI) Interface event. This alarm is not supported on all appliance models.
 - **license** - This alarm is the parent licensing alarm and triggers if any of the license_expired, license_expiring, or appliance_unlicensed alarms are active.
 - **license_expired** - This alarm triggers if any feature has at least one license installed, but all of them are expired.
 - **license_expiring** - This alarm triggers if one or more features is going to expire within two weeks.
 - **link_duplex** - This alarm triggers when an interface is not configured for half-duplex negotiation but has negotiated half-duplex mode. Half-duplex significantly limits the optimization service results. This alarm is enabled by default.
 - **link_io_errors** - This alarm triggers when the link error rate exceeds 0.1% while either sending or receiving packets. This threshold is based on the observation that even a small link error rate reduces TCP throughput significantly. A properly configured LAN connection should experience very few errors. The alarm clears when the rate drops below 0.05%. This alarm is enabled by default.
 - **linkstate** - This alarm indicates that the system has detected a link that is down. The system notifies you through SNMP traps, email, and alarm status. By default, this alarm is not enabled. The **no alarm linkstate enable** command disables the link state alarm.
 - **paging** - This alarm indicates whether the system has reached the memory paging threshold. If 100 pages are swapped approximately every two hours, the AltaVault is functioning properly. If thousands of pages are swapped every few minutes, then reboot the system. If rebooting does not solve the problem, contact NetApp Support.
-
- **power_supply** - This alarm indicates that an inserted power supply cord does not have power, as opposed to a power supply slot with no power supply cord inserted.

- **raid_disk_indiv** - This alarm indicates that the system has encountered RAID errors (for example, missing drives, pulled drives, drive failures, and drive rebuilds). For drive rebuilds, if a drive is removed and then reinserted, the alarm continues to be triggered until the rebuild is complete. Rebuilding a disk drive can take 4-6 hours.
- **replication** - This alarm indicates that the replication to the cloud encounters an error. It displays an error message that indicates the type of error such as, a file cannot be replicated to the cloud.
- **replication_error** - This alarm indicates that there was an error in the replication process. The system automatically retries the replication process. Contact your cloud service provider or NetApp Support.
- **replication_pause** - This alarm indicates that replication has paused because there is a cloud connection error, or because you entered the CLI command **no replication enable**, or because you are using replication scheduling (non-bandwidth limit type). This alarm warns you that the AltaVault is not replicating data in the cloud. By default, this alarm is enabled.
- **secure_vault** - This alarm indicates a general secure vault error.
- **secure_vault_unlocked** - This alarm indicates whether the secure vault is unlocked. When the vault is unlocked, you cannot encrypt a data store.
- **service_error** - This alarm cannot be disabled. It indicates that the system has detected a software error in the storage optimization service. The AltaVault service continues to function, but an error message stating that you should investigate this issue appears in the logs.
- **sticky_staging_dir** - This alarm indicates that the system has detected an error while trying to create a process dump.
- **temperature** - This alarm is the parent temperature alarm and triggers if any of the warning_temp or critical_temp alarms are active.
- **warning_temp** - This alarm indicates whether the CPU temperature has exceeded the warning threshold. The default value for the rising threshold temperature is 80° C; the default reset threshold temperature is 70° C.

Usage

Enabling alarms is optional.

Critical temperature settings cannot be changed. Warning temperature settings can be changed.

The **no** command option disables all statistical alarms. The **no alarm <type> enable** command disables specific statistical alarms.

Example

```
CLI # alarm secure_vault enable
```

alarm error-threshold

Sets a threshold to trigger an alarm.

Syntax

```
[no] alarm <type> error-threshold <threshold level>
```

Parameters

<type>	See the “ alarm enable ” command for a complete list and description of alarm types.
<threshold level>	Specify the threshold level. The threshold level and possible values depend on the alarm type.

Usage

The **no** version of the command resets the threshold to the default level.

Example

```
CLI (config) # alarm cpu_util_indiv error-threshold 80
```

alarm rate-limit

Sets the alarm rate-limit values.

Syntax

alarm <type> rate-limit [email | snmp] term {long | medium | short} {count <value> | window <duration-seconds>}

Parameters

<type>	See the “ alarm enable ” command for a complete list and description of alarm types.
email	Sets rules for email.
snmp	Sets rules for SNMP.
term {long medium short}	Sets the alarm event rate-limit term value. Valid choices are: • long • medium • short
count <value>	Sets the count value. The default values are 50 (long), 20 (medium), and 5 (short).
window <duration-seconds>	Sets the duration of time, in seconds, that the window remains open. The default values are 604,800 (long), 86,400 (medium), and 3600 (short).

Usage

There are three term values—long, medium, and short. Each has a window, which is a number of seconds, and a maximum count. If, for any term value, the number of alarm events exceeds the maximum count during the window, the corresponding email/SNMP notifications are not sent.

Example

```
CLI (config) # alarm crl_error rate-limit email term short window 30
```

alarms reset-all

Resets all alarms configured on the appliance to their default settings.

Syntax

alarms reset-all

Parameters

None

Example

```
CLI (config) # alarms reset-all
```

Displaying Role-Based Management Configuration Settings

This section describes the commands to display role-based management settings.

The following commands are available in configuration mode and enable mode. You must have administrator permissions to display these system settings.

show rbm user

Displays user configuration.

Syntax

show rbm user <username>

Parameters

<username>	Specify the user name.
-------------------------	------------------------

Example

```
CLI (config) # show rbm user helpdesk
```

show rbm users

Displays user configuration for all users.

Syntax

show rbm users

Parameters

None

Example

```
CLI (config) # show rbm users
```

AAA, Role-Based Management, Radius, and TACACS+ Commands

This section describes the AAA, role-based management, Radius, and TACACS+ commands. The AltaVault supports authentication and authorization.

aaa accounting per-command default

Configures per-command account settings.

Syntax

[no] aaa accounting per-command default <method>

Parameters

<method>	Specify the authentication method: tacacs+ or local . Use a space-separated list.
-----------------------	---

Usage

The AltaVault performs accounting based on the order in which you specify the methods.

The **no** command option clears all accounting states and returns the per-command accounting to the local method (local logs).

Example

```
CLI (config) # aaa accounting per-command default tacacs+ local
```

aaa authentication cond-fallback

Configures fall-back only if the server is unavailable.

Syntax

[no] aaa authentication cond-fallback

Parameters

None

Usage

If you enable this command, the AltaVault tries the next authentication method, but only if the servers for the current authentication method are unavailable.

The **no** command option disables fall-back mode.

Example

```
CLI (config) # aaa authentication cond-fallback
```

aaa authentication console-login default

Configures local, RADIUS, or TACACS+ console settings for log in.

Syntax

aaa authentication console-login default <method>

Parameters

<method>	Specify the authentication method: radius , tacacs+ , or local . Use a space-separated list.
-----------------------	---

Usage

The AltaVault performs authentication based on the order in which you specify the methods.

The **no** command option clears all authentication states and returns user authentication to the local user name database.

Example

```
CLI (config) # aaa authentication console-login default radius tacacs+ local
```

aaa authentication login default

Configures local, RADIUS, or TACACS+ login settings.

Syntax

[no] aaa authentication login default <method>

Parameters

<method>	Specify the authentication method: radius , tacacs+ , or local . Use a space-separated list.
-----------------------	---

Usage

The AltaVault performs authentication based on the order in which you specify the methods.

The **no** command option clears all authentication states and returns user authentication to the local user name database.

Example

```
CLI (config) # aaa authentication login default radius tacacs+
```

aaa authorization map default-user

Configures what local user the authenticated user will be logged in as when they are authenticated (through RADIUS or TACACS+) and when they do not have a local user mapping specified in the remote database.

Syntax

[no] aaa authorization map default-user <user_name>

Parameters

<user_name>	Specify the user name for RADIUS or TACACS+ authentication: admin or monitor .
--------------------------	--

Usage

For the local authentication method, this setting is ignored. This mapping depends on the setting of the **aaa authorization map order** command.

The **no** command option disables user default mapping.

Example

```
CLI (config) # aaa authorization map default-user admin
```

aaa authorization map order

Sets the order for remote-to-local user mappings for RADIUS or TACACS+ server authentication.

Syntax

[no] aaa authorization map order <policy>

Parameters

<policy>	Specify the order in which to apply the authentication policy: remote-only , remote-first , or local-only .
-----------------------	--

Usage

The mapping order determines how the remote user mapping behaves. If the authenticated user name is valid locally, AltaVault does not perform any mapping. The setting has the following behaviors:

- **remote-first** - If a local-user mapping attribute is returned and it is a valid local user name, map the authenticated user to the local user specified in the attribute. If the attribute is not present or not valid locally, use the user name specified by the default-user command. (This is the default behavior.)
- **remote-only** - Map only to a remote authenticated user if the authentication server sends a local-user mapping attribute. If the attribute does not specify a valid local user, no further mapping is attempted.
- **local-only** - All remote users are mapped to the user specified by the **aaa authorization map default-user <user_name>** command. Any vendor attributes received by an authentication server are ignored.

To set TACACS+ authorization levels (**admin** and **read-only**) to enable certain members of a group to log in, add the following attribute to **users** on the TACACS+ server:

```
service = rbt-exec {
    local-user-name = "monitor"
}
```

where you replace **monitor** with **admin** for write access.

To turn off general authentication in the AltaVault, enter the following command at the system prompt:

```
aaa authorization map order remote-only
```

The **no** command option disables authentication.

Example

```
CLI (config) # aaa authorization map order remote-only
```

aaa authorization per-command default

Configures authorization mapping settings.

Syntax

[no] aaa authorization per-command default <method>

Parameters

<method>	Specify the authentication method: tacacs+ or local . Use a space-separated list.
-----------------------	---

Usage

The order in which the methods are specified is the order in which the authorization is attempted.

The **no** command option clears all authorization states and returns the user authorization to the local user name database.

Example

```
CLI (config) # aaa authorization per-command default tacacs+ local
```

radius-server host

Adds a RADIUS server to the set of servers used for authentication.

Syntax

[no] radius-server host {<ip-addr> | auth-port <port> | timeout <seconds> | retransmit <retries> | key <string>}

Parameters

<ip-addr>	Specify the date and time (year, month, day, hour, minutes, and seconds).
auth-port <port>	Specify the authentication port number to use with this RADIUS server. The default value is 1812.
auth-type <type>	Specify the authentication type to use with this RADIUS server. • chap - Specify the challenge handshake authentication protocol (CHAP), which provides better security than PAP. • pap - Specify the password authentication protocol (PAP).
timeout <seconds>	Specify the time-out period to use with this RADIUS server.
retransmit <retries>	Specify the number of times the client attempts to authenticate with any RADIUS server. The default value is 1. The range is 0-5. To disable retransmissions, set it to 0.
key <string>	Specify the shared secret text string used to communicate with this RADIUS server. • 0 - Specify a shared secret to use with this RADIUS server. • 7 - Specify a RADIUS key with an encrypted string.

Usage

RADIUS servers are tried in the order they are configured.

The same IP address can be used in more than one **radius-server host** command if the **auth-port** value is different for each. The **auth-port** value is a UDP port number. The **auth-port** value must be specified immediately after the **host <ip-addr>** option (if present).

Some parameters override the RADIUS server global defaults. For detailed information, see the *NetApp AltaVault Cloud Integrated Storage Deployment Guide*.

The **no** command option stops sending RADIUS authentication requests to the host.

If **no radius-server host <ip-addr>** is specified, all radius configurations for the host are deleted.

The **no radius-server host <ip-addr> auth-port <port>** command can be specified to refine which host is deleted, as the previous command deletes all RADIUS servers with the specified IP address.

Example

```
CLI (config) # radius-server host 10.0.0.1 timeout 10 key XXXX retransmit 3
```

radius-server key

Sets the shared secret text string used to communicate with a RADIUS server.

Syntax

[no] radius-server key <string>

Parameters

<string>	Sets the shared secret text string used to communicate with a RADIUS server.
----------	--

Usage

This command can be overridden using the **radius-server host** command.

The **no** command option resets the key to the default value.

Example

```
CLI (config) # radius-server key XYZ
```

radius-server retransmit

Specify the number of times the client attempts to authenticate with a RADIUS server.

Syntax

[no] radius-server retransmit <retries>

Parameters

<retries>	Specify the number of times the client attempts to authenticate with a RADIUS server. The range is 0-5. The default value is 1.
-----------	---

Usage

This command can be overridden in a **radius-server host** command.

The **no** command option resets the value to the default value.

Example

```
CLI (config) # radius-server retransmit 5
```

radius-server timeout

Sets the time-out period, in seconds, for retransmitting a request to a RADIUS server.

Syntax

[no] radius-server timeout <seconds>

Parameters

<seconds>	Sets the time-out for retransmitting a request to a RADIUS server. The range is 1-60. The default value is 3.
-----------	---

Usage

This command can be overridden in a **radius-server host** command.

The **no** command option resets the value to the default value.

Example

```
CLI (config) # radius-server timeout 30
```

rbm user

Assigns a role (that is, a feature set) to a user. A user can be associated with one or more roles.

Syntax

[no] **rbm user** <username> role <role> permissions <permissions>

Parameters

<username>	Specify the user name.
role <role>	Specify a role-based management type: • cb_general_settings - Specify user permissions for general settings. • cb_prepop_settings - Specify user permissions for prepopulation settings. • cb_replication_settings - Specify user permissions for replication settings. • cb_reports_settings - Specify user permissions for reports settings. • cb_security_settings - Specify user permissions for security settings, including RADIUS and TACACS authentication settings and secure vault password. • cb_storage_settings - Specify user permissions for storage settings.
permissions <permissions>	You can also create users, assign passwords to the user, and assign varying configuration roles to the user. A user role determines whether the user has permission to: • read-only - With read privileges you can view current configuration settings but you cannot change them. • read-write - With write privileges you can view settings and make configuration changes for a feature. • deny - With deny privileges you cannot view settings or make configuration changes for a feature.

Usage

The **no** command option enables for the deletion of a role. Only users with administrative privileges can execute the **rbm user** command.

General Settings

You can assign users permissions to configure the following General Settings:

- Software upgrades
- Licenses
- Email, SNMP settings, and Web settings.
- Hardware RAID settings
- Raidgroup settings
- Starting and stopping the storage optimization service

You can assign users permissions to configure the following network-related General Settings:

- IP and DNS
- Routing
- Hostname
- Virtual interfaces
- Firewall
- Interface statistics

You can assign users permissions to configure the following actionable diagnostic General Settings:

- System logs
- Accessing system dumps and process dumps
- Debugging commands such as the alarm command
- Tcpdumps

Prepopulation Settings

You can assign users permissions for the following Prepopulation Settings:

- Access to prepopulation page in the AltaVault Management Console

- View the prepopulation file browser
- Initiate prepopulation jobs from the Management Console and the command line interface
- Track the status of prepopulation jobs

Replication Settings

You can assign users permissions to configure the following Replication Settings:

- Cloud configuration
- Replication settings
- Prepopulation
- Starting and stopping the storage optimization service.

Report Settings

You can assign users permissions to configure the following read-only Report Settings:

- Temperature
- Interface statistics
- Health
- Alarm Status
- View report graphs and statistics

Security Settings

You can assign users permissions to configure the following Security Settings:

- RADIUS
- TACACS
- FIPS
- Secure vault
- Import, export, generate, and reset encryption key
- Import
- Export

Storage Settings

You can assign users permissions to configure the following Storage Settings:

- SMB
- OST
- NFS

Example

```
CLI (config) # rbm user helpdesk role general_settings permissions read-only
```

share-stats generate

Generates a share utilization report email.

Syntax

share-stats generate [<num-threads>]

Parameters

<num-threads>	Specify the number of threads to scan the shares.
---------------	---

Usage

This command is used to generate share statistics.

Example

```
CLI (config) # share-stats generate
```

tacacs-server first-hit

Enables a first-hit option for TACACS+ servers.

Syntax

```
[no] tacacs-server first-hit <ip-addr>
```

Parameters

<ip-addr>	Specify the TACACS+ server IP address.
-----------	--

Usage

TACACS+ servers are tried in the order they are configured. If this option is enabled, only the first server in the list of TACACS+ servers is queried for authentication and authorization purposes.

The **no** command option disables TACACS+ first-hit option.

Example

```
CLI (config) # tacacs-server first-hit 10.0.0.1
```

tacacs-server host

Adds a TACACS+ server to the set of servers used for authentication.

Syntax

```
[no] tacacs-server host {<ip-addr> <cr> | auth-port <port> | auth-type <type> | timeout <seconds> | retransmit <retries> |  
key <string> | key 0 | key 7}}
```

Parameters

<ip-addr>	Specify the TACACS+ server IP address.
auth-port <port>	Specify the authorization port number. The default value is 49.
auth-type <type>	Specify the authorization type to use with this TACACS+ server: ascii, pap.
timeout <seconds>	Sets the time-out for retransmitting a request to any TACACS+ server. The range is 1-60. The default value is 3.
retransmit <number>	Specify the number of times the client attempts to authenticate with any TACACS+ server. The default value is 1. The range is 0-5. To disable retransmissions set it to 0.
key <keynumber> key 0 key 7	Specify the shared secret text string used to communicate with this TACACS+ server. • 0 - Specify a shared secret to use with this RADIUS server. • 7 - Specify a TACACS+ key with an encrypted string.

Usage

TACACS+ servers are tried in the order they are configured.

The same IP address can be used in more than one **tacacs-server host** command if the **auth-port** value is different for each. The **auth-port** value is a UDP port number. The **auth-port** value must be specified immediately after the **hostname** option (if present). Some of the parameters given can override the configured global defaults for all TACACS+ servers. For detailed information, see the *NetApp AltaVault Cloud Integrated Storage Deployment Guide*.

If **no tacacs-server host <ip-addr>** is specified, all TACACS+ configurations for this host are deleted. The **no tacacs-server host <ip-addr> auth-port <port>** command can be specified to refine which host is deleted, as the previous command deletes all TACACS+ servers with the specified IP address.

The **no** command option disables TACACS+ support.

Example

```
CLI (config) # tacacs-server host 10.0.0.1
```

tacacs-server key

Sets the shared secret text string used to communicate with any TACACS+ server.

Syntax

[no] tacacs-server key <string>

Parameters

<string>	Sets the shared secret text string used to communicate with any TACACS+ server.
----------	---

Usage

The **tacacs-server key** command can be overridden using the **tacacs-server host** command. The **no** command option resets the value to the default value.

Example

```
CLI (config) # tacacs-server key XYZ
```

tacacs-server retransmit

Configures the number of times the client attempts to authenticate with any TACACS+ server.

Syntax

[no] tacacs-server retransmit <retries>

Parameters

<retries>	Specify the number of times the client attempts to authenticate with any TACACS+ server. The range is 0-5. The default value is 1. To disable retransmissions set it to 0.
-----------	--

Usage

The **tacacs-server retransmit** command can be overridden in a **tacacs-server host** command.

The **no** command option resets the value to the default value.

Example

```
CLI (config) # tacacs-server retransmit 5
```

tacacs-server timeout

Sets the time-out period for retransmitting a request to any TACACS+ server.

Syntax

[no] tacacs-server timeout <seconds>

Parameters

<seconds>	Sets the time-out for retransmitting a request to any TACACS+ server. The range is 1-60. The default value is 3.
-----------	--

Usage

This command can be overridden with the **tacacs-server host** command.

The **no** command option resets the value to the default value.

Example

```
CLI (config) # tacacs-server timeout 30
```

Account Control Management Commands

This section describes the Account Control Management commands.

username disable

Disables the account so that no one can log in.

Syntax

[no] username <userid> disable

Parameters

<userid>	Specify the user login: admin or monitor .
-----------------------	--

Usage

The **no** command option re-enables the specified user account.

Example

```
CLI (config) # username monitor disable
```

username password 0

Sets the password for the specified user.

Syntax

username <userid> password 0 <cleartext password>

Parameters

<userid>	Specify the user login: admin or monitor .
<cleartext password>	Specify the password. The password must be at least 6 characters.

Usage

The password is entered in cleartext format on the command line.

Example

```
CLI (config) # username admin password 0 xyzzzZ
```

username password 7

Sets the password for the specified user using the encrypted format of the password. Use this command if it becomes necessary to restore your appliance configuration, including the password.

Syntax

username <userid> password 7 <encrypted password>

Parameters

<userid>	Specify the user login: admin or monitor .
<encrypted password>	Specify the encrypted password. The password must be at least 6 characters.

Usage

Use this command to restore your password using an encrypted version of the password. You can display the encrypted version of the password using the **show running configuration** command.

For example, executing **username monitor password awesomepass** results in the following line being added to the running configuration file:

```
username monitor password 7 $1$f2Azp8N8$n0oy6Y1KhCfuMo93f24ku/
```

If you need to restore your password in the future, you would paste the following command in the CLI (which restores your monitor password to **awesomepass**):

```
username monitor password 7 $1$f2Azp8N8$n0oy6Y1KhCfuMo93f24ku/
```

Example

```
CLI (config) # username admin password 7 $1$f2Azp8N8$n0oy6Y1KhCfuMo93f24ku/
```

username password

Sets the password for the specified user.

Syntax

username <userid> [nopassword | password <password>] [old-password <password>] gecos <gecos information> comment <string> disable

Parameters

<userid>	Specify the user login: admin or monitor
nopassword	Enables the user to log in without a password.
<password>	Specify the password. The password must be at least six characters.
old-password	Specify the old password.
gecos <gecos information>	Specify the geccos information for the user. Gecos information is general information stored in the /etc/passwd file. This information is not used by the system. The type of information you store in this field is up to you. You can store information such as the user's full name, phone number, and office number.
comment	Specify a comment for this user.
disable	Disables the user account.

Usage

The password is entered in clear text format on the command line.

The **old-password** option enables you to check the minimum character difference between the old and new passwords under account control management.

Example

```
CLI (config) # username admin password xyzzzZ
```

authentication policy enable

Enables the authentication policy for account control.

Syntax

[no] authentication policy enable

Parameters

None

Usage

An authentication policy enables you to define a set of policies to enforce user login behavior as well as password strength. Passwords are mandatory when account control is enabled.

After you enable the authentication policy, the current passwords for all users expire. At the next login, each user is prompted to change their password and the new password is now under the account control authentication policy.

Example

```
CLI (config) # authentication policy enable
```

authentication policy login max-failures

Sets the maximum number of unsuccessful login attempts before temporarily blocking the user's access to the AltaVault.

Syntax

authentication policy login max-failures <count> [unlock-time <seconds>]

no authentication policy login max-failures

Parameters

<count>	Specify the date and time (year, month, day, hour, minutes, and seconds).
unlock-time <seconds>	Specify the number of seconds the system waits before the user can log in again after an account lockout.

Usage

The **no authentication policy login max-failures** command resets the maximum number of unsuccessful login attempts allowed to the default value.

Example

```
CLI (config) # authentication policy login max-failures 3
```

authentication policy password

Configures the authentication policy password settings for account control.

Syntax

[no] authentication policy password {change-days <days> | dictionary enable | difference <count> | expire <days> [warn] | length <length> | lock <days> | lower-case <count> | numeric <count> | repeat <count> | reuse-interval <count> | special <count> | upper-case <count>}

Parameters

change-days <days>	Specify the minimum number of days before which you cannot change the password.
dictionary enable	Prevent the use of passwords found in the dictionary.
difference <count>	Specify the minimum number of characters that need to change between an old and new password.
expire <days>	Specify the number of days the current password stays in effect.
warn <days>	Specify the number of days to warn a user of an expiring password before the password expires.
length <length>	Specify the minimum password length.
lock <days>	Specify the number of days before an account with an expired password locks.
lower-case <count>	Specify the minimum number of lower-case letters required in the password.
numeric <count>	Specify the minimum number of numeric characters required in the password.
repeat <count>	Specify the minimum number of times that a character can be repeated consecutively.
reuse-interval <count>	Specify the number of password changes allowed before a password can be reused.
special <count>	Specify the minimum number of special characters required in the password.
upper-case <count>	Specify the minimum number of upper-case letters required in the password.

Usage

Passwords are mandatory when account control is enabled. Passwords for all users expire as soon as account control is enabled. This behavior forces the user to create a new password that follows the password characteristics defined in the password policy. Empty passwords are not allowed when account control is enabled.

Example

```
CLI (config) # authentication policy password expire 60 warn 3
```

authentication policy template

Specify the authentication policy template for policy configuration.

Syntax

authentication policy template {federal | default}

Parameters

federal	Specify the federal security requirements template.
default	Specify the default template.

Usage

The **authentication policy template federal** command automatically prepopulates the template with settings in accordance with Department of Defense policy.

To remove a federal security template and return to the default password policy, use the **authentication policy template default** command.

When account control is enabled for the first time, the password policy is set to the default template.

Example

```
CLI (config) # authentication policy template federal
```

```

CLI # show authentication policy
Authentication policy enabled: yes
Maximum unsuccessful logins before account lockout: 3
    Wait before account unlock: 300 Seconds
Minimum password length: 14
Minimum upper case characters in password: 1
Minimum lower case characters in password: 1
Minimum numerical characters in password: 1
Minimum special characters in password: 1
Minimum interval for password reuse: 5
Minimum characters diff for password change: 4
Prevent dictionary words in password: yes
User passwords expire: 60 days
Warn user of an expiring password: 7 days before
User accounts with expired passwords lock: 305 days

```

```
CLI (config) # authentication policy template default
```

```

CLI # show authentication policy
Authentication policy enabled: yes
Maximum unsuccessful logins before account lockout: none
    Wait before account unlock: 300 Seconds
Minimum password length: 6
Minimum upper case characters in password: 0
Minimum lower case characters in password: 0
Minimum numerical characters in password: 0
Minimum special characters in password: 0
Minimum interval for password reuse: 0
Minimum characters diff for password change: 0
Prevent dictionary words in password: yes
User passwords expire: never
Warn user of an expiring password: 7 days before
User accounts with expired passwords lock: never

```

authentication policy user lock never

Configures the user account lock settings for account control management.

Syntax

[no] authentication policy user <username> lock never

Parameters

<username>	Specify the user login: admin , monitor , or shark .
-------------------------	---

Usage

The **authentication policy user lock never** command prevents the user's account from being locked after the password expires. This command is only available when account control is enabled.

The **no authentication policy user lock never** command enables the user account to be locked after the password expires.

Example

```
CLI (config) # authentication policy user admin lock never
```

authentication policy user login-failures reset

Resets the number of unsuccessful login attempts allowed by the system to the default value.

Syntax

[no] authentication policy user <username> login-failures reset

Parameters

<username>	Specify the user login: admin or monitor
-------------------------	--

Example

```
CLI (config) # authentication policy user admin login-failures reset
```

show authentication policy

Displays status of authentication policy.

Syntax

show authentication policy

Parameters

None

Example

```
CLI # show authentication policy
Authentication policy enabled:          yes
Maximum unsuccessful logins before account lockout:  none
    Wait before account unlock:        300 Seconds
Minimum password length:                14
Minimum upper case characters in password:  1
Minimum lower case characters in password:  1
Minimum numerical characters in password:  1
Minimum special characters in password:    1
Minimum interval for password reuse:       5
Minimum characters diff for password change: 4
Prevent dictionary words in password:     yes
User passwords expire:                  60 days
Warn user of an expiring password:       7 days before
User accounts with expired passwords lock: 305 days
```

show usernames

Displays a list of user accounts.

Syntax

show usernames [detailed]

Parameters

detailed	Displays detailed user account information.
-----------------	---

Example

```
CLI # show usernames
```

User	Expire	Lock	Login Failures	Comment
@admin	Never	Never	0	
-monitor	N/A	N/A	N/A	
shark	Never	Never	0	

@ = current user, * = also logged in, - = disabled,
 ! = locked out due to failed logins

stats generate inventory

Generates an inventory of user created files in the /rfs directory and dumps the data in csv format in a file in the /var/opt/tms/sysdumps directory.

Syntax

stats generate inventory

Parameters

inventory	Generates inventory of user created files on the AltaVault appliance.
------------------	---

Example

```
CLI (config) # stats generate inventory
```

Generated inventory of files at /var/opt/tms/sysdumps/share_inventory_20150901-225003.csv

ACL Management Commands

This section describes the ACL management commands. For detailed information, see the AltaVault Management Console online help or the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

access enable

Enables secure access to a AltaVault using an internal management Access Control List (ACL).

Syntax

[no] access enable

Parameters

None

Usage

AltaVaults are subject to the network policies defined by corporate security, particularly in large networks. Using an internal management ACL, you can:

- restrict access to certain interfaces or protocols of a AltaVault.
- restrict inbound IP access to a AltaVault, protecting it from access by hosts that do not have permission, without using a separate device (such as a router or firewall).
- specify which hosts or groups of hosts can access and manage a AltaVault by IP address, simplifying the integration of AltaVaults into your network. You can also restrict access to certain interfaces or protocols.

The **no** command option disables management ACL.

Example

```
CLI (config) # access enable
```

access inbound rule add

Adds a secure access inbound rule.

Syntax

[no] access inbound rule add [allow | deny] protocol <protocol number> service <service> dstport <port> srcaddr <ip-addr> interface <interface> description <description> rulenum <rulenum> | [log {on | off}] | [override]

Parameters

allow deny	Specify the action on the rule: allow - Allows a matching packet access to the AltaVault. This is the default action. deny - Denies access to any matching packets.
protocol <protocol number>	Specify all , icmp , tcp , udp , or protocol number (1 , 6 , 17) in IP packet header. The default setting is all .
service <service>	Optionally, specify the service name: http , https , snmp , ssh , soap
dstport <port>	Optionally, specify the destination port of the inbound packet. You can also specify port ranges: 1000-30000
srcaddr <ip-addr>	Optionally, specify the source subnet of the inbound packet; for example, 1.2.3.0/24
interface <interface>	Optionally, specify an interface name: primary .
description <description>	Optionally, specify a description to facilitate communication about network administration.
rulenum <rulenum>	Optionally, specify a rule number from 1 to N , start , or end . The AltaVaults evaluate rules in numerical order, starting with rule 1. If the conditions set in the rule match, then the rule is applied, and the system moves on to the next packet. If the conditions set in the rule do not match, the system consults the next rule. For example, if the conditions of rule 1 do not match, rule 2 is consulted. If rule 2 matches the conditions, it is applied, and no further rules are consulted.
log [on off]	Optionally, specify to track denied packets in the log. By default, packet logging is enabled.
override	Specify to ignore the warning and force the rule modification. If you add, delete, edit, or move a rule that could disconnect you from the AltaVault, a warning message appears. You can specify override to ignore the warning and force the rule modification. Use caution when you override a disconnect warning.

Usage

The management ACL contains rules that define a match condition for an inbound IP packet. You set a rule to allow or deny access to a matching inbound IP packet. When you add a rule on a AltaVault, the destination specifies the AltaVault itself, and the source specifies a remote host.

To delete a rule, use the syntax:

no access inbound rule <rulenum>

Example

```
CLI (config) # access inbound rule add allow protocol tcp/udp
dstport 1234 srcaddr 10.0.0.1/16 interface primary rulenum 2
```

access inbound rule edit rulenum

Modifies a secure access inbound rule.

Syntax

[no] access inbound rule edit rulenum <rulenum> action [allow | deny] [protocol <protocol number> service <service> dstport <port> | srcaddr <ip-addr> | interface <interface> | description <description>] | log [on | off] | [override]

Parameters

rulenum <rulenum>	Optionally, specify a rule number from 1 to N, start, or end. AltaVaults evaluate rules in numerical order, starting with rule 1. If the conditions set in the rule match, then the rule is applied, and the system moves on to the next packet. If the conditions set in the rule do not match, the system consults the next rule. For example, if the conditions of rule 1 do not match, rule 2 is consulted. If rule 2 matches the conditions, it is applied, and no further rules are consulted.
action [allow deny]	Specify the action on the rule: • allow - Allows a matching packet access to the AltaVault. This is the default action. • deny - Denies access to and logs any matching packets.
protocol <protocol number>	Specify all , icmp , tcp , udp , or protocol number (1 , 6 , 17) in IP packet header. The default setting is all .
service <service>	Optionally, specify the service name: http , https , snmp , ssh
dstport <port>	Specify the destination port. You can also specify port ranges: 1000-30000
srcaddr <subnet>	Specify the source subnet. For the subnet address, use the format XXX.XXX.XXX.XXX/XX.
interface <interface>	Specify the interface: primary .
description <description>	Optionally, specify a description to facilitate communication about network administration.
log [on off]	Optionally, specify to enable or disable log in on this command.
override	Specify to ignore the warning and force the rule modification. If you add, delete, edit, or move a rule that could disconnect you from the AltaVault, a warning message appears. You can specify override to ignore the warning and force the rule modification. Use caution when overriding a disconnect warning.

Example

```
CLI (config) # access inbound rule edit action allow dstport 1234 srcaddr 10.0.0.1/16 service http
interface primary rulenum 2
```

access inbound rule move

Moves a secure access inbound rule.

Syntax

```
[no] access inbound rule move <rulenum>] to <rulenum> [override]
```

Parameters

rulenum <rulenum>	Specify a rule number from 1 to N, start , or end . AltaVaults evaluate rules in numerical order, starting with rule 1. If the conditions set in the rule match, then the rule is applied, and the system moves on to the next packet. If the conditions set in the rule do not match, the system consults the next rule. For example, if the conditions of rule 1 do not match, rule 2 is consulted. If rule 2 matches the conditions, it is applied, and no further rules are consulted.
override	Specify to ignore the warning and force the rule modification. If you add, delete, edit, or move a rule that could disconnect you from the AltaVault, a warning message appears. You can specify override to ignore the warning and force the rule modification. Use caution when overriding a disconnect warning.

Example

```
CLI (config) # access inbound rule move 2 to 4
```

Secure Shell Access Commands

This section describes the secure shell access commands.

ssh server allowed-ciphers

Sets the list of allowed ciphers for ssh server.

Syntax

[no] ssh server allowed-ciphers <ciphers>

Parameters

<ciphers>	Specify cipher or comma separated list of ciphers, in quotation marks. Default ciphers configured are aes128-ctr, aes192-ctr, and aes256-ctr. Supported ciphers are: • aes128-cbc • cast128-cbc • aes192-cbc • aes256-cbc • aes128-ctr • aes192-ctr • aes256-ctr
------------------------	---

Usage

The **no** command option resets the SSH server allowed ciphers.

Example

```
CLI (config) # ssh server allowed-ciphers "aes128-ctr,aes192-ctr,aes256-ctr"
```

ssh server enable

Enables SSH access to the system.

Syntax

[no] ssh server enable

Parameters

None

Usage

This command is enabled by default. The **no** command option disables SSH access.

Example

```
CLI (config) # ssh server enable
```

ssh server listen enable

Enables SSH interface restriction access to the system (that is, it enables access control and blocks requests on all the interfaces).

Syntax

[no] ssh server listen enable

Parameters

None

Usage

If the list of interfaces is empty, none of the interfaces respond to the queries.

The **no** command option disables SSH interface restrictions which causes SSH to accept connections from all interfaces.

SSH interface restrictions are not available through the Management Console.

Example

```
CLI (config) # ssh server listen enable
```

ssh server listen interface

Adds one or more interfaces to the SSH server access restriction list (thus, it unblocks requests on the specified interface).

Syntax

[no] ssh server listen interface <interface>

Parameters

<interface>	Specify the interface: primary .
--------------------------	---

Usage

If the list of interfaces is empty, none of the interfaces respond to the queries. If the list of interfaces has at least one entry, then the server listens on that subset of interfaces.

To add an interface to the list

```
ssh server listen interface primary
```

To remove an interface

```
no ssh server listen interface <interface>
```

The **no** command option removes the interface.

SSH interface restrictions are not available through the Management Console.

Example

```
CLI (config) # ssh server listen interface primary
```

ssh server listen interface

Adds one or more interfaces to the SSH server access restriction list (thus, it unblocks requests on the specified interface).

Syntax

[no] ssh server listen interface <interface>

Parameters

<interface>	Specify the interface: primary .
-------------	---

Usage

If the list of interfaces is empty, none of the interfaces respond to the queries. If the list of interfaces has at least one entry, then the server listens on that subset of interfaces.

To add an interface to the list

```
ssh server listen interface primary
```

To remove an interface

```
no ssh server listen interface <interface>
```

The **no** command option removes the interface.

SSH interface restrictions are not available through the Management Console

Example

```
CLI (config) # ssh server listen interface primary
```

ssh server max-auth-tries

Specifies the maximum number of authentication ties per connection attempt.

Syntax

ssh server max-auth-tries <number>

Parameters

max-auth-tries <number>	Specify the maximum number of authentication attempts that the appliance will allow.
-------------------------	--

Usage

This command specifies the number of attempts you can make before the ssh connection is terminated.

Example

```
CLI (config) # ssh server max-auth-tries 5
```

ssh server user

This command allows you to log in using the given public SSH key.

Syntax

ssh server user <name> authorized-key <key>

no ssh server user <name> authorized-key <key-index>

Parameters

user <name>	Specifies the names of the user requiring access.
authorized-key <key>	Specifies the user's public key.
authorized-key <key-index>	Specifies the index of authorized SSH key to delete.

Usage

The **no** version of this command deletes an authorized key using the index number of the public keys. For example, the first key added would have index value 1. The examples below show both forms of the command.

Example

```
CLI (config) # ssh server user admin authorized-key "ssh-rsa
AAAAB3NzaC1yc2EAAAADAQABAAQ7ZCATT6tD3t5JmS276WzIJpVoPn+0ReCbRThpyh/2Glsv346
XV3OdZl954gd2n1kpeMckt7iSv6EgF2oGWMPE1h9tiCY5PKumZsT7bwQ94Y8IML+ZsldggVDOqRXRyXsInAm0hLCOFp3Uxg4S
UxjcTwJM82ZP6jTSMVLVjxWJhZKqJLzQpsUgv0BuAaQWdeS6vyNmgxfm+Fpv4Ov2o376sPSmnEPodkyGnXTnn1JoQPH0ICrrwt
8of6IxObKH9HEBUaO94qZ+XLT+7SM6s9j4uR53KON8DnHNkntpgFDmR9hL6Krg9KWVCob7Z0amNDk1p4y4bOkcMkAXMm+v6ld
T user@example.com"
```

```
CLI (config) # no ssh server user admin authorized-key 1
```

ssh server v2-only enable

Enables SSH server to accept only v2 connections that are more secure.

Syntax

[no] ssh server v2-only enable

Parameters

None

Usage

This command restricts the server to accept only v2 protocol connections, which are more secure.

The **no** command option removes the restriction.

Example

```
CLI (config) # ssh server v2-only enable
```

ssh server passwd-auth

Enables server password authentication,

Syntax

[no] ssh server passwd-auth

Parameters

None

Usage

The **no** command option disables the server password authentication.

Example

```
CLI (config) # ssh server passwd-auth
```

CLI Terminal Configuration Commands

This section describes the CLI terminal configuration commands.

banner login

Creates the system log in banner.

Syntax

[no] banner login <message string>

Parameters

<message string>	Specify the login banner message. Enclose the message in quotation marks.
------------------	---

Usage

The **no** command option disables the login banner.

Example

```
CLI (config) # banner login "reminder: meeting today"
```

banner motd

Creates the system Message of the Day banner.

Syntax

[no] banner motd <message string>

Parameters

<message string>	Specify the login Message of the Day. Enclose the message in quotation marks.
------------------	---

Usage

The **no** command option disables the system Message of the Day banner.

Example

```
CLI (config) # banner motd "customer visit today"
```

cli clear-history

Clears the command history for the current user.

Syntax

cli clear-history

Parameters

None

Example

```
CLI (config) # cli clear-history
```

cli default auto-logout

Sets the keyboard inactivity time for automatic log out.

Syntax

[no] cli default auto-logout <minutes>

Parameters

<minutes>	Specify the number of minutes before log out occurs.
-----------	--

To disable timeout

```
cli default auto-logout 0
```

The **no** command option disables the automatic logout feature.

Example

```
CLI (config) # cli default auto-logout 25
```

cli default paging enable

Sets ability to view text one screen at a time.

Syntax

[no] cli default paging enable

Parameters

None

Usage

The **no** command option disables paging.

Example

```
CLI (config) # cli default paging enable
```

cli session

Sets CLI options for the current session only.

Syntax

[no] cli session {auto-logout <minutes> | paging enable | terminal length <lines> | terminal type <terminal_type> | terminal width <number of characters>}

Parameters

auto-logout <minutes>	Sets the number of minutes before the CLI automatically logs out the user. The default value is 15 minutes. The no command option disables the automatic logout feature.
paging enable	Sets paging. With paging enabled, if there is too much text to fit on the page, the CLI prompts you for the next page of text. The no command option disables paging.
terminal length <lines>	Sets the terminal length. The no command option disables the terminal length.
terminal type <terminal_type>	Sets the terminal type. The no command option disables the terminal type.
terminal width <number of characters>	Sets the terminal width. The no command option disables the terminal width.

Usage

The **no** command option disables CLI option settings.

Example

```
CLI (config) # cli session auto-logout 20
```

Web Configuration Commands

This section describes the Management Console configuration commands.

web auto-logout

Sets the number of minutes before the Management Console automatically logs out the user.

Syntax

[no] web auto-logout <minutes>

Parameters

<minutes>	Specify the number of minutes before the system automatically logs out the user. The default value is 15 minutes.
-----------	---

Usage

The **no** command option disables the automatic log out feature.

Example

```
CLI (config) # web auto-logout 20
```

web auto-refresh timeout

Enables session timeouts on auto-refreshing report pages.

Syntax

[no] web auto-refresh timeout

Parameters

None

Usage

Disabling this feature keeps you logged in indefinitely on a report page that is auto-refreshing. This can be a security risk.

The **no** command option disables time-out.

Example

```
CLI (config) # web auto-refresh timeout
```

web enable

Enables the Management Console.

Syntax

[no] web enable

Parameters

None

Usage

The Management Console is enabled by default.

The **no** command option disables the Management Console.

Example

```
CLI (config) # web enable
```

web http enable

Enables HTTP access to the Management Console.

Syntax

[no] web http enable

Parameters

None

Usage

The Management Console is enabled by default.

The **no** command option disables the Management Console.

Example

```
CLI (config) # web http enable
```

web http port

Sets the Web port for HTTP access.

Syntax

[no] web http port <port>

Parameters

<port>	Specify the port number. The default value is 80.
---------------------	---

Usage

The **no** command option resets the Web port to the default value.

Example

```
CLI (config) # web http port 8080
```

web http redirect

Redirects all HTTP access to HTTPS.

Syntax

[no] web http redirect

Parameters

None

Usage

This command is enabled by default. The **no** command option resets the Web port to the default value.

Example

```
CLI (config) # web http redirect
```

web httpd listen enable

Restricts Web interface access to this system (that is, it enables access control and blocks requests on all the interfaces).

Syntax

[no] web httpd listen enable

Parameters

None

Usage

The **no** command option disables Web interface restrictions.

Web interface restrictions are not available through the Management Console.

Example

```
CLI (config) # web httpd listen enable
```

web httpd listen interface

Adds an interface to the Web server access restriction list.

Syntax

[no] web httpd listen interface <interface>

Parameters

<interface>	Specify the interface: primary .
-------------	---

Usage

If the list of interfaces is empty, none of the interfaces respond to the queries. If the list of interfaces has at least one entry, then the server listens on that subset of interfaces.

To add an interface to the list to listen on

```
web httpd listen interface primary
```

To remove an interface so that it is no longer listened to

```
no web httpd listen interface <interface>
```

Web interface restrictions are not available through the Management Console.

Example

```
CLI (config) # web httpd listen interface
```

web httpd timeout

Configures Web server (Web-based Management Console) timeout

Syntax

web httpd timeout <duration>

Parameters

timeout <duration>	Specify the duration (in seconds) for which the Web server timeout should occur.
--------------------	--

Example

```
CLI (config) # web httpd timeout
```

web https enable

Enables HTTPS access to the Web-based management console.

Syntax

[no] web https enable

Parameters

None

Usage

This command is enabled by default. The **no** command option disables access to the Web-based management console.

Example

```
CLI (config) # web https enable
```

web https port

Sets the HTTPS secure Web port.

Syntax

[no] web https port <port>

Parameters

<port>	Specify the port number. The default value is 443 .
--------	--

Usage

The **no** command option disables support on a secure port.

Example

```
CLI (config) # web https port 8080
```

web prefs log lines

Sets the number of lines for the system log page.

Syntax

[no] web prefs log lines <number>

Parameters

<number>	Specify the number of lines per log page.
----------	---

Usage

The **no** command option disables the number of log lines.

Example

```
CLI (config) # web prefs logs lines 10
```

web prefs login default

Sets Management Console login preferences.

Syntax

web prefs login default <login ID>

Parameters

<login ID>	Specify the default login ID displayed on the Management Console login page.
-------------------------	--

Example

```
CLI (config) # web prefs login default admin
```

web proxy host

Sets the HTTP, HTTPS, and FTP proxy.

Syntax

[no] web proxy host <ip-addr> port <port> user-cred username <name> password <password> | authtype <authentication_type>

Parameters

<ip-addr>	Specify the IP address for the host.
port <port>	Specify the port for the host.
user-cred username <name> password <password>	Specify the following user credentials for the auto-licensing feature: • username <username> - Specify the user name to authenticate the user. • password <password> - Specify the password in clear text format.
authtype <authentication_type>	Specify the authentication type: • basic - Authenticates user credentials by requesting a valid user name and password. This is the default setting. • digest - Provides the same functionality as basic authentication; however, digest authentication improves security because the system sends the user credentials across the network as a Message Digest 5 (MD5) hash. • ntlm - Authenticates user credentials based on an authentication challenge and response.

Usage

Use this command to enable the appliance to use a Web proxy to contact the NetApp licensing portal and fetch licenses in a secure environment. You can optionally require user credentials to communicate with the Web proxy for use with the auto-licensing feature. You can specify the method used to authenticate and negotiate these user credentials.

The **no** command option resets the Web proxy settings to the default behavior. Web proxy access is disabled by default.

The system supports the following proxies: Squid, Blue Coat Proxy SG, Microsoft WebSense, and McAfee Web Gateway.

The **no** command option disables the Web proxy.

Example

```
CLI (config) # web proxy host 10.1.2.1 port 1220
```

web rest-server enable

Enables the REST server.

Syntax

web rest-server enable

Parameters

None

Usage

Representational State Transfer (REST) is a software architecture for distributed systems such as the World Wide Web. The REST style architecture consists of clients and servers. Clients initiate requests to servers, and the server process the requests and return appropriate responses.

A uniform interface separates clients from servers. This separation of concerns means that, for example, clients are not concerned with data storage, which remains internal to each server, so that the portability of client code is improved. Servers are not concerned with the user interface or user state, so that servers can be simpler and more scalable. Servers and clients can also be replaced and developed independently, as long as the interface between them is not altered.

Example

```
CLI (config) # web rest-server enable
```

web session renewal

Sets the session renewal time. This is the time before the Web session time-out. If a Web request comes in, it automatically renews the session.

Syntax

[no] web session renewal <minutes>

Parameters

<minutes>	Specify the number of minutes. The default value is 10 minutes.
------------------------	--

Usage

The **no** command option resets the session renewal time to the default value.

Example

```
CLI (config) # web session renewal 5
```

web session timeout

Sets the session time-out value. This is the amount of time the cookie is active.

Syntax

[no] web session timeout <minutes>

Parameters

<minutes>	Specify the number of minutes. The default value is 60 minutes.
------------------------	--

Usage

The **no** command option resets the session time-out to the default value.

Example

```
CLI (config) # web session timeout 120
```

web snmp-trap conf-mode enable

Enables SNMP traps in Web configure mode.

Syntax

[no] web snmp-trap conf-mode enable

Parameters

None

Usage

The **no** command option disables this setting.

Example

```
CLI (config) # web snmp-trap conf-mode enable
```

web soap-server enable

Enables the Simple Object Access Protocol (SOAP) server.

Syntax

[no] web soap-server enable

Parameters

None

Usage

The **no** command option disables this setting.

Example

```
CLI (config) # web soap-server enable
```

web soap-server port

Enables the Simple Object Access Protocol (SOAP) server port.

Syntax

[no] web soap-server port <port>

Parameters

<port>	Specify the port.
---------------------	-------------------

Usage

The **no** command option disables this setting.

Example

```
CLI (config) # web soap-server port 1234
```

web ssl cert generate

Generates a new SSL key and self-signed certificate.

Syntax

web ssl cert generate <cr> | [key-size <512|1024|2048>] | [country <string>] | [email <email address>] | [locality <string>] | [org <string>] | [org-unit <string>] | [state <string>] | [valid-days <int>]

Parameters

key-size <512 1024 2048>	Specify the key size.
country <string>	Specify the certificate two-letter country code. The country code can be any two-letter code, such as the ISO 3166 Country Codes, as long as the appropriate Certificate Authority can verify the code.
email <email address>	Specify the email address of the contact person.
locality <string>	Specify the city.
org <string>	Specify the organization.
org-unit <string>	Specify the organization unit (for example, the company).
state <string>	Specify the state. You cannot use abbreviations.
valid-days <int>	Specify how many days the certificate is valid. If you omit valid-days , the default is 2 years.

Example

```
CLI (config) # web ssl cert generate
```

web ssl cert generate-csr

Generates a certificate signing request with current private key.

Syntax

```
web ssl cert generate-csr [common-name <name>] [country <string>] [email <email address>] [locality <string>] [org <string>] [org-unit <string>] [state <string>]
```

Parameters

common-name <name>	Specify the common name of a certificate. To facilitate configuration, you can use wild cards in the name: for example, *.nbtech.com. If you have three origin servers using different certificates (such as webmail.nbtech.com, internal.nbtech.com, and marketingweb.nbtech.com) on the AltaVault, all three server configurations can use the same certificate name *.nbtech.com.
country <string>	Specify the certificate two-letter country code. The country code can be any two-letter code, such as those in the ISO 3166 Country Codes, as long as the appropriate Certificate Authority can verify the code.
email <email address>	Specify the email address of the contact person.
locality <string>	Specify the city.
org <string>	Specify the organization.
org-unit <string>	Specify the organization unit (for example, the company).
state <string>	Specify the full name of the state. You cannot use abbreviations.

web ssl cert import-cert

Imports a certificate, optionally with current private key, in PEM format, and optionally a password.

Syntax

```
web ssl cert import-cert <cert-data> <cr> import-key <key> [password <password>]
```

Parameters

import-cert <cert-data>	Specify a certificate file in PEM format.
import-key <key>	Specify a private key in PEM format.
[password <password>]	Optionally, specify a password.

Usage

If no key is specified the incoming certificate is matched with the existing private key, and accepted if the two match. A password is required if imported certificate data is encrypted.

Example

```
CLI (config) # web ssl cert import-cert mydata.pem import-key mykey
```

web ssl cert import-cert-key

Imports a certificate with current private key in PEM format.

Syntax

```
web ssl cert import-cert-key <cert-key-data> [password <password>]
```

Parameters

import-cert-key <cert-key-data>	Specify a private key and certificate file in PEM format.
[password <password>]	Optionally, specify a password.

Example

```
CLI (config) # web ssl cert import-cert-key mykey
```

web ssl protocol sslv3

Sets the SSL v3 protocols for Apache to use.

Syntax

```
[no] web ssl protocol sslv3
```

Parameters

None

Usage

The **no** command option disables this setting.

Example

```
CLI (config) # web ssl protocol sslv3
```

Warning: SSLv3 is considered insecure. It is advisable to allow only TLS 1.1 or TLS 1.2

web ssl protocol tlsv1

Specifies the TLS (Transport Layer Security) protocol version that the Apache server must use.

Syntax

```
[no] web ssl protocol {tlsv1 | tlsv1.1 | tlsv1.2}
```

Parameters

tlsv1	Specifies that the Apache HTTP server must use TLSV1 (Transport Layer Security version 1).
tlsv1.1	Specifies that the Apache HTTP server must use TLSV1.1 (Transport Layer Security protocol version 1.1).
tlsv1.2	Specifies that the Apache HTTP server must use TLSV1.2 (Transport Layer Security protocol version 1.2).

Usage

The **no** command option disables this setting.

Example

```
CLI (config) # web ssl protocol tlsv1
```

Warning: TLS 1.0 is considered insecure. It is advisable to allow only TLS 1.1 or TLS 1.2

Configuration File Commands

This section describes the configuration file commands.

configuration bulk export

Exports the bulk configuration file (AltaVault_config_(HOSTNAME)_(DATETIME).tgz).

Syntax

configuration bulk export <export file pathname> [password <password>]

Parameters

export <export file pathname>	Specify the name and location of the source file such as HTTP, FTP, or SCP URL to the configuration file: for example, scp://username:password@server/path/to/configuration file.
password <password>	Specify the password for the export.

Example

```
CLI (config) # configuration bulk export scp://myusername:mypassword@sampleserver/usr/local/
conf.file
```

configuration bulk import

Imports the bulk configuration file in to the AltaVault.

Syntax

configuration bulk import <import file pathname> | all [passphrase <pass phrase>] | shared [passphrase <pass phrase>]

Parameters

import <import file pathname>	Specify the name and location of the source file such as HTTP, FTP, or SCP URL to the configuration file: for example, scp://username:password@server/path/to/configuration file
all	Copies the entire configuration.
shared	Copies only the shared configuration. It imports only the following common settings (the system does not automatically copy the other settings): • Cloud settings • Email settings • Logging • NTP settings • SNMP settings • Statistics or Alarms settings • Time zone settings • Web and CLI preferences • SMB, OST, and NFS configuration The following settings are not imported: • General Security Settings • Static host configuration • Appliance licenses • Interface configuration, IP configuration, static routes, and virtual interfaces. • Radius protocol settings • Name server settings and domains • Scheduled Jobs • ssh server settings and public or private keys • Hostname, Message of the Day (MOTD), and Fully Qualified Domain Name (FQDN) • TACACS protocol settings
passphrase <pass phrase>	Specify the pass phrase for the import.

Example

```
CLI (config) # configuration bulk import scp://myusername:mypassword@sampleserver/usr/local/
conf.file
```

configuration copy

Copies a configuration file.

Syntax

```
configuration copy <sourcename> <new-filename>
```

Parameters

<sourcename>	Specify the name of the source file.
<new-filename>	Specify the name of the destination file.

Example

```
CLI (config) # configuration copy westcoast eastcoast
```

configuration delete

Deletes a configuration file.

Syntax

configuration delete <filename>

Parameters

<filename>	Specify the name of the configuration file to delete.
------------	---

Example

```
CLI (config) # configuration delete westcoast
```

configuration factory

Create a new configuration file.

Syntax

configuration factory <filename>

Parameters

<filename>	Specify the name of the destination file.
------------	---

Example

```
CLI (config) # configuration factory eastcoast
```

configuration fetch

Downloads a configuration file over the network.

Syntax

configuration fetch
 {<URL, scp://, or ftp://username:password@hostname/path/filename> | <filename>

Parameters

<URL, scp://, or ftp://username:password@hostname/path/filename>	Specify the date and time (year, month, day, hour, minutes, and seconds).
<filename>	Create a new name for the configuration file.

Usage

To copy one configuration file to another appliance, run the following set of commands:

```
configuration fetch <url-to-remote-config> <new-config-name>
    ; this fetches the configuration from the remote
configuration switch-to <new-config-name>
    ; this activates the newly fetched configuration
```

Example

```
CLI (config) # configuration fetch http://domain.com/westcoast newconfig
CLI (config) # configuration switch-to newconfig
```

configuration jump-start

Restarts the configuration wizard. The configuration wizard lets you set 20 configuration parameters with a single command. Press Enter to accept the value displayed or enter a new value.

Syntax

configuration jump-start

Parameters

None

Example

```
CLI (config) # configuration jump-start
```

NetApp AltaVault configuration wizard.

```
Step 1: Hostname? [example]
Step 2: Use DHCP on primary interface? [no]
Step 3: Primary IP address? [10.11.6.6]
Step 4: Netmask? [255.255.0.0]
Step 5: Default gateway? [10.0.0.1]
Step 6: Primary DNS server? [10.0.0.2]
Step 7: Domain name? [example.com]
Step 8: Admin password?
```

You have entered the following information:

```
Step 1: Hostname? CLI
Step 2: Use DHCP on primary interface? no
Step 3: Primary IP address? 10.10.10.6
Step 4: Netmask? 255.255.0.0
Step 5: Default gateway? 10.0.0.1
Step 6: Primary DNS server? 10.0.0.2
Step 7: Domain name? example.com
Step 8: Admin password? xxxyyyy
```

To change an answer, enter the step number to return to.
Otherwise hit <enter> to save changes and exit.

```
CLI (config)>
```

configuration merge

Merges common configuration settings from one system to another.

Syntax

configuration merge <filename> <new-config-name>

Parameters

<filename>	Name of file from which to merge settings.
<new-config-name>	Specify the new configuration name.

Usage

Use the configuration merge command to deploy a network of appliances. Set up a template for your appliance and merge the template with each appliance in the network.

The following configuration settings are not merged when you run the **configuration merge** command: failover settings, SNMP SysContact and SysLocation, log settings, and all network settings (for example, hostname, DNS settings, defined hosts, static routing, and in-path routing).

The following configuration settings are merged when you run the **configuration merge** command: in-path, out-of-path, protocols, statistics, CLI, email, NTP and time, Web, SNMP, and alarm.

To merge a configuration file, run the following set of commands:

```
configuration write to <new-config-name>
    ;; this saves the current config to the new name and activates
    ;; the new configuration
configuration fetch <url-to-remote-config> <temp-config-name>
    ;; this fetches the configuration from the remote
configuration merge <temp-config-name>
    ;; this merges the fetched config into the active configuration
    ;; which is the newly named/created one in step 1 above
configuration delete <temp-config-name>
    ;; this deletes the fetched configuration as it is no longer
    ;; needed since you merged it into the active configuration
```

Example

```
CLI (config) # configuration merge tempconfig
```

configuration move

Moves and renames a configuration file.

Syntax

```
configuration move <sourcename> <destname>
```

Parameters

<sourcename>	Specify the name of the source configuration file.
<destname>	Specify the name of the new configuration file.

Example

```
CLI (config) # configuration move westcoast eastcoast
```

configuration new

Creates a new, blank configuration file.

Syntax

```
configuration new <new-filename> <cr> | [keep licenses]
```

Parameters

<new-filename>	Specify the name of the new configuration file.
keep licenses	Creates a new configuration file with default settings and active licenses.

Usage

NetApp recommends that you use the **keep licenses** command option. If you do not keep licenses, your new configuration will not have a valid license key.

Example

```
CLI (config) # configuration new westcoast keep licenses
```

configuration revert keep-local

Reverts to the initial configuration but maintains some appliance-specific settings.

Syntax

```
configuration revert keep-local
```

Parameters

None

Example

```
CLI (config) # configuration revert keep-local
```

configuration revert saved

Reverts the active configuration to the last saved configuration.

Syntax**configuration revert saved****Parameters**

None

Example

```
CLI (config) # configuration revert saved
```

configuration switch-to

Loads a new configuration file and makes it the active configuration.

Syntax**configuration switch-to <filename>****Parameters**

- | | |
|-------------------------|--|
| <filename> | Specify the filename. The default filenames are: <ul style="list-style-type: none"> • initial - Specify the initial configuration. • initial.bak - Specify the initial backup configuration. • cold - Specify the configuration file before SDR has occurred. • working - Specify the current configuration. |
|-------------------------|--|

Example

```
CLI (config) # configuration switch-to westcoast
```

configuration upload

Uploads the configuration file.

Syntax**configuration upload <filename>****<http, ftp, or scp URL (e.g. scp://username:password@host/path)> <cr> | [active]****Parameters**

- | | |
|---|--|
| <filename> | Specify the configuration filename. |
| <http, ftp, or scp URL (e.g. scp://username:password@host/path)> | Specify the HTTP, FTP, or scp URL |
| active | Sets the uploaded file to the active configuration file. |

Example

```
CLI (config) # configuration upload initial scp://test:MyPassword@example/tmp/
```

configuration write

Writes the current, active configuration file to memory.

Syntax

configuration write <cr> [to <filename>]

Parameters

to <filename>	Save the running configuration to a file.
----------------------------	---

Example

```
CLI (config) # configuration write
```

write memory

Saves the current configuration settings to memory.

Syntax

write memory

Parameters

None

Example

```
CLI (config) # write memory
```

write terminal

Displays commands to recreate current running configuration.

Syntax

write terminal

Parameters

None

Example

```
CLI (config) # write terminal
```

Notification Commands

This section describes the notification commands.

email domain

Sets the domain for email notifications.

Syntax

[no] email domain <hostname or ip-addr>

Parameters

<hostname or ip-addr>	Specify the domain for email notifications (only if the email address does not contain it).
------------------------------------	---

Usage

Use the email domain command only if the email address does not contain the domain.

The **no** command option disables the email domain.

Example

```
CLI (config) # email domain example.com
```

email from-address

Sets the address from which email messages appear to come.

Syntax

[no] email from-address <email addr>

Parameters

<email addr>	Specify the full user name and domain to appear in the email "From:" address.
---------------------------	---

Usage

Use the email from-address command to override the default email address used in outgoing email messages, do-not-reply@[hostname].[domainname].

The **no** command option disables the email address configured and returns to the default email address.

Example

```
CLI (config) # email from-address bean@caffeitaly.com
```

email mailhub

Sets the SMTP server for email notifications.

Syntax

[no] email mailhub <hostname or ip-addr>

Parameters

<hostname or ip-addr>	Specify the SMTP server for email notifications.
------------------------------------	--

Usage

The **no** command option disables the SMTP server.

Example

```
CLI (config) # email mailhub mail-server.example.com
```

email mailhub-port

Sets the email port for email notifications.

Syntax

[no] email mailhub-port <port>

Parameters

<port> Specify the email port for email notifications.

Usage

The **no** command option disables the email port.

Example

```
CLI (config) # email mailhub-port 135
```

email notify events enable

Enables email notification for events.

Syntax

[no] email notify events enable

Parameters

None

Usage

The **no** command option disables email notification.

Example

```
CLI (config) # email notify events enable
```

email notify events recipient

Sets the email address for notification of events.

Syntax

[no] email notify events recipient <email addr>

Parameters

<email addr> Specify the email address of the user to receive notification of events.

Usage

The **no** command option disables email address for notification.

Example

```
CLI (config) # email notify events recipient johndoe@example.com
```

```
CLI (config) # email notify events recipient janedoe@example.com
```

email notify failures enable

Enables email notification of system failures, such as core dumps.

Syntax

[no] email notify failures enable

Parameters

None

Usage

The **no** command option disables email notification.

Example

```
CLI (config) # email notify failures enable
```

email notify failures recipient

Enables email notification of system failures, such as core dumps.

Syntax

[no] email notify failures recipient <email addr>

Parameters

recipient <email-addr>	Specify the email address of the user to receive notification of failures.
-------------------------------------	--

Usage

The **no** command option disables email notification.

You must enter separate commands for each email address. Each command line accepts only one email address.

Example

```
CLI (config) # email notify failures recipient johndoe@example.com
```

```
CLI (config) # email notify failures recipient janedoe@example.com
```

email send-test

Sends a test email to all configured event and failure recipients.

Syntax

email send-test

Parameters

None

Usage

You can also access this command from enable mode.

Example

```
CLI (config) # email send-test
```

SNMP Commands

The AltaVault provides support for the following:

- SNMP Version 1
- SNMP Version 2c
- SNMP Version 3, which provides authentication through the User-based Security Model (USM).
- View-Based Access Control Mechanism (VACM), which provides richer access control.
- Enterprise Management Information Base (MIB).
- ACLs (Access Control Lists) for users (v1 and v2c only).

For detailed information about SNMP traps sent to configured servers, see the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

SNMP v3 provides additional authentication and access control for message security. For example, you can verify the identity of the SNMP entity (manager or agent) sending the message.

Using SNMPv3 is more secure than SNMP v1 or v2; however, it requires more configuration steps to provide the additional security features.

snmp-server acl

Configures changes to the View-Based Access Control Model (VACM) ACL configuration.

Syntax

[no] snmp-server acl group <name> security-level <level> read-view <name>

Parameters

group <name>	Specify the name of the SNMP server community.
security-level <level>	Specify the security level for this ACL entry. • noauth - Does not authenticate packets and does not use privacy. This is the default setting. • auth - Authenticates packets but does not use privacy. • authpriv - Authenticates packets and uses privacy. Note: This setting determines whether a single atomic message exchange is authenticated. Note: A security level applies to a group, not to an individual user.
read-view <name>	Specifies read requests will be restricted to this view.

Usage

For detailed information about SNMP traps sent to configured servers, see the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

The **no** command option disables an SNMP server community.

Example

```
CLI (config) # snmp-server acl group ReadOnly security-level auth read-view ReadOnly
```

snmp-server community

Sets an SNMP read-only server community.

Syntax

[no] snmp-server community <name>

Parameters

<name>	Specify the name of the SNMP server community.
---------------------	--

Usage

For detailed information about SNMP traps sent to configured servers, see the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

You can still access the entire MIB tree from any source host using this setting. If you do not want this type of access, you must delete this option and configure the security name for SNMP ACL support. For details, see [“snmp-server group” on page 103](#).

This community string overrides any VACM settings.

The **no** command option disables an SNMP server community.

Example

```
CLI (config) # snmp-server community ReadOnLy
```

snmp-server contact

Sets the SNMP server contact.

Syntax

[no] snmp-server contact <name>

Parameters

<name>	Specify the user name of the SNMP server community contact.
---------------------	---

Usage

The **no** command option disables the SNMP server contact.

Example

```
CLI (config) # snmp-server contact john doe
```

snmp-server enable

Enables an SNMP server.

Syntax

[no] snmp-server enable <cr> | [traps]

Parameters

traps	Enables sending of SNMP traps from this system.
--------------	---

Usage

The **no** command option disables the SNMP server or traps.

Example

```
CLI (config) # snmp-server enable traps
```

snmp-server group

Configures the View Access Control Model (VACM) group configuration.

Syntax

[no] snmp-server group <group> security name <name> security-model <model>

Parameters

group <group>	Specify a group name.
security-model <model>	Specify one of the following security models: v1 - Enables SNMPv1 security model. v2c - Enables SNMPv2c security model. usm - Enables User-based Security Model (USM).
security-name <name>	Specify a name to identify a requester (allowed to issue gets and sets) or a recipient (allowed to receive traps) of management data. The security name is also required to make changes to the VACM security name configuration.

Usage

The **no** command option disables the SNMP server group.

Example

```
CLI (config) # snmp-server group rvbdgrp security-name netapp security-model v1
```

snmp-server host

Configures hosts to which to send SNMP traps.

Syntax

[no] snmp-server host {<hostname or IP address>} traps <community string>

Parameters

<hostname or ip-addr>	Specify the hostname or IP address for the SNMP server.
traps <community string>	Send traps to the specified host. Specify the password-like community string to control access. Use a combination of uppercase, lowercase, and numerical characters to reduce the chance of unauthorized access to the AltaVault. The # and - characters are not allowed at the beginning of the <community string> argument. Note: If you specify a read-only community string, it takes precedence over this community name and enables users to access the entire MIB tree from any source host. If this is not desired, delete the read-only community string. Note: To create multiple SNMP community strings on a AltaVault, leave the default public community string and then create a second read-only community string with a different security name. Or, you can delete the default public string and create two new SNMP ACLs with unique names.

Usage

The **no** command option disables the SNMP server host.

Example

```
CLI (config) # snmp-server host 10.0.0.1 traps public
```

snmp-server host version

Configures hosts to which to send SNMP traps.

Syntax

[no] snmp-server host <hostname or ip-addr> traps <community string> version {1 | 2 c | 3 remote-user <name>} password encrypted <key> auth-protocol {MD5 | SHA} security-level {noauth | auth | authpriv} | plain-text <text> auth-protocol <MD5 | SHA> [security-level <noauth | auth | authpriv>] | [priv-protocol {AES | DES} priv-key {encrypted <key> | plain-text <text>}] [port <port>]

Parameters

<hostname or ip-addr>	Specify the hostname or IP address for the SNMP server.
traps <community string>	Send traps to the specified host. Specify the password-like community string to control access. Use a combination of uppercase, lowercase, and numerical characters to reduce the chance of unauthorized access to the AltaVault. Note: If you specify a read-only community string, it takes precedence over this community name and enables users to access the entire MIB tree from any source host. If this is not desired, delete the read-only community string. Note: To create multiple SNMP community strings on a AltaVault, leave the default public community string and then create a second read-only community string with a different security name. Or, you can delete the default public string and create two new SNMP ACLs with unique names.

Usage

The **no** command option disables the SNMP server host.

Example

```
CLI (config) # snmp-server host 10.0.0.1 traps version 1 "public 99162?" port 1234
```

snmp-server ifindex

Adds a custom index value for an interface.

Syntax

snmp-server ifindex <interface> <index>

Parameters

<interface>	Specify the interface: primary .
<index>	Specify the index.

Example

```
CLI (config) # snmp-server ifindex
```

snmp-server ifindex-persist

Enables persistent SNMP interface ifinders.

Syntax

[no] snmp-server ifindex-persist

Parameters

None

Usage

The **no** command option disables the SNMP server group.

Example

```
CLI (config) # snmp-server ifindex-persist
```

snmp-server ifindex-reset

Resets the ifindex values of all interfaces to the factory default value.

Syntax**snmp-server ifindex-reset****Parameters**

None

Example

```
CLI (config) # snmp-server ifindex-reset
```

snmp-server listen enable

Enables SNMP server interface restrictions (that is, it enables access control and blocks requests on all the interfaces).

Syntax**[no] snmp-server listen enable****Parameters**

None

Usage

The **no** command option disables SNMP interface restrictions.

SNMP interface restrictions are not available through the Management Console.

Example

```
CLI (config) # snmp-server listen enable
```

snmp-server listen interface

Adds an interface to the SNMP server access restriction list.

Syntax**[no] snmp-server listen interface <interface>****Parameters**

<interface>	Specify the interface: primary .
-------------	---

Usage

If the list of interfaces is empty, none of the interfaces respond to the queries. If the list of interfaces has at least one entry, then the server listens on that subset of interfaces.

To add an interface to the list to listen on:

```
snmp-server listen interface primary
```

To remove an interface from the list:

```
no snmp-server listen interface <interface>
```

SNMP interface restrictions are not available through the Management Console.

Example

```
CLI (config) # snmp-server listen interface
```

snmp-server location

Sets the value for the system location variable in the MIB.

Syntax

[no] snmp-server location <ip-addr>

Parameters

<ip-addr>	Specify the IP address of the system.
-----------	---------------------------------------

Usage

The **no** command option disables the SNMP server location.

Example

```
CLI (config) # snmp-server location 10.10.10.1
```

snmp-server security-name

Configures the SNMP security name.

Syntax

[no] snmp-server security-name <name> community <community string> source <ip-addr> <netmask>

Parameters

<name>	Specify the security name.
community <community string>	Specify the password-like community string to control access. Use a combination of uppercase, lowercase, and numerical characters to reduce the chance of unauthorized access to the AltaVault. Note: If you specify a read-only community string, it takes precedence over this community name and enables users to access the entire MIB tree from any source host. If this is not desired, delete the read-only community string. Note: To create multiple SNMP community strings on a AltaVault, leave the default public community string and then create a second read-only community string with a different security name. Or, you can delete the default public string and create two new SNMP ACLs with unique names.
source <ip-addr> <netmask>	Specify the source IP address and netmask.

Usage

The **no** command option disables the trap interface.

Example

```
CLI (config) # snmp-server security-name netapp community public source 10.1.2.3/24
```

snmp-server trap-interface

Sets the IP address for the designated interface in the SNMP trap header.

Syntax

[no] snmp-server trap-interface <ip-addr>

Parameters

<ip-addr>	Specify the IP address.
------------------------	-------------------------

Usage

The trap interface setting sets which interface IP address is used in the agent-address header field of SNMP v1 trap Protocol Data Units (PDUs). It does set the interface for the trap.

Traps are always sent out the Primary interface. If the primary interface is physically disconnected, no traps are sent.

The **no** command option disables the trap interface.

Example

```
CLI (config) # snmp-server trap-interface 10.0.0.1
```

snmp-server trap-test

Generates an SNMP trap test.

Syntax

snmp-server trap-test

Parameters

None

Usage

Use this command to send a sample trap test to ensure that the SNMP server is monitoring the AltaVault.

Example

```
CLI (config) # snmp-server trap-test
```

snmp-server user

Configures changes to the User-Based Security (UBS) model.

Syntax

[no] snmp-server user <name> password {encrypted <key> | plain-text <text>} auth-protocol {MD5 | SHA} [priv-protocol {AES | DES} priv-key {encrypted <key> | plain-text <text>}]

Parameters

<name>	Specify the user name.
password {encrypted <key> plain-text <text>}	Specify the password type: • encrypted <key> - Enable encrypted password authentication. • plain-text <text> - Enable plain-text password authentication. The plain-text password must be at least 8 characters.
auth-protocol {MD5 SHA}	Specify the authorization protocol: • MD5 - Enable MD5 security protocol. • SHA - Enable SHA security protocol.
priv-protocol {AES DES}	Specify the privacy protocol: • AES - Specify CFB128-AES-128 as the privacy protocol. • DES - Specify CBC-DES as the privacy protocol.
priv-key {encrypted <key> plain-text <text>}	Specify the privacy key: • encrypted <key> - Specify encrypted privacy key. • plain-text <text> - Specify plain-text privacy key. The plain-text privacy key must be at least 8 characters.

Usage

The **no** command option disables this option.

Example

```
CLI (config) # snmp-server user testuser password plain-text testpass auth-protocol SHA
```

snmp-server view

Configures changes to the View-based Access Control Model (VACM) configuration.

Syntax

[no] snmp-server view <name> [excluded | included] <oid>

Parameters

<name>	Specify the user name.
excluded included	Specify the following view options: • excluded - Excludes an oid sub-tree from this view. • included - Includes an OID subtree into this view.
<oid>	Specify the object ID. For example: .1.3.6.1.2.1.1 or .iso.org.dod.internet.mgmt.mib-2.system

Usage

The **no** command option disables this option.

Example

```
CLI (config) # snmp-server view joedoe included .1.3.6.1.2.1.1
```

Logging Commands

This section describes the logging commands.

logging

Adds a remote system log (syslog) server to the system.

Syntax

[no] logging <ip-addr> <cr> | [trap <log level>]

Parameters

<ip-addr>	Specify the IP address for the syslog server.
trap <log level>	Specify the trap log level of the syslog server: • emerg - Emergency, the system is unusable. • alert - Action must be taken immediately. • critical - Critical conditions. • err - Error conditions. • warning - Warning conditions. • notice - Normal but significant condition. • info - Informational messages. If you have set different log levels for each remote syslog server, this option changes all remote syslog servers to have a single log level.

Usage

The **no** command option removes a remote **syslog** server from the system.

Example

```
CLI (config) # logging 10.0.0.2
```

logging files delete

Deletes the oldest log file or a specified number of the oldest log files.

Syntax

logging files delete oldest <number>

Parameters

oldest <number>	Specify the number of old log files to delete. The range is 1-10 .
------------------------------	---

Usage

You can also access this command from enable mode.

Example

```
CLI (config) # logging files delete oldest 10
```

logging files rotation criteria frequency

Sets the frequency of log rotation.

Syntax

logging files rotation criteria frequency <rotation frequency>

Parameters

<rotation frequency>	Specify how often log rotation occurs: monthly , weekly , daily The size of the log file is checked every 10 minutes.
-----------------------------------	--

Usage

The size of the log file is checked every 10 minutes. If there is an unusually large amount of logging activity, it is possible for a log file to grow larger than the set limit in that period of time.

Example

```
CLI (config) # logging files rotation criteria frequency weekly
```

logging files rotation criteria size

Sets the size, in MB, of the log file before rotation occurs.

Syntax

logging files rotation criteria size <size>

Parameters

<size>	Specify the size of the log file to save in MB. The default value is 0 (unlimited).
---------------------	---

Usage

The size of the log file is checked every 10 minutes. If there is an unusually large amount of logging activity, it is possible for a log file to grow larger than the set limit in that period of time.

Example

```
CLI (config) # logging files rotation criteria size 100
```

logging files rotation force

Rotates logs immediately.

Syntax

logging files rotation force

Parameters

None

Usage

The size of the log file is checked every 10 minutes. If there is an unusually large amount of logging activity, it is possible for a log file to grow larger than the set limit in that period of time.

Example

```
CLI (config) # logging files rotation force
```

logging files rotation max-num

Sets the maximum number of log files to keep locally.

Syntax

logging files rotation max-num <number>

Parameters

<number> Specify the number of log files to keep locally. The range is 1-100. The default value is 10.

Usage

The size of the log file is checked every 10 minutes. If there is an unusually large amount of logging activity, it is possible for a log file to grow larger than the set limit in that period of time.

Example

```
CLI (config) # logging files rotation max-num 10
```

logging filter

Sets the minimal level of messages arriving from the specified process to the local subsystem.

Syntax

logging filter <process> <level>

Parameters

<process> Specify the application process:

- **cli** - Command-Line Interface.
- **hald** - Hardware Abstraction Daemon.
- **mgmtd** - Device Control and Management.
- **pm** - Process Manager.
- **sched** - CRON job scheduler.
- **statssd** - Statistics manager.
- **wdt** - Kernel watchdog timer.
- **webasd** - Web application server daemon.

<level> Specify the trap log level:

- **emerg** - Emergency, the system is unusable.
- **alert** - Action must be taken immediately.
- **critical** - Critical conditions.
- **err** - Error conditions.
- **warning** - Warning conditions.
- **notice** - Normal but significant condition.
- **info** - Informational messages.

If you have set different log levels for each remote **syslog** server, this option changes all remote **syslog** servers to have a single log level.

Usage

Use this command to capture data when a AltaVault is not able to sustain the flow of logging data that is being committed to disk. This command overrides the **logging local** command. This command creates a global setting that controls all output, including remote hosts.

All remote logging hosts (if defined) also log at **logging trap** setting and at the logging filter process.

The **no logging filter all** command deletes all filters.

Example

```
CLI (config) # logging filter cli alert
```

logging local

Sets the minimum severity of log messages saved on the local syslog servers.

Syntax

[no] logging local <loglevel>

Parameters

<loglevel>	Specify the logging severity level. The follow severity levels are supported: • emerg - Emergency, the system is unusable. • alert - Action must be taken immediately. • crit -Critical conditions. • err - Error conditions. • warning - Warning conditions. • notice - Normal but significant condition. • info - Informational messages. The default value is notice.
-------------------------	--

Usage

The **no** command option sets the severity level for logging to none (no logs are sent).

Example

```
CLI (config) # logging local notice
```

logging trap

Sets the minimum severity for messages sent to the remote syslog servers.

Syntax

[no] logging trap <loglevel>

Parameters

<loglevel>	Specify the logging severity level. The follow severity levels are supported: • emerg - Emergency, the system is unusable. • alert - Action must be taken immediately. • crit -Critical conditions. • err - Error conditions. • warning - Warning conditions. • notice - Normal but significant condition. • info - Informational messages. The default value is notice.
-------------------------	--

Usage

The **no** command option sets the severity level for logging to none.

Example

```
CLI (config) # logging trap notice
```

License and Hardware Upgrade Commands

This section describes the license and hardware upgrade commands.

boot bootloader password

Sets the password for the bootloader.

Syntax

boot bootloader password {<password> | 0 <password> | 7 <password>}

Parameters

<password>	Specify a bootloader password in clear text. The password must be at least 6 characters. This option functions the same as the 0 <password> parameter and is provided for backward compatibility.
0 <password>	Specify a bootloader password in clear text.
7 <password>	Specify a bootloader password with an encrypted string. The encrypted string is the hash of the clear text password and is 35 bytes long. The first 3 bytes indicate the hash algorithm and the next 32 bytes are the hash values.

Example

```
CLI (config) # boot bootloader password 0 182roy
```

```
CLI (config) # boot bootloader password 7 $1$QyP/PKii$2v9FOFcXB5a3emuvLKO3M
```

image boot

Boots the specified system image by default.

Syntax

image boot <partition>

Parameters

<partition>	Specify the partition to boot: 1 or 2.
-------------	--

Example

```
CLI # image boot 1
```

license install

Installs a new software license key.

Syntax

[no] **license install** <license key>

Parameters

<license key>	Specify the license key.
---------------	--------------------------

Usage

The **no** command option deletes existing licenses.

Example

```
CLI (config) # license install WW-AB-CD-12-34-56
```

License virtual-model

Changes the model of an AltaVault virtual appliance.

Syntax

license virtual-model <virtual model>

Parameters

<virtual model>	v2 - AVA-v2 (with up to 2TiB local cache)
	v8 - AVA-v8 (with up to 8TiB local cache)
	v16 - AVA-v16 (with up to 16TiB local cache)
	v32 - AVA-v32 (with up to 32TiB local cache)

Usage

Only run this command if the virtual AVA appliance does not have a license installed, such as one created for disaster recovery purposes.

Example

```
CLI (config) # license virtual-model v2
```

System Administration and Service Commands

This section describes the system administration and service commands.

archival enable

Enables the archival mode, which provides specific internal optimization for archiving.

Syntax

[no] archival enable

Parameters

None

Usage

The **no** command option disables the archival mode.

The archival mode optimization helps you write more files of smaller sizes than typical backup file sizes.

You can change the archival mode only when the datastore is empty.

Example

```
CLI (config) # archival enable
```

hardware watchdog enable

Enables the hardware watchdog, which monitors the system for hardware errors.

Syntax

hardware watchdog enable

Parameters

None

Example

```
CLI (config) # hardware watchdog enable
```

hardware watchdog shutdown

Shuts down the hardware watchdog

Syntax

hardware watchdog shutdown

Parameters

None

Example

```
CLI (config) # hardware watchdog shutdown
```

service enable

Starts the AltaVault storage optimization service.

Syntax

[no] service enable

Parameters

None

Usage

The AltaVault storage optimization service is a daemon that executes in the background, performing operations when required.

The storage optimization service enables you to:

- make copies of valuable data.
- store multiple versions when the original data changes.
- store the copies in a location different from the source data location.

The **no** command option disables the AltaVault storage optimization service.

For details, see the *NetApp AltaVault Cloud Integrated Storage Installation Guide* and the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

Example

```
CLI (config) # service enable
```

service restart

Restarts the AltaVault storage optimization service.

Syntax

service restart

Parameters

None

Usage

Many of the AltaVault storage optimization service commands are initiated at startup. Restart the AltaVault service when you make important configuration changes such as cloud provider changes.

Restarting the AltaVault service disrupts front-end sessions (such as SMB, OST, and NFS sessions) established with the AltaVault.

Example

```
CLI (config) # service restart
```

Host Setup Commands

This section describes the host setup commands.

arp

Creates static ARP entries in the ARP table. ARP stands for Address Resolution Protocol. It is used to associate a layer 3 (Network layer) address (such as an IP address) with a layer 2 (Data Link layer) address (MAC address).

Syntax

```
[no] arp <ip-addr> <MAC-addr>
```

Parameters

<ip-addr>	Specify the IP address of the appliance.
<MAC-addr>	Specify the MAC address.

Usage

The **no** command option disables ARP static entries.

Example

```
CLI (config) # arp 10.0.0.1 00:07:E9:55:10:09
```

clock timezone

Sets the current time zone.

Syntax

```
clock timezone <zone>
```

Parameters

<zone>	Specify the time zone name: Africa, America, Antarctica, Arctic, Asia, Atlantic_Ocean, Australia, Europe, GMT-offset, Indian_Ocean, Pacific_Ocean, UTC.
--------	--

Usage

The default value is GMT-offset.

Example

```
CLI (config) # clock timezone Africa
```

hostname

Sets the hostname for this system.

Syntax

```
[no] hostname <hostname>
```

Parameters

<hostname>	Specify the hostname. Do not include the domain name.
-------------------------	---

Usage

The **no** command option removes the hostname for this appliance.

Example

```
CLI (config) # hostname park
```

interface

Configures system interfaces.

Syntax

[no] interface <interfacename> <options>

Parameters

<interfacename>	Specify the interface name: primary .
------------------------------	--

<options>	Each interface has the following configuration options: • arp - Adds static entries to the ARP cache. • description - Configure the description string of this interface. • dhcp - Enables DHCP on the interface. Setting DHCP on the interface only provides an IP lease, and does not update the gateway, routes, and DNS settings. • duplex <speed> - Specify the duplex speed: auto, full, half. The default value is auto. • ip <ip-addr> <netmask> - Specify the IP address and netmask for the interface. • mtu <speed> - Specify the MTU. The MTU is set once on the in-path interface; it propagates automatically to the LAN and the WAN. The no command option disables the MTU setting. The default value is 1500. • shutdown - Shuts down the interface. • speed <speed> - Specify the speed for the interface: auto, 10, 100, 1000. The default value is 100.
------------------------	--

Usage

The **no** command option disables the interface settings.

Example

```
CLI (config) # interface e0A duplex half
```

internal show raw-stats

Displays raw statistics such as anchor bytes, copy operations, and create bucket operations.

Syntax

internal show raw-stats

Parameters

None

Example

```
CLI (config) # internal show raw-stats
```

ip data-gateway

Configures the data interface gateway.

Syntax

[no] ip data-gateway <interface> <destination>

Parameters

<interface>	Specify the values for the interface. Use this parameter to indicate the interface for the data route.
<destination>	Specify the destination IP address.

Usage

The data gateway must be in the same network as the data interface.

The **no** command option disables the IP data gateway for the interface.

Example

```
CLI (config) # ip data-gateway
```

ip data route

Configures the data interface route.

Syntax

[no] ip data route <interface> <network prefix> <network-mask> <next-hop>

Parameters

<interface>	Specify the following values for the interface. Use this parameter to indicate the interface for the data route.
<network prefix>	Specify a network prefix. The network prefix is a combination of an IPv4 prefix (address) and a prefix length. The prefix format is IPv4-prefix/prefix-length. It represents a block of an address space or a network.
<network-mask>	Specify the IP address subnet mask: for example, 255.255.255.0
<next-hop>	Specify the next hop IP address in this route.

Usage

The **no** command option disables the IP data route for the interface.

Example

```
CLI (config) # ip data route
```

ip default-gateway

Sets the default gateway for the appliance.

Syntax

[no] ip default-gateway <ip-addr>

Parameters

<ip-addr>	Specify the IP address of the management interface.
------------------------	---

Usage

This command is used to set the default gateway for the entire appliance. It is primarily used for the primary interfaces for management, but can also be used for out-of-path optimization configurations as well as PFS.

The **no** command option disables the default gateway IP address.

Example

```
CLI (config) # ip default-gateway 10.0.0.12
```

ip domain-list

Adds a domain name to the domain list for resolving hostnames.

Syntax

[no] ip domain list <domain>

Parameters

<domain>	Specify the domain name.
-----------------------	--------------------------

Usage

The **no** command option removes a domain from the domain list.

Example

```
CLI (config) # ip domain-list example.com
```

ip fqdn override

Specifies the fully qualified domain name

Syntax

ip fqdn override

Parameters

None

Usage

The **no** command option removes a domain from the domain list.

Example

```
CLI (config) # ip fqdn override
```

ip host

Adds an entry to the static host table.

Syntax

[no] ip host <hostname> <ip-addr>

Parameters

<hostname>	Specify the hostname.
<ip-addr>	Specify the IP address.

Usage

The **no** command option removes an entry from the static host table.

Example

```
CLI (config) # ip host park 10.10.10.1
```

ip name-server

Adds a DNS name server.

Syntax

[no] ip name-server <ip-addr>

Parameters

<ip-addr>	Specify the name server IP address.
-----------	-------------------------------------

Usage

The **no** command option removes a DNS name server.

Example

```
CLI (config) # ip name-server 10.10.10.1
```

ip route

Adds a static route.

Syntax

[no] ip route <network prefix> <netmask> <netmask length> <next-hop-ip-addr>

Parameters

<network prefix>	Specify the network prefix.
<netmask>	Specify the netmask. For example: 255.255.255.0
<netmask length>	Specify the netmask length. For example: /24
<next-hop-ip-addr>	Specify the next hop IP address.

Usage

The **no** command option disables the static route. If **no ip route** is run with only a network prefix and mask, it deletes all routes for that prefix.

Example

```
CLI (config) # ip route 192 193.166.0/24 10.10.10.1
```

ntp disable

Disables NTP support.

Syntax

[no] ntp disable

Parameters

None

Usage

The **no** command option enables NTP support.

Example

```
CLI (config) # ntp disable
```

ntp enable

Enables NTP support.

Syntax

[no] ntp enable

Parameters

None

Usage

The **no** command option disables NTP support.

Example

```
CLI (config) # ntp enable
```

ntp peer

Enables an NTP peer.

Syntax

[no] ntp peer <ip-addr> [version <number>]

Parameters

<ip-addr>	Specify the NTP peer IP address.
<version <number>	Specify the NTP version number. You do not need to specify the version number for the no ntp peer command.

Usage

The **no** command option disables an NTP peer.

Example

```
CLI (config) # ntp peer 10.10.10.1
```

ntp server

Configures an NTP server with the default NTP version number or with a specified version number.

Syntax

[no] ntp server <ip-addr> <cr> | [version <number>] | key <key>

Parameters

<ip-addr>	Specify the NTP server to synchronize with.
<version <number>	Specify the NTP version number of this server. You do not need to specify the version number for the no ntp server command.
key <key>	Specify the authentication key ID of the server.

Usage

The **no** command option removes an NTP server.

Example

```
CLI (config) # ntp server 10.10.10.1
```

ntp server enable

Enables an NTP server.

Syntax

[no] ntp server <hostname> enable

Parameters

<hostname>	Specify the NTP server to synchronize with.
-------------------------	---

Usage

The **no** command option removes an NTP server.

Example

```
CLI (config) # ntp server companyserver enable
```

Virtual Interface (VIF) Configuration Command

This section describes the virtual interface configuration command.

vif name

Configures a virtual interface

Syntax

[no] vif name <name> [mode <mode>] {interfaces <interface1>, <interface2>} mon-interval <monitoring interval> [enable]

Parameters

name <name>	Specify a name for the virtual interface.
mode <mode>	Optionally, specify one of the following modes for the virtual interface: • 802.3ad. 802.3ad compliant mode. It enables IEEE 802.3ad Dynamic Link Aggregation. This mode enables you to bundle or aggregate multiple physical interfaces into a single VIF and enables load balancing between the interfaces. It conforms to clause 43 of IEEE 802.3 standard (802.3ad). Most switches require some type of configuration to enable the 802.3ad mode. • xmit-tlb. Transmit based on load on the interface. It provides adaptive-transmit load balancing. The AltaVault distributes the outgoing traffic based on the current load on each member interface. One of the member interfaces of the VIF receives the incoming traffic. • xmit-alb. Transmit/receive based on load on the interface. It provides both transmit and receive load balancing. You can use this mode to deploy VIFs for both HA and load balancing.
interfaces <interface1>, <interface2>	Optionally, specify a comma-separated list of the data interfaces that are members of this VIF.
mon-interval <monitoring interval>	Optionally, specify the Media Independent Interface (MII) link monitoring frequency in milliseconds. This determines how often the link state of each slave is inspected for link failures. A value of zero disables MII link monitoring. A value of 50 is a good starting point.
enable	Optionally, enable the VIF.

Usage

The **no** command option disables the VIF.

Example

```
CLI (config) # vif name vif1 mode 802.3ad interfaces
```

VLAN Interface Configuration Commands

vlan interface

Configures a VLAN tagging interface.

Syntax

vlan interface <interface> vid <vid>

no vlan interface <vlan-interface>

Parameters

interface <interface>	Physical or Virtual interface that will be the parent of this VLAN interface.
vid <vid>	VLAN ID, which is a 12bit field specifying the VLAN. Valid ranges are from 2 to 4094.
interface <vlan-interface>	Name of the VLAN interface to remove.

Usage

The **no** option for this command removes the interface from the VLAN.

Example

```
CLI (config) # vlan interface e0a vid 2
```

```
CLI (config) # no vlan interface e0a.2
```

AltaVault Appliance Feature Configuration Commands

This section describes commands you use to configure the AltaVault features. It includes the following sections:

- “Job Commands” on page 129
- “Debugging Commands” on page 132
- “OST Commands” on page 136
- “SMB Commands” on page 140

AltaVault Appliance TCP Dump Commands

This section describes the AltaVault TCP dump commands. The system also runs the standard tcpdump utility. For detailed information, see “tcpdump” on page 39.

tcpdump-x all-interfaces

Configures a list of all interfaces for a TCP dump capture.

Syntax

```
[no] tcpdump-x all-interfaces capture-name <capture-name> continuous <cr> | | buffer-size <size in KB> | duration  
<seconds> <cr> [schedule-time <HH:MM:SS> [schedule-date <YYYY/MM/DD>]] | [rotate-count <# files>] | [snaplength  
<snaplength>] | [sip <src-addr>] | [dip <dst-addr>] | [sport <src-port>] | [dport <dst-port>] | [dot1q] | [custom <custom-  
param>] | [file-size <megabytes>]
```

Parameters

capture-name <capture-name>	Specify a capture name to help you identify the TCP Dump. The default filename uses the following format: <hostname>_<interface>_<timestamp>.cap where: <i>hostname</i> is the hostname of the AltaVault <i>interface</i> is the name of the interface selected for the trace (for example, lan0_0 , wan0_0) <i>timestamp</i> is in the YYYY-MM-DD-HH-MM-SS format. Note: The .cap file extension is not included with the filename when it appears in the capture queue.
continuous	Start a continuous capture.
buffer-size <size in KB>	Specify the size (in KB) for all packets.
duration <seconds>	Specify the run time for the capture in seconds.
schedule-time <HH:MM:SS>	Specify a time to initiate the trace dump in the following format: HH:MM:SS.
schedule-date <YYYY/MM/DD>	Specify a date to initiate the trace dump in the following format: YYYY/MM/DD.
rotate-count <# files>	Specify the number of files to rotate.
snaplength <snaplength>	Specify the snap length value for the trace dump. The default value is 300. Specify 0 for a full packet capture (that is, SMB, MAPI, and SSL).
sip <src-addr>	Specify a comma-separated list of source IP addresses. The default setting is all IP addresses.
dip <dst-addr>	Specify a comma-separated list of destination IP addresses. The default setting is all IP addresses.
sport <src-port>	Specify a comma-separated list of source ports. The default setting is all ports.
dport <dst-port>	Specify a comma-separated list of destination ports. The default setting is all ports.
dot1q	Filter dot1q packets. For detailed information about dot1q VLAN tunneling, see your networking equipment documentation.
custom <custom-param>	Specify custom parameters for packet capture.
file-size <megabytes>	Specify the file size of the capture in megabytes.

Usage

You can capture and retrieve multiple TCP trace dumps. You can generate trace dumps from multiple interfaces at the same time and you can schedule a specific date and time to generate a trace dump.

Example

```
CLI (config) # tcpdump-x all-interfaces capture-name continuous duration 120
```

tcpdump-x capture-name stop

Stops the specified TCP dump capture.

Syntax

```
[no] tcpdump-x capture-name <capture-name> stop
```

Parameters

<capture-name>	Specify the capture name to stop.
-----------------------------	-----------------------------------

Example

```
CLI (config) # tcpdump-x capture-name example stop
```

tcpdump-x interfaces

Configures a comma-separated list of interfaces to capture in the background.

Syntax

```
[no] tcpdump-x interfaces <interface-name> continuous <cr> | duration <seconds> <cr> [schedule-time <HH:MM:SS>
[schedule-date <YYYY/MM/DD>]] | [rotate-count <# files>] | [snaplength <snaplength>] | [sip <src-addr>] | [dip <dst-
addr>] | [sport <src-port>] [dport <dst-port>] | [dot1q] | [custom <custom-param>] | [file-size <megabytes>]
```

Parameters

<interface-name>	Specify a comma-separated list of interfaces: primary .
continuous	Start a continuous capture.
duration <seconds>	Specify the run time for the capture in seconds.
schedule-time <HH:MM:SS>	Specify a time to initiate the trace dump in the following format: HH:MM:SS
schedule-date <YYYY/MM/DD>	Specify a date to initiate the trace dump in the following format: YYYY/MM/DD
rotate-count <#files>	Specify the number of files to rotate.
snaplength <snaplength>	Specify the snap length value for the trace dump. The default value is 300. Specify 0 for a full packet capture (that is, SMB, MAPI, and SSL).
sip <src-addr>	Specify the source IP addresses. The default setting is all IP addresses.
dip <dst-addr>	Specify a comma-separated list of destination IP addresses. The default setting is all IP addresses.
sport <src-port>	Specify a comma-separated list of source ports. The default setting is all ports.
dport <dst-port>	Specify a comma-separated list of destination ports. The default setting is all ports.
dot1q	Filter dot1q packets. For detailed information about dot1q VLAN tunneling, see your networking equipment documentation.
custom <custom-param>	Specify custom parameters for packet capture.
file-size <megabytes>	Specify the file size of the capture in megabytes.

Example

```
CLI (config) # tcpdump-x interfaces
```

tcpdump stop-trigger delay

Configures the time to wait before stopping a TCP dump.

Syntax

```
tcpdump stop-trigger delay <duration>
```

Parameters

delay <duration>	Specify the amount of time to wait before stopping all TCP running dumps when the system finds a match. The default delay is 30 seconds.
-------------------------------	--

Usage

You might not want to stop your TCP dump immediately. By configuring a delay, the system has time to log more data without abruptly cutting off the dumps.

Example

```
CLI (config) # tcpdump stop-trigger delay 10
```

tcpdump stop-trigger enable

Enables the TCP dump to stop running, triggered by a match against a configured regular expression and the system log file.

Syntax

[no] tcpdump stop-trigger enable

Parameters

None

Example

```
CLI (config) # tcpdump stop-trigger enable
```

Usage

There is a limit to the amount of TCP dump data the system can collect. After a problem occurs, the TCP dump buffer could have rotated, overwriting the information about the problem. This command enables a trigger that stops a continuous TCP dump after a specific log event occurs. This enables you to troubleshoot issues and isolate the TCP dump data specific to a problem.

The **no** version of the command disables the TCP dump stop-trigger process.

tcpdump stop-trigger regex

Logs the regular expression that triggers the stopping of TCP dumps.

Syntax

tcpdump stop-trigger regex <regular_expression>

Parameters

regex <regular_expression>	Specify a Perl regular expression to match. The system compares the Perl regular expression against each entry made to the system logs. The system matches on a per-line basis.
---	---

Example

```
CLI (config) # tcpdump stop-trigger regex
```

tcpdump stop-trigger restart

Restarts the TCP dump stop-trigger process.

Syntax

tcpdump stop-trigger restart

Parameters

None

Usage

If you change the regular expression or delay, use the **tcpdump stop-trigger restart** command to restart the stop-trigger process.

Example

```
CLI (config) # tcpdump stop-trigger restart
```

Job Commands

This section describes commands for running jobs in the system.

job command

Schedules CLI command execution for a specified time in the future.

Syntax

```
[no] job <job-id> command <sequence #> <"cli-command">
```

Parameters

<job-id>	Specify the job identification number.
<sequence #>	Specify the sequence number for job execution. The sequence number is an integer that controls the order in which a CLI command is executed. CLI commands are executed from the smallest to the largest sequence number.
<"cli-command">	Specify the CLI command. Enclose the command in double-quotes.

Usage

A job includes a set of CLI commands and a time when the job runs. Jobs are run one time only, but they can be reused.

Any number of CLI commands can be specified with a job and are executed in an order specified by sequence numbers. If a CLI command in the sequence fails, no further commands in the job are executed. A job can have an empty set of CLI commands.

The output of all commands executed are saved to a file, viewable after job execution by running the **show job <job-id>** command. The output of each command is simply appended to the file; the file is re-written upon each execution.

The job output and any error messages are saved. Jobs can be canceled and rescheduled.

The **no job <job-id> command <sequence #>** command option deletes the CLI command from the job.

The **no job <job-id>** command option removes all statistics associated with the specified job. If the job has not executed, the timer event is canceled. If the job was executed, the results are deleted along with the job statistics.

Example

```
CLI (config) # job 10 command 1 "show info"
CLI (config) # job 10 command 2 "show connections"
CLI (config) # job 10 command 3 "show version"
```

job comment

Adds a comment to the job for display when **show jobs** is run.

Syntax

```
[no] job <job-id> comment <"description">
```

Parameters

<job-id>	Specify the job identification number.
comment <"description">	Specify the comment for the job. Enclose the description in double-quotes.

Usage

The **no** command option deletes the comment.

Example

```
CLI (config) # job 10 "comment this is a test"
```

job date-time

Sets the date and time for the job to execute.

Syntax

[no] job <job-id> date-time <hh>:<mm>:<ss> <cr>|<yyyy>/<mm>/<dd>

Parameters

<job-id>	Specify the job identification number.
<hh>:<mm>:<ss> <cr> [<date>]	Specify the time for the job to execute.
<yyyy>/<mm>/<dd>	Specify the date for the job to execute.

Usage

If the time specified is in the past, the job does not execute and is in the inactive state.

The **no** command option disables the date and time settings.

Example

```
CLI (config) # job 10 date-time 04:30:23
```

job enable

Enables a CLI command job to execute at the date and time specified in the job.

Syntax

[no] job <job-id> enable

Parameters

<job-id>	Specify the job identification number.
-----------------------	--

Usage

The **no** command option disables jobs.

Example

```
CLI (config) # job 10 enable
```

job execute

Forces an immediate execution of a job. The timer (if set) is canceled, and the job is moved to the completed state.

Syntax

job <job-id> execute

Parameters

<job-id>	Specify the job identification number.
----------	--

Usage

You can also access this command from enable mode.

Example

```
CLI (config) # job 10 execute
```

job fail-continue

Executes all commands in a job even if a command in the sequence fails.

Syntax

[no] job <job-id> fail-continue

Parameters

<job-id>	Specify the job identification number.
----------	--

Usage

The **no** command option disables this command.

Example

```
CLI (config) # job 10 fail-continue
```

job name

Sets the name for the job.

Syntax

[no] job <job-id> name <friendly-name>

Parameters

<job-id>	Specify the job identification number.
<friendly-name>	Specify a name for the job.

Usage

The **no** command option deletes the job name.

Example

```
CLI (config) # job 10 name myjob
```

job recurring

Sets the frequency with which to recurrently execute this job.

Syntax

[no] job <job-id> recurring <seconds>

Parameters

<job-id>	Specify the job identification number.
<seconds>	Specify how frequently the recurring job should execute.

Example

```
CLI (config) # job 10 recurring 36000
```

Debugging Commands

This section describes the commands to debug the system.

debug generate dump

Generates a report you can use to diagnose configuration issues in deployments.

Syntax

```
debug generate dump [full | brief | stats] <dump_name> upload <case# | url>
```

Parameters

full	Generates a full system dump.
brief	Generates a brief system dump.
stats	Generates a full system dump including .dat files.
dump_name	Specify the name of the file to upload.
upload <case# url>	Generate a full system dump and specify the customer case number or URL to upload to NetApp Technical Support. The case number is an alphanumeric string.

Usage

Specifying the case number is a convenient and intuitive method for generating and uploading a system dump, compared to using a URL. You can still specify a full URL in place of a case number. In this case, the report is uploaded to the specified URL instead of the URL being constructed from the case number.

If the URL points to a directory on the upload server, you must specify the trailing slash "/" : for example, ftp://ftp.netapp.com/incoming/ and not ftp://ftp.netapp.com/incoming. The filename as it exists on the appliance is renamed to the file name specified in the URL.

After the dump generation, the upload is done in the background so you can exit the command-line interface without interrupting the upload process.

Example

```
CLI (config) # debug generate dump brief
```

file debug-dump upload

Uploads the specified debug dump file.

Syntax

```
file debug-dump upload <filename> <ftp or scp://username:password@host/path>
```

Parameters

<filename>	Specify the filename.
<<ftp or scp URL (e.g. scp://username:password@host/path)>	Specify the FTP or scp URL

Example

```
CLI (config) # file debug-dump upload mydebug.txt scp://me:test@example.com/mypath
```

file process-dump delete

Deletes the specified crash dump file.

Syntax

file process-dump delete <filename>

Parameters

<filename>	Specify the filename.
------------	-----------------------

Example

```
CLI (config) # file process-dump delete mycrash.txt
```

file process-dump upload

Uploads the specified crash dump file.

Syntax

file process-dump upload <filename> <ftp or scp://username:password@hostname/path/filename>

Parameters

<filename>	Specify the filename.
<ftp or scp://username:password@hostname/path/filename>	Specify the FTP or scp URL.

Example

```
CLI (config) # file process-dump upload mycrash.txt scp://mylogin:mypassword@myhostname/path/filename
```

file upload clear-stats

Deletes the file upload statistics.

Syntax

file upload clear-stats

Parameters

None

Example

```
CLI (config) # file upload clear-stats
```

file upload stop

Stops the system from uploading a file.

Syntax

file upload stop

Parameters

None

Example

```
CLI (config) # file upload stop
```

stats email schedule

Schedules periodic emails containing AltaVault statistics.

Syntax

[no] stats email schedule enable | minute <0-59> hour <time in hours> day-of-month <1-31> month <1-12>

Parameters

minute <single number, comma-separated list, range, or asterisk for all values>	Type one of the following values to specify that the system should email the statistics in minutes: A single integer such as 20 or 9. A comma-separated list of numbers such as 2, 3, 5, 7. A range of numbers such as 0-32. The asterisk symbol (*) for all values.
hour <0-23>	Type a number between 0 through 23 to specify that the system should email statistics at this hour of the day.
day-of-month <1-31>	Type a number between 1 through 31 to specify the day of the month on which the system should email statistics.
month <1-12>	Type a number between 1 through 12 to specify the month on which the system should email statistics.

Usage

The email provides the status of the AltaVault storage optimization, replicated data, disk storage allocation, and cloud storage allocation.

The **no** command option disables the statistics email scheduling.

Example

```
CLI (config) # stats email schedule minute 10 hour 4 day-of-month 1 month 6
```

upload-sysdump enable

Generates an automatic system dump (whenever an alarm is triggered) and uploads it to the NetApp Support site.

Syntax

upload-sysdump enable

Parameters

None

Example

```
CLI (config) # upload-sysdump enable
```

Raid Commands

This section describes the RAID commands.

hwraid beacon-start

Starts the blink disk LED in the hardware RAID array.

Syntax

```
hwraid beacon-start serial <serial_number> slot <slot_number>
```

Parameters

serial <serial_number>	Specify the serial number of the disk on which the hardware RAID array blink disk LED should start. Obtain the serial number using the show hwraid disk information command.
slot <slot_number>	Specify the slot number in which the hardware RAID array blink disk LED should start.

Example

```
CLI (config) # hwraid beacon-start serial XBFGG000032D0 slot 1
```

hwraid beacon-stop

Stops the blink disk LED in the hardware RAID array.

Syntax

```
hwraid beacon-stop serial <serial_number> slot <slot_number>
```

Parameters

serial <serial_number>	Specify the serial number of the disk on which the hardware RAID array blink disk LED should stop. Obtain the serial number using the show hwraid disk information command.
slot <slot_number>	Specify the slot number in which the hardware RAID array blink disk LED should stop.

Example

```
CLI (config) # hwraid beacon-stop serial XBFGG000032D0 slot 1
```

hwraid disk-add

Adds a disk to the hardware RAID array.

Syntax

```
hwraid disk-add serial <serial_number> slot <slot_number>
```

Parameters

serial <serial_number>	Specify the serial number of the disk that you are adding to the hardware RAID array. Obtain the serial number using the show hwraid disk information command.
slot <slot_number>	Specify the slot number into which you are adding the disk.

Example

```
CLI (config) # hwraid disk-add serial 012345 slot 2
```

hwraid disk-fail

Marks a disk in the hardware RAID as failed. The array is degraded during this time.

Syntax

hwraid disk-add serial <serial_number> **slot** <slot_number>

Parameters

serial <serial_number>	Specify the serial number of the disk that you are marking as failed in the hardware RAID array. Obtain the serial number using the show hwraid disk information command.
slot <slot_number>	Specify the slot number from which you are removing the disk.

Example

```
CLI (config) # hwraid disk-add serial 012345 slot 2
```

Usage

Use this command for testing.

raid alarm silence

Silences the RAID alarm.

Syntax

raid alarm silence

Parameters

None

Example

```
CLI (config) # raid alarm silence
```

OST Commands

This section describes the AltaVault OST commands.

ost enable

This command enables the OST data path from NetBackup to AltaVault.

Syntax

[no] ost enable

Parameters

None

Usage

The **no** command option disables the OST protocol service (you cannot access or configure SMB shares).

Example

```
CLI (config) # ost enable
```

ost ssl enable

This command enables SSL for communication between NetBackup and AltaVault. Incoming connections will use secure port 8085.

Syntax

[no] ost ssl enable

Parameters

None

Usage

The **no** command option disables the SSL communication between NetBackup servers and AltaVault.

Example

```
CLI (config) # ost enable
```

ost share add

This command adds an OST share to the AltaVault SMB server.

Syntax

ost share add name <name> type {regular | cloud} [pin] [no-dedup] [no-compression] [early-eviction]

Parameters

name <name>	Specify the name of the share to be added to the AltaVault OST server.
type {regular cloud}	Specify whether the OST share is a regular or cloud share.
pin	Optionally, configures the share configured to be pinned. Share pinning enables the share to always contain data that is available to the AltaVault locally, without requiring it to be fetched from the cloud.
no-dedup	Optionally, specifies that data written to this share should not be checked for duplication. The AltaVault does not check if there is duplication of the data written to the share and not does perform de-duplication.
no-compression	Optionally, disables compression of any data written to the share. This is useful if you are copying over already-compressed data (for example: photos, videos, or proprietary formats such as medical data that might be compressed and encrypted already).
early-eviction	Optionally, specifies that data from the share must be assigned a higher priority for early eviction from the AltaVault.

Example

```
CLI (config) # ost share add name foobar type regular pin
```

ost share modify

This command modifies the parameters of the OST share.

Syntax

ost share modify name <name> [no-dedup] [no-compression] [early-eviction]

Parameters

name <name>	Specify the name of the OST share.
no-dedup	Specifies that data written to this share should not be checked for duplication. The AltaVault does not check if there is duplication of the data written to the share and not does perform de-duplication.
no-compression	Disables compression of any data written to the share. This is useful if you are copying over already-compressed data (for example: photos, videos, or proprietary formats such as medical data that might be compressed and encrypted already).
early-eviction	Specifies that data from the share must be assigned a higher priority for early eviction from the AltaVault.

Example

```
CLI (config) # ost share modify name foo early-eviction no-dedup
```

ost share remove

This command deletes an OST share from the AltaVault OST server.

Syntax

```
ost share remove name <name>
```

Parameters

name <name>	Specify the name of the share to be deleted from the AltaVault OST server.
--------------------------	--

Example

```
CLI (config) # ost share remove name foo
```

ost share unpin

This command unpins the OST share on the AltaVault.

Syntax

```
ost share unpin [name <name>] [all] [force]
```

Parameters

name <name>	Specify the name of the SMB share to unpin.
all	Optionally, unpins all shares.

Example

```
CLI (config) # ost share unpin name foo
```

ost user add

This command adds local user access to the OST share.

Syntax

```
ost user add share name <name> username <user_name> password <password>
```

Parameters

name <name>	Specify the name of the OST share for which to add the user.
username <user_name> >	Specify the name of user who can access the OST share.
[password <password>]	Specify a password to authenticate the user who can access the OST share.

Example

```
CLI (config) # ost user add name jdoe password test123
```

ost user change-passwd

This command changes the password of a user who can access the OST share.

Syntax

ost user change-passwd share name <name> username <name> password <password>

Parameters

name <name>	Specify the OST share.
username <name>	Specify the name of the user who can access the OST share.
password <password>	Change the password of the OST user by specifying a new password.

Example

```
CLI (config) # ost user change-passwd share name foo username test_user password test123
```

ost user enable

This command enables the specified user to access the OST share.

Syntax

[no] ost user enable share name <name> username <username>

Parameters

name <name>	Specify the name of the OST share.
username <username>	Specify the user of the OST share.

Usage

The no version of this command disables user access.

Example

```
CLI (config) # ost user enable share name foo username bar
```

ost user remove

This command removes user access the OST share.

Syntax

ost user remove share name <name> username <username>

Parameters

name <name>	Specifies the name of the OST share.
username <username>	Specifies the user of the OST share.

Example

```
CLI (config) # ost user remove share name foo username bar
```

SMB Commands

This sections describes the AltaVault Server Message Block (SMB) commands. SMB is a network protocol for sharing files on a LAN. It enables a client to manage files just as if they were on a local computer. It supports operations such as read, write, create, delete, and rename of the files that are on a remote server.

smb domain join

This command joins the AltaVault to an Active Directory (AD) domain.

Syntax

```
smb domain join name <domain name> username <domain user name> password <password> [hostname <hostname>]
```

Parameters

name <domain name>	Specify the name of the AD domain that the AltaVault should join. If your system has an AD domain, then you can add the AltaVault to your AD domain and create share permissions for AD users and groups.
user name <domain user name>	Specify the user name of a user to access the AD domain. The user name must be a part of the AD and the user must have permissions to add computers to the domain.
password<password>	Specify a password to authenticate the user.
hostname <hostname>	Optionally, specify the hostname that the AltaVault must use to join the AD domain. The AltaVault appears as the hostname in the AD domain.

Example

```
CLI (config) # smb domain join name my-domain username Administrator password NetApp123
```

smb domain leave

This command removes the AltaVault from an Active Directory (AD) domain.

Syntax

```
smb domain leave name <domain name> username <domain user name> password <password>
```

Parameters

name <domain name>	Specify the fully qualified AD domain name that the AltaVault should be disconnected from.
username <domain user name>	Specify the user name of a user to access the AD domain. The user name must be a part of the AD and the user must have permissions to add computers to the domain.
password <password>	Specify a password to authenticate the user.

Example

```
CLI (config) # smb domain leave name my-domain username Administrator password NetApp123
```

smb domain refresh

This command refreshes the machine password used between SMB server and Active Directory (AD) domain server, then rejoins to the AD domain.

Syntax

smb domain refresh name <domain name> username <domain user name> password <password> [hostname <hostname>]

Parameters

name <domain name>	Specify the name of the AD domain that the AltaVault should join. If your system has an AD domain, then you can add the AltaVault to your AD domain and create share permissions for AD users and groups.
user name <domain user name>	Specify the user name of a user to access the AD domain. The user name must be a part of the AD and the user must have permissions to add computers to the domain.
password<password>	Specify a password to authenticate the user.
hostname <hostname>	Optionally, specify the hostname that the AltaVault must use to join the AD domain. The AltaVault appears as the hostname in the AD domain.

Example

```
CLI (config) # smb domain refresh username Administrator password NetApp123
```

smb enable

This command enables the SMB protocol service on the AltaVault.

Syntax

[no] smb enable

Parameters

None

Usage

The **no** command option disables the SMB protocol service (you cannot access or configure SMB shares). SMB is a protocol that enables programs to request files and services on remote computers on the Internet.

Example

```
CLI (config) # smb enable
```

smb logging

This command sets the log level of the SMB server to dump messages of the specified log level and higher.

Syntax

smb logging level <log-level>

Parameters

level <log-level>	Specify one of the following values for log-level: err - Errors warn - Warnings api - APIs test - Test info - Information debug - Debug trace - Trace all - All levels of messages
--------------------------------	--

Example

```
CLI (config) # smb logging level err
```

smb multichannel enable

This command enables global SMB multichannel on the appliance.

Syntax

[no] smb multichannel enable

Parameters

None

Usage

The **no** command option disables global SMB multichannel support on the appliance.

Example

```
CLI (config) # smb multichannel enable
```

smb multichannel interface

This command enables SMB multichannel on a data interface.

Syntax

[no] smb multichannel interface <name> enable

Parameters

interface <name>	Specify the name of the data interface on the AltaVault.
enable	Enable multichannel support on the specified data interface.

Usage

The **no** command option disables global SMB multichannel support on the specified data interface.

Example

```
CLI (config) # smb multichannel interface e0a enable
```

smb share add

This command adds an SMB share to the AltaVault SMB server.

Syntax

smb share add name <share_name> path <pathname> [comment <string>] [default-deny] [read-only] [pin] [no-dedup] [no-compression] [early-eviction]

Parameters

name <share_name>	Specify the name of the share to be added to the AltaVault SMB server.
path <pathname>	Specify the pathname of the share to be added to the AltaVault SMB server.
comment <string>	Optionally, specify a comment about the share.
default-deny	Optionally, deny all clients access to the share.
read-only	Optionally, specify the share to be a read-only share (disable write access on the share).
pin	Optionally, Configures the share configured to be pinned. Share pinning enables the share to always contain data that is available to the AltaVault locally, without requiring it to be fetched from the cloud.
no-dedup	Specifies that data written to this share should not be checked for duplication. The AltaVault does not check if there is duplication of the data written to the share and not does perform de-duplication.
no-compression	Disables compression of any data written to the share. This is useful if you are copying over already-compressed data (for example: photos, videos, or proprietary formats such as medical data that might be compressed and encrypted already).
early-eviction	Specifies that data from the share must be assigned a higher priority for early eviction from the AltaVault.

Usage

SMB is a protocol that enables programs to request files and services on remote computers on the Internet.

Example

```
CLI (config) # smb share add name sharepoint path sharepointpath pin
```

smb share modify

This command modifies the parameters of the SMB share.

Syntax

[no] smb share modify name <name> [comment <comment>] [read-only] [no-dedup] [no-compression] [early-eviction]

Parameters

name <name>	Specify the name of the SMB share.
comment <comment>	Optionally, specify a comment about the SMB share.
read-only	Optionally, specify the share to be a read-only share (disabling write access on the share).
no-dedup	Specifies that data written to this share should not be checked for duplication. The AltaVault does not check if there is duplication of the data written to the share and not does perform de-duplication.
no-compression	Disables compression of any data written to the share. This is useful if you are copying over already-compressed data (for example: photos, videos, or proprietary formats such as medical data that might be compressed and encrypted already).
early-eviction	Specifies that data from the share must be assigned a higher priority for early eviction from the AltaVault.

Usage

The **no** command option removes the specified parameters configured for the SMB share.

Example

```
CLI (config) # smb share modify name sharepoint early-eviction no-dedup
```

smb share remove

Deletes an SMB share from the AltaVault SMB server.

Syntax

smb share remove name <share_name>

Parameters

name <share_name>	Specify the name of the share to be deleted from the AltaVault SMB server.
--------------------------------	--

Usage

SMB is a protocol that enables programs to request for files and services on remote computers on the Internet.

Example

```
CLI (config) # smb share remove name sharepoint
```

smb share unpin

This command unpins the SMB share on the AltaVault.

Syntax

smb share unpin [name <name>] [all]

Parameters

name <name>	Specify the name of the SMB share to unpin.
all	Optionally, unpins all shares.

Usage

SMB is a protocol that enables programs to request files and services on remote computers on the Internet.

Example

```
CLI (config) # smb share unpin name
```

smb share permission add

This command adds local user permission to access an SMB share on the AltaVault.

Syntax

smb share permission add name <name> user <user name> access {allow| deny}

Parameters

name <name>	Specify the name of the SMB share.
user <user name>	Specify the name of the user who can access the share.
access {allow deny}	Specify whether to allow or deny user access to the SMB share.

Example

```
CLI (config) # smb share permission add name foo user admin access allow
```

smb share permission modify

This command modifies specific SMB share permissions for a local user to access the SMB share.

Syntax

smb share permission modify name <name> user <user name> acl <acl permissions> access {allow | deny}

Parameters

name <name>	Specify the name of the SMB share.
user <user name>	Specify the name of the user who can access the share.
acl	Specify one of the following values for the Access Control List (ACL): read - Read permission. write - Read and write permission. modify - Read, write, and modify permission.
access {allow deny}	Specify whether to allow or deny user access to the SMB share.

Example

```
CLI (config) # smb share permission modify name foo user admin acl write access allow
```

smb share permission remove

This command removes local user permission to access an SMB share on the AltaVault.

Syntax

smb share permission remove name <name> user <user name>

Parameters

name <name>	Specify the name of the SMB share.
user <user name>	Specify the name of the user who can access the share.

Example

```
CLI (config) # smb share permission remove name foo user admin
```

smb user add

This command adds SMB local user for authentication.

Syntax

smb user add name <username> [password <password>] [admin] [disable]

Parameters

name <name>	Specify the name of user who can access the SMB share.
password	Optionally, specify a password to authenticate the user who can access the SMB share.
admin	Optionally, enable administrative user privilege. By default, administrative user privilege is disabled.
disable	Optionally, specify whether the user is disabled from accessing the SMB share.

Parameters**Example**

```
CLI (config) # smb user add name jdoe password test123 admin
```

smb user enable

This command enables the specified user to access the SMB share.

Syntax

smb user enable name <username>

Parameters

<name> <username>	Specify the name of the SMB user to be able to access the SMB share.
-------------------	--

Example

```
CLI (config) # smb user enable name test_user
```

smb user disable

This command disables the specified user from accessing the SMB share.

Syntax

smb user disable name <username>

Parameters

<name> <username>	Specify the name of the SMB user to be disabled from accessing the SMB share.
-------------------	---

Example

```
CLI (config) # smb user disable name test_user
```

smb user password

This command changes the password a user who can access the SMB share.

Syntax

smb user password name <name> new-password <password>

Parameters

name <name>	Specify the user who can access the SMB share.
new-password <password>	Change the password of the SMB user by specifying a new password.

Example

```
CLI (config) # smb user password name foo new-password test123
```

smb user remove

This command deletes the name of the user who can access the SMB share.

Syntax

smb user remove name <username>

Parameters

name <username>	Specify the name of SMB user to be deleted.
------------------------------	---

Example

```
CLI (config) # smb user remove name jdoe
```

Data Store Commands

This section describes the AltaVault data store commands.

datastore encryption

Exports, generates, imports, or resets the data store encryption key.

Syntax

datastore encryption {export-key | generate-key [passphrase (passphrase)] | import-key [legacy] [passphrase (passphrase)] | reset-key}

Parameters

export-key	Exports the data store encryption key.
generate-key [passphrase (pass phrase)]	Generates the data store encryption key. Type a new key pass-phrase (a string of words) in the text box next to New Key pass-phrase. You must enter the same pass-phrase when you import the encryption key.
import-key [legacy] [passphrase (pass phrase)]	Imports the data store encryption key you specify. Specify whether the system should use the legacy password (that you used in AltaVault v3.0 and earlier) or specify a pass phrase to ensure that your encryption key is secure.
rotate-key new-passphrase <new pass phrase>	Creates a new pass phrase for the encryption key. You must enter the same pass phrase when you export or import the encryption key. In case your encryption key is compromised, you can specify a new pass phrase in this command and rotate the encryption key to keep your data secure.
reset-key	Deletes the data store encryption key and resets the password.

Usage

Important: You cannot recover data from the cloud without the encryption pass phrase. Store the pass phrase in a secure location on your local disk, because the AltaVault does not store the pass phrase anywhere.

Example

```
CLI (config) # datastore encryption export-key
```

datastore encryption password

Configures data store encryption password settings.

Syntax

datastore encryption password change old-password <old password> new-password <new password>

Parameters

old-password <old password>	Specify the old password for the data store encryption key.
new-password <new password>	Specify the new password for the data store encryption key.

Usage

You cannot recover data from the cloud without the encryption key. Store the key in a safe offsite location.

Example

```
CLI (config) # datastore encryption password old-password test new-password test1
```

datastore encryption rotate-key

Rotates and resets the data store encryption key using the new pass-phrase.

Syntax

datastore encryption rotate-key new-passphrase (passphrase)

Parameters

new-passphrase (passphrase)	Specify a pass-phrase to ensure that your encryption key is secure. In case your encryption key is compromised, you can specify a new pass-phrase in this command and rotate the encryption key to keep your data secure.
------------------------------------	---

Usage

It is important that you store the pass-phrase in a secure location on your local disk because the AltaVault does not store the pass-phrase anywhere.

Example

```
CLI (config) # datastore encryption rotate-key new-passphrase testphrase1
```

datastore encryption reset-key

Deletes the data store encryption key and resets the password.

Syntax

datastore encryption reset-key

Parameters

None

Example

```
CLI (config) # datastore encryption reset-key
```

datastore find orphans

Finds orphaned directories (directories without any parent directories attached to them) and deletes the ones that are empty.

Syntax

datastore find orphans [purge-empty]

Parameters

None

Example

```
CLI (config) # datastore find orphans purge-empty
```

datastore format all

Formats and deletes all data on the AltaVault and in the cloud provider.

Syntax

datastore format all [force]

Parameters

None

Example

```
CLI (config) # datastore format all
```

datastore format local

Formats and deletes all data stored locally on the local AltaVault.

Syntax**datastore format local [force]****Parameters**

None

Example

```
CLI (config) # datastore format local
```

datastore fsck

Runs a file system check on the data store.

Syntax**datastore fsck****Parameters**

None

Example

```
CLI (config) # datastore fsck
```

datastore integrity check

Runs a file system check on the data store.

Syntax**datastore integrity check {start | stop}****Parameters**

None

Usage

The data store integrity is a file system check that the AltaVault appliance performs online — as it writes data to the cloud, it checks the data. The Constant Data Integrity Check report displays the log files that contain the integrity check data, the date and time up to which AltaVault appliance performed the integrity check, and the file size.

You can perform the data store integrity check only if the storage optimization service is running. You can stop the check at any time, but NetApp recommends that you keep it running.

Example

```
CLI (config) # datastore integrity check start
```

datastore prepop

Retrieves data from the cloud and populates the AltaVault with it locally so that the AltaVault has a local copy of the target data.

Syntax**datastore prepop {num-days <number of days> [pattern <pattern>] | pattern <pattern> [num-days <number of days>]} start-date end-date [force] [bue-header] [bue-footer] [dryrun]**

Parameters

num-days <number of days>	Specify the number of days (from the current date) up to which the AltaVault should go back and start prepopulation. This command filters the data retrieved by the number of days last modified.
pattern <pattern>	Filters the data retrieved by the pattern you specify. When using the datastore prepop pattern command, you must use the escape character (\) to handle filenames with the following special characters: \ ^ \$ () { } [] + ? * Use a backslash (\) before the special character in the filename. Spaces in filenames can be escaped with a backslash, or the expression can be enclosed in double quotes. You can specify multiple filenames using a pipe symbol (). Do not use an escape character before the . For detailed example, see the Usage section.
start-date	Specify the date to start populating data.
end-date	Specify the date to stop populating data.
bue-header	Prepopulate the backup files' headers (without including all of the actual backup file data) for backup operations to succeed. BUE is BackUpExec that is a backup application, which stores special information (like a catalog) in all of its .bkf file header and footer. When you store files in Amazon Glacier and they go offline (the AltaVault evicts cached data), then new backup operations fail because they need to read these headers and footers to succeed.
bue-footer	Prepopulate the backup files' footers (without including all of the actual backup file data) for backup operations to succeed. BUE is BackUpExec that is a backup application, which stores special information (like a catalog) in all of its .bkf file header and footer. When you store files in Amazon Glacier and they go offline (the AltaVault evicts cached data), then new backup operations fail because they need to read these headers and footers to succeed.
dryrun	Estimate the amount of data that would be downloaded from the cloud to prepopulate a file or file set, and estimate how long it would take. No information is downloaded using this option.

Usage

After a disaster, you can perform data recovery. During this process, you must use the **datastore prepop** command to warm the data before you try to restore your backup data using your backup application.

- To prepop a file named a|b in a share named cifs, type the following command:

```
CLI (config) # datastore prepop pattern /cifs/a\|b
```
- To prepopulate a file named a|b in the share named nfs, type the following command:

```
CLI (config) # datastore prepop pattern /nfs/a\|b
```
- To prepopulate files named a|b and a+b in the share named cifs, type the following command:

```
CLI (config) # datastore prepop pattern /cifs/a\|b|/cifs/a\+b
```
- To prepopulate all files ending with bkf in the root share, type the following command:

```
CLI (config) # datastore prepop pattern /. *bkf
```
- To prepopulate all files starting with the letter a in the share named nfs, type the following command:

```
CLI (config) # datastore prepop pattern /nfs/a.*
```

- To estimate the time and download size needed to prepopulate all files starting with the letter a in the share named nfs, use the dryrun option:

```
CLI (config) # datastore prepop pattern /nfs/a.* dryrun
```

Example

```
CLI (config) # datastore prepop num-days 5
```

megastore guid reset

Deletes the GUID key. It is not recommended to use this command. It is only to be used when migrating from SteelStore 3.2 to a newer version of AltaVault.

Note: Using this command in any other situation, can lead to data loss.

Syntax

megastore guid reset

Parameters

reset	Instructs AltaVault to remove the GUID key.
-------	---

Example

```
CLI (config) # megastore guid reset
```

FIPS Commands

This section describes the Federal Information Processing Standard (FIPS) support commands.

fips enable

Enables FIPS mode.

Syntax

[no] fips enable

Parameters

None

Usage

FIPS is a publicly announced set of validation standards developed by the United States National Institute of Standards and Technology (NIST) for use by government agencies and by government contractors.

FIPS 140-2 is a technical and worldwide de-facto standard for the implementation of cryptographic modules. FIPS compliance makes the NetApp appliance more suitable for use with government agencies that have formal policies requiring use of FIPS 140-2 validated cryptographic software.

To achieve FIPS compliance on a NetApp appliance, you must run a software version that includes the NetApp Cryptographic Security Module (NCSM) v1.0, configure the system to run in FIPS operation mode, and adjust the configuration of any features that are not FIPS compliant.

AltaVault offers end-to-end security for data at rest and in flight using FIPS 140-2 level 1-compliant encryption. AltaVault offers end-to-end security for data-at-rest and in-flight with the NetApp Cryptographic Security Module. The module is currently undergoing FIPS 140-2 level 1 validation and is expected to complete the process in 1H CY16.

For more information on the FIPS implementation, see the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

Example

```
CLI (config) # fips enable
CLI (config) # service restart
```

show fips status

Displays FIPS status information by feature.

Syntax

show fips status

Parameters

None

Example

```
CLI > show fips status
FIPS Mode: Disabled.
```

Mfsck Commands

This section describes the Megastore File System Check (Mfsck) utility commands. Mfsck is a tool that checks the integrity of the data store. It performs the following detection types:

- **Internal consistency** - Checks only the internal consistency of the data. This is the fast mode.
- **Complete** - Decodes files and computes the checksum to compare with the stored checksum.

file mfsck delete

Deletes the output file generated by running the Megastore File System Check (MFSCCK) tool.

Syntax

file mfsck delete <filename>

Parameters

filename	Specify the name of the MFSCCK results file to be deleted.
-----------------	--

Usage

The MFSCCK tool checks the integrity of the local file system.

Example

```
CLI (config) # file mfsck delete mfsck_results
```

file mfsck upload

Uploads the output file from running the MFSCCK tool to a remote host.

Syntax

file mfsck upload <filename>

Parameters

filename	Specify the name of the MFSCK results file to be uploaded.
-----------------	--

Usage

The MFSCK tool checks the integrity of the local file system.

Example

```
CLI (config) # file mfsck upload mfsck_results
```

mfsck start check-type

Starts the MFSCK (megastore file system check) tool.

Syntax

mfsck start check-type {complete | int-consistency} [repair] [replay]}

Parameters

complete	Checks data from end-to-end. This is the slow mode.
int-consistency	Checks only the internal consistency of the data. This is the fast mode.
repair	Optionally, corrects errors from which the system can recover.
replay	Optionally, displays the transaction log after a system crash.

Usage

The MFSCK tool checks the integrity of the local file system.

Example

```
CLI (config) # mfsck start check-type int-consistency repair
```

mfsck stop

Stops the MFSCK tool.

Syntax

mfsck stop

Parameters

None

Usage

The MFSCK tool checks the integrity of the local file system.

Example

```
CLI (config) # mfsck stop
```

Verify Commands

This section describes the Verify tool commands. Verify is a tool that confirms that all the local slab files are replicated to the cloud.

file verify delete

Deletes the output file generated by running the Verify tool.

Syntax**file verify delete <filename>****Parameters**

filename	Specify the name of the Verify results file to be deleted.
-----------------	--

Usage

The Verification tool checks replication consistency.

Example

```
CLI (config) # file verify delete verify_results
```

file verify upload

Uploads the output file from running the Verify tool to a remote host.

Syntax**file verify upload <filename>****Parameters**

filename	Specify the name of the Verify results file to be uploaded.
-----------------	---

Usage

The Verify tool checks replication consistency.

Example

```
CLI (config) # file verify upload verify_results
```

verify start

Starts the Verify tool.

Syntax**verify start [quick]****Parameters**

quick	Optionally, specify this option to only validate the checksums (a computed value that enables you to check the validity of data) and not perform full data comparisons.
--------------	---

Usage

The Verify tool checks replication consistency.

Example

```
CLI (config) # verify start
Verifying 15450 files from the collection
Verification complete: collection is properly replicated.
(579.322 seconds elapsed)
```

verify stop

Stops the Verify tool.

Syntax**verify stop**

Parameters

None

Usage

The Verify tool checks replication consistency.

Example

```
CLI (config) # verify stop
```

NFS Commands

This section describes the Network File System (NFS) commands. NFS is a distributed file system protocol that enables a user on a client computer to access files access files over a network in a manner similar to how local storage is accessed.*

nfs enable

Enables the NFS protocol service.

Syntax

[no] nfs enable

Parameters

None

Usage

The **no** command option disables the NFS protocol service (you cannot access or configure NFS exports).

NFS is a protocol that enables a user on a client computer to access files over a network in a manner similar to how local storage is accessed.

Example

```
CLI (config) # nfs enable
```

nfs export add name

Exports a Network File System (NFS) share to the AltaVault NFS server.

Syntax

nfs export add name <name> path <pathname> [comment <string>] [default-allow | default-deny] [sync | async] [secure | insecure] [no-dedup] [no-compression] [early-eviction]

Parameters

name <name>	Specify the name of the NFS export share.
path <pathname>	Specify the export file pathname. Ensure that the folder you are exporting to exists before you export to it.
comment <string>	Optionally, enter a comment about the share.
default-allow	Optionally, enables access to all remote clients connecting to the NFS share.
default-deny	Optionally, denies access to all remote clients connecting to the NFS share. This is the default.
sync	Optionally, allow only synchronous write operations (operations that do not complete until data is written to the disk) on the share. This is the default option.
async	Optionally, allow asynchronous write operations (operations that might complete before data is written to the disk) on the share.
secure	Optionally, specify that the NFS server must not allow connections from ports with a port number that is 1024 or greater. This is the default option.
insecure	Optionally, specify that the NFS server must allow connections from ports with a port number that is 1024 or greater.
no-dedup	Specifies that data written to this share should not be checked for duplication. The AltaVault does not check if there is duplication of the data written to the share and not does perform de-duplication.
no-compression	Disables compression of any data written to the share. This is useful if you are copying over already-compressed data (for example: photos, videos, or proprietary formats such as medical data that might be compressed and encrypted already).
early-eviction	Specifies that data from the share must be assigned a higher priority for early eviction from the AltaVault.

Usage

NFS is a protocol that enables a user on a client computer to access files over a network in a manner similar to how local storage is accessed.

To preserve the mount options after a client computer restarts, enter the following mount options for each operating system (OS):

Solaris mount options

In Solaris OS, enter the following command:

```
mount -t nfs -o
remote,read,write,setuid,devices,llock,hard,intr,vers=3,proto=tcp,rsz=131072,wsz=131072,bg,xa
ttr host-ip:/rfs/nfs /mountpoint
```

Linux mount options

In Linux OS, enter the following command:

```
mount -t nfs -o
rw,nolock,hard,intr,nfsvers=3,tcp,rsz=131072,wsz=131072,bg
host-ip:/rfs/nfs /mountpoint
```

HP/UX mount options

In HP/UX OS, enter the following command:

```
mount -t nfs -o rw,llock,soft,intr,rsz=131072,wsz=131072,bg
host-ip:/rfs/nfs /mountpoint
```

Add the following changes to the nddconf file in the /etc/rc.config.d/nddconf file:

```
# ndd -set /dev/tcp tcp_rcv_hiwater_def 262144
# ndd -set /dev/tcp tcp_xmit_hiwater_def 262144
# ndd -get /dev/tcp tcp_rcv_hiwater_def 262144
# ndd -get /dev/tcp tcp_xmit_hiwater_def 262144
```

AIX mount options

In AIX OS, enter the following command:

```
mount -t nfs -o
sc001528-b.itbackup.ch /rfs/nfs /nbu_sc001528_netapp nfs3 May 14
14:24 rw,hard,intr,llock,rsize=131072,wsiz=131072,sec=sys,bg
sc001528-b.itbackup.ch /rfs/nfs2 /nbu_sc001528_netapp_2 nfs3 May 14
14:24 rw,hard,intr,llock,rsize=131072,wsiz=131072,sec=sys,bg
```

Example

```
CLI (config) # nfs export add sharepoint path /NFS default-allow
```

On the client, you mount:

```
# mount -t nfs CLI:/rfs/NFS /mnt/AltaVault
```

nfs export modify name

Changes an NFS share on the AltaVault NFS server.

Syntax

nfs export modify name <name> [allow <IP address or subnet> | deny <IP address or subnet>] [path <pathname>] [comment <string>] [default-deny | default-allow] [sync | async] [secure | insecure]

Parameters

name <name>	Specify the name of the NFS export share to modify.
path <pathname>	Optionally, specify the export file pathname.
comment <string>	Optionally, enter a comment about the share.
default-deny	Optionally, deny access to all remote clients connecting to the NFS share by default.
default-allow	Optionally, allow access to all remote clients connecting to the NFS share by default.
sync	Optionally, allow only synchronous write operations (operations that do not complete until data is written to the disk) on the share. This is the default option.
async	Optionally, allow asynchronous write operations that might complete before data is written to the disk) on the share. Exporting NFS asynchronously forces the server to drop all "fsync" requests from the client. This is a feature of NFS protocol. It is required to obtain good performance with NFS clients that issue frequent NFS COMMIT operations, which might degrade the AltaVault performance significantly. Many UNIX clients often execute NFS COMMIT operations when low on memory. To understand the circumstances that cause this behavior and to detect and prevent it, contact your client operating system vendor. The AltaVault automatically synchronizes any file that is idle for a configurable amount of time (default 10s). Although there is a window of time (after the server responds with success for a "fsync" request, and before the data is written to disk), this window is small and performance benefits are large. NetApp recommends exporting NFS asynchronously.
secure	Optionally, specify that the NFS server must not allow connections from ports with a port number that is 1024 or greater. This is the default option.
insecure	Optionally, specify that the NFS server must allow connections from ports with a port number that is 1024 or greater.

Usage

NFS is a protocol that enables a user on a client computer to access files over a network in a manner similar to how local storage is accessed.

Example

```
CLI (config) # nfs export modify name sharepoint path /NFS default-deny
```

nfs export unpin

Unpins the NFS export.

Syntax

```
nfs export modify name <name> [allow <IP address or subnet> | deny <IP address or subnet>] [path <pathname>]
[comment <string>] [default-deny | default-allow] [sync | async] [secure | insecure]
```

Parameters

name <name>	Specify the name of the NFS export share to unpin.
path <pathname>	Optionally, specify the export file pathname.
all	Optionally, unpins all exports.
default-deny	Optionally, deny access to all remote clients connecting to the NFS share by default.
default-allow	Optionally, allow access to all remote clients connecting to the NFS share by default.
sync	Optionally, allow only synchronous write operations (operations that do not complete until data is written to the disk) on the share. This is the default option.
async	Optionally, allow asynchronous write operations that might complete before data is written to the disk) on the share. Exporting NFS asynchronously forces the server to drop all "fsync" requests from the client. This is a feature of NFS protocol. It is required to obtain good performance with NFS clients that issue frequent NFS COMMIT operations, which might degrade the AltaVault performance significantly. Many UNIX clients often execute NFS COMMIT operations when low on memory. To understand the circumstances that cause this behavior and to detect and prevent it, contact your client operating system vendor. The AltaVault automatically synchronizes any file that is idle for a configurable amount of time (default 10s). Although there is a window of time (after the server responds with success for a "fsync" request, and before the data is written to disk), this window is small and performance benefits are large. NetApp recommends exporting NFS asynchronously.
secure	Optionally, specify that the NFS server must not allow connections from ports with a port number that is 1024 or greater. This is the default option.
insecure	Optionally, specify that the NFS server must allow connections from ports with a port number that is 1024 or greater.

Usage

NFS is a protocol that enables a user on a client computer to access files over a network in a manner similar to how local storage is accessed.

Example

```
CLI (config) # nfs export modify name sharepoint path /NFS default-deny
```

papi rest access_code generate

Generates a new REST API access code for the appliance monitoring feature.

Syntax

```
papi rest access_code generate desc <description>
```

Parameters

desc <description>	Specify a way to identify the monitoring appliance, such as the hostname or IP address of the appliance and a description, such as “monitoring appliance”.
---------------------------------	--

Usage

AltaVault v2.1 and later enables you to configure and monitor peer AltaVaults in the network.

Any AltaVault can monitor a peer AltaVault. You select one of the AltaVaults as the monitoring appliance and peer AltaVaults as monitored appliances.

The monitoring appliance probes the monitored peer appliances every 60 seconds by default.

The AltaVault uses REST APIs that you can access to set up appliance monitoring.

When you add an appliance to be monitored by a AltaVault, you must generate a REST API access code to enable authenticated communication between the monitoring appliance and the monitored peer appliance.

For more details about the appliance monitoring feature, see the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

Example

```
CLI (config) # papi rest access_code generate desc "10.1.2.3 - monitoring AltaVault appliance"
```

papi rest access_code import

Imports an existing REST access code.

Syntax

```
papi rest access_code import desc <description> data <data_to_import>
```

Parameters

desc <description>	Specify the date and time (year, month, day, hour, minutes, and seconds).
---------------------------------	---

Usage

AltaVault v2.1 and later enables you to configure and monitor peer AltaVaults in the network.

Any AltaVault can monitor a peer AltaVault. You select one of the AltaVaults as the monitoring appliance and peer AltaVaults as monitored appliances.

The monitoring appliance probes the monitored peer appliances every 60 seconds by default.

The AltaVault uses REST APIs that you can access to set up appliance monitoring.

When you add an appliance to be monitored by a AltaVault, you must generate a REST API access code to enable authenticated communication between the monitoring appliance and the monitored peer appliance.

For more details about the appliance monitoring feature, see the *NetApp AltaVault Cloud Integrated Storage User's Guide*.

Example

```
CLI (config) # papi rest access_code generate desc "10.1.2.3 - monitoring AltaVault appliance"
```

nfs export remove name

Deletes an exported NFS share from the AltaVault.

Syntax

```
nfs export remove name <name>
```

Parameters

<name>	Specify the name of the exported share to be deleted.
---------------------	---

Usage

NFS is a protocol that enables a user on a client computer to access files over a network in a manner similar to how local storage is accessed.

Example

```
CLI (config) # nfs export remove sharepoint
```

Replication Commands

This section describes the replication commands. Replication is a process that transfers deduplicated data from the AltaVault to the cloud asynchronously. Immediate access to the replicated data minimizes downtime and its associated costs. Replication streamlines disaster recovery processes by generating duplicate copies of all backed-up files on a continuous basis. It can also simplify recovery from disasters such as a fire, flood, hurricane, virus, or worm.

replication auth type

Configures replication authentication.

Syntax

```
replication auth type {
atmos subtenant-id <ID> uid <ID> shared-secret <string> |
azure storage-account <name> acc-key <key> |
cleversafe acc-key-id <key> secret-acc-key <key> |
cloudian acc-key-id <key> secret-acc-key <key> |
cloudwatt api-access-key <key> secret-key <key> tenant-id <ID> |
cloudwatt username <name> password <password> tenant-id <ID> |
cloudwatt x-auth-user <key> secret-key <key> tenant-id <ID> |
dunkel acc-key-id <ID> secret-acc-key <key> |
evault <name> password <password> tenant-id <ID> |
glacier auth-method standard acc-key-id <ID> secret-acc-key <key> |
glacier auth-method sts idp-url <URL> idp-method <Method> params <Parameter> |
google client-id <ID> project-id <ID> private-key <path> |
iij acc-key-id <key> secret-acc-key <key> |
netapp acc-key-id <key> secret-acc-key <key> |
outscale acc-key-id <key> secret-acc-key <key> |
rackspace username <user name> api-acc-key <key> |
s3 auth-method standard acc-key-id <ID> secret-acc-key <key> |
s3 auth-method sts idp-url <URL> idp-method <Method> params <Parameter> |
scality acc-key-id <key> secret-acc-key <key> |
softlayer username <user name> api-acc-key <key> |
swift api-access-key <key> <name> secret-key <user> |
swift username <user name> password <password> |
swift x-auth-user <name> x-auth-key <key> |
telefonica acc-key-id <ID> secret-acc-key <key> |
verizon acc-key-id <ID> secret-acc-key <key> |
}
```

Parameters

atmos subtenant-id<ID> uid <ID> shared-secret <strings>	
subtenant-id <ID>	Specify the subtenant ID that EMC Atmos uses to authenticate each request.
uid <ID>	Specify the unique ID that EMC Atmos uses to authenticate each request.
shared-secret <string>	Specify the shared secret that EMC Atmos uses to authenticate each request. When the client application builds a Web service request, EMC Atmos uses the shared secret to create a signature entry as a part of the request. The shared secret must be associated with the tenant ID and application ID created by EMC Atmos.

Parameters

azure storage-account <name> acc-key <key>	
storage-account <name>	Specify the name of the storage account.
acc-key <key>	Specify the primary or secondary access key for your Microsoft Windows Azure account.

Parameters

cleversafe acc-key-id <ID>	
acc-key-ID <ID>	Specify the access key ID for your Cleversafe account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

cloudian acc-key-id <ID>	
acc-key-ID <ID>	Specify the access key ID for your Cloudian account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

cloudwatt api-access-key <key> secret-key <key> tenant-id <ID>	
api-access-key <key>	Specify the access key ID .
secret-key <key>	Specify the secret access key for Cloudwatt Identity Service.
tenant-id <ID>	Tenant ID for Cloudwatt Identity Service

Parameters

cloudwatt username <name> password <password> tenant-id <ID>	
username <name>	Specify the username for Cloudwatt Identity Service.
password <password>	Specify the password for Cloudwatt Identity Service.
tenant-id <ID>	Tenant ID for Cloudwatt Identity Service

Parameters

cloudwatt x-auth-user <name> x-auth-key <key>	
x-auth-user <name>	Specify the user name for X-header authentication.
x-auth-key <key>	Specify the key for X-header authentication.

Parameters

dunkel acc-key-id <ID> secret-acc-key <key>	
acc-key-ID <ID>	Specify the access key ID for your dunkel account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

evault username <name> password <password> tenant-id <ID>	
username <name>	Specify the username for the EVault service.
password <password>	Specify the password for the EVault service.
tenant-id <ID>	Tenant ID for EVault Service

Parameters

glacier auth-method standard acc-key-id <ID> secret-acc-key <key>	
acc-key-ID <ID>	Specify the access key ID for your account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

glacier auth-method sts idp-url <URL> idp-method <Method> params <Parameters>	
idp-url <URL>	Specify the identity provider hostname.
idp-method <Method>	Specify the HTTP method for request to identity provider.
params <Parameters>	Get or post parameters for request to identity provider.

Parameters

google client-id <ID> project-id <ID> private-key <path>	
client-id <ID>	Specify the client ID used to access the bucket. The client-id is the same as email address of the service account.
project-id <ID>	Specify the project ID associated with the bucket. The project ID tells Google Cloud Storage which project you want to create a bucket in or which project to list buckets for. Each project is identified by its unique project ID. Since it is possible to have multiple projects, this ensures that the request is properly completed in the right project.
private-key <path>	Specify path to the .pem file containing the private key (password) associated with the client ID.

Parameters

IIJ acc-key <key> server-key <key>	
acc-key <key>	Specify the access key for your IIJ account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

netapp acc-key-id <key> secret-acc-key <key>	
acc-key-ID <ID>	Specify the access key ID for your NetApp account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

outscale acc-key-id <key> secret-acc-key <key>	
acc-key-ID <ID>	Specify the access key ID for your account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

rackspace username <username> api-acc-key <key>]	
username <user name>	Specify the user name that Rackspace uses to authenticate each request.
api-acc-key <key>	Specify the access key that Rackspace uses to authenticate each request.

Parameters

s3 auth-method standard acc-key-id <ID> secret-acc-key <key>	
acc-key-ID <ID>	Specify the access key ID for your Amazon S3 account.
secret-acc key <key>	Specify the secret access key for your Amazon S3 account.

Parameters

s3 auth-method sts idp-url <URL> idp-method <Method> params <Parameters>	
idp-url <URL>	Specify the identity provider hostname.
idp-method <Method>	Specify the HTTP method for request to identity provider.
params <Parameters>	Get or post parameters for request to identity provider.

Parameters

scality acc-key-id <key> secret-acc-key <key>	
acc-key-ID <ID>	Specify the access key ID for your account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

softlayer username <name> api-acc-key <key>	
username <name>	Specify the username for the Softlayer service.
api-acc-key <key>	Specify the access key to authenticate each request.

Parameters

swift api-access-key <key> <name> secret-key <user>	
api-access-key <key>	Specify the API access key for OpenStack Identity service.
secret-key <key>	Specify the secret key for OpenStack Identity service.
tenant-id <ID>	Tenant ID for OpenStack Identity Service.

Parameters

swift username <user name> password <password>	
username <user name>	Specify the user name that OpenStack Object Storage (Swift) uses to authenticate each request.

password <password>	Specify the password that OpenStack Object Storage (Swift) uses to authenticate each request.
tenant-id <ID>	Tenant ID for OpenStack Identity Service.

Parameters

swift x-auth-user <name> x-auth-key <key>	
x-auth-user <name>	Specify the user name for X-header authentication.
x-auth-key <key>	Specify the key for X-header authentication.

Parameters

swisscom subtenant-id <ID> uid <ID> shared-secret <string>	
subtenant-id <ID>	Specify the subtenant ID used to authenticate each request.
uid <ID>	Specify the unique ID used to authenticate each request.
shared-secret <string>	Specify the shared secret used to authenticate each request.

Parameters

synaptic subtenant-id <ID> uid <ID> shared-secret <string>	
subtenant-id <ID>	Specify the subtenant ID that AT&T Synaptic Storage or EMC Atmos uses to authenticate each request.
uid <ID>	Specify the unique ID that AT&T Synaptic Storage or EMC Atmos uses to authenticate each request.
shared-secret <string>	Specify the shared secret that AT&T Synaptic Storage uses to authenticate each request. When the client application builds a Web service request, AT&T Synaptic Storage uses the shared secret to create a signature entry as a part of the request. The shared secret must be associated with the tenant ID and application ID created by AT&T Synaptic Storage.

Parameters

Telefonica acc-key-id <ID> secret-acc-key <key>	
acc-key-ID <ID>	Specify the access key ID for your Telefonica account.
secret-acc-key <key>	Specify the secret access key for your account.

Parameters

Verizon acc-key-id <ID> secret-acc-key <key>	
acc-key-ID <ID>	Specify the access key ID for your Verizon account.
secret-acc-key <key>	Specify the secret access key for your account.

Usage

If you select **Amazon Glacier** as the cloud service provider, the AltaVault stages data to Glacier through an Amazon S3 bucket. The AltaVault does not create Glacier vaults. Therefore, you must use S3 credentials when you choose Glacier as your cloud service provider.

Even though data is sent to S3, it is migrated to Glacier (under 24 hours). Data is charged at the S3 rate for the staging duration (24 hours or less) and at Glacier rates after 24 hours.

Example

```
CLI (config) # replication auth type s3 auth-method standard acc-key-id ABCDEF12345 secret-acc-key mysecretkey
```

```
CLI (config) # replication migrate-to auth type s3 auth-method ?
standard          Standard S3 Authorization
sts               Secure Token Service Authorization
```

```
CLI (config) # replication migrate-to auth type s3 auth-method standard acc-key-id ABC secret-acc-
key XYZ
```

```
CLI (config) # replication migrate-to auth type s3 auth-method sts idp-url idp.com idp-method GET
params foo
```

replication batch-size

Configures batch size for replication.

Syntax

replication batch-size

Parameters

None

Example

```
CLI (config) # replication batch-size 90
```

replication bw-limit

Configures replication bandwidth limit.

Syntax

[no] replication bw-limit interface <interface> [rate <rate>]

Parameters

interface <interface>	Specify the following values for the interface: primary. Use this parameter to limit the number of bits per second transmitted through the interface.
rate <rate>	Optionally, specify a rate to limit the number of bits per second transmitted in kilo bits per second.

Usage

The **no** command option disables replication bandwidth limit.

Example

```
CLI (config) # replication bw-limit interface
```

replication bw-limit schedule

Configures bandwidth limit scheduling.

Syntax

replication bw-limit schedule [start <start time>] [end <end time>] [rate <rate of transfer>] [weekend <scheduled | unscheduled>]

Parameters

start <start time>	Optionally, specify the time at which the bandwidth limit should start. Use the following format: HH:MM:SS.
end <end time>	Optionally, specify the time at which the bandwidth limit should finish. Use the following format: HH:MM:SS.
rate <rate of transfer>	Optionally, specify a rate to limit the number of bits per second transmitted in Kbps.
weekend <scheduled unscheduled>	Specify one of the following bandwidth limit scheduling for weekends: • scheduled - Use a scheduled rate (specified by the start and end options) for weekends. • unscheduled - Use the normal rate (specified by the rate option) for weekends.

Example

```
CLI (config) # replication bw-limit schedule start 6:30:00 end 10:30:00
```

replication bw-limit schedule enable

Enables bandwidth limit scheduling.

Syntax

[no] replication bw-limit schedule enable

Parameters

None

Usage

The **no** command option disables replication bandwidth limit scheduling.

Example

```
CLI (config) # replication bw-limit schedule enable
```

replication enable

Enables replication of data.

Syntax

[no] replication enable

Parameters

None

Usage

The **no** command option disables replication.

Example

```
CLI (config) # replication enable
```

replication migrate-to enable

Starts moving your data from your current cloud provider to the new cloud provider you specify.

Syntax

replication migrate-to enable

Parameters

num-threads <number>	Optionally, type the number of threads that the AltaVault must use. The AltaVault uses 128 threads by default. However, you can configure a higher number of threads for high bandwidth and lower number of threads for a lower bandwidth.
-----------------------------------	--

Usage

You must configure new cloud provider settings, using the **replication migrate-to provider type** and **replication migrate-to auth type** commands, before you use this command.

When you run this command, the AltaVault:

1. Checks that the cloud bucket is empty and that it can create a new bucket.
2. Prompts to restart the storage optimization service.
3. Stops the storage optimization service, pauses replication, and restarts service.

The replication process pauses until migration completes. However, the AltaVault continues to encode incoming data.

You can view the migration progress on the AltaVault CLI.

If you exited the CLI session, log in to the CLI again and type the command **replication migrate-to enable**.

After migration completes, the AltaVault:

1. Notifies you that you must restart service.
2. Stops the storage optimization service.
3. Updates the current cloud configuration with the new cloud.

Use the **replication migrate-to enable** command to restart the storage optimization service. This command automatically updates cloud configuration.

After you restart service, the AltaVault replicates pending data.

Save your configuration using the **write memory** command.

Example

```
CLI (config) # replication migrate-to enable
```

replication migrate-to auth type

Configures the authentication settings for the new cloud provider that hosts the data you migrate.

Syntax

replication migrate-to auth type <cloud provider authentication settings>

Parameters

auth type <cloud provider authentication settings>	Type the authentication settings of the new provider. The authentication settings for various cloud providers are: atmos subtenant-id <ID> uid <ID> shared-secret <string> azure pri-acc-key <key> sec-acc-key <key> glacier acc-key-id <ID> secret-acc-key <key> google client-id <ID> project-id <ID> private-key <path> iij acc-key-id <key> secret-acc-key <key> rackspace username <user name> api-acc-key <key> s3 auth-method standard acc-key-id <ID> secret-acc-key <key> s3 auth-method sts idp-url <URL> idp-method <Method> params <Parameters> savvis subtenant-id <ID> uid <ID> shared-secret <string> synaptic subtenant-id <ID> uid <ID> shared-secret <string> swift username <user name> password <password>
type <type>	Optionally, specify one of the following types for the cloud service provider: atmos - EMC Atmos azure - Microsoft Windows Azure Storage cleversafe - Cleversafe cloudian - Cloudian evault - Evault glacier - Amazon Glacier google - Google Cloud Storage rackspace - Rackspace Cloud Files s3 - Amazon S3 savvis - Savvis Symphony Cloud Storage softlayer - Softlayer swift - OpenStack Object Storage synaptic - AT&T Synaptic Storage telefonica - Telefonica verizon - Verizon

Example

```
CLI (config) # replication migrate-to auth type s3 auth-method standard acc-key-id <ID> secret-acc-key <key>
```

replication migrate-to provider type

Configures the new cloud provider that hosts the data after you migrate it from your existing cloud provider.

Syntax

```
replication migrate-to provider type <cloud provider name> bucket-name <bucket name> hostname <hostname> port <port number> [location <Location>] [auth-method <Method>] [web-protocol <Web protocol>] [storage-class <Storage type>]
```

Parameters

provider type <cloud provider name>	Type the name of the new cloud provider that you want your data moved to.
type <type>	Optionally, specify one of the following types for the cloud service provider: atmos - EMC Atmos azure - Microsoft Windows Azure Storage cleversafe - Cleversafe Cloud Storage cloudian - Cloudian Cloud Storage dunkel - Dunkle Cloud Storage evault - Evault LTS2 Cloud Storage glacier - Amazon Glacier google - Google Cloud Storage IJJ - Internet Initiative Japan netapp - NetApp StorageGRID Webscale rackspace - Rackspace Cloud Files s3 - Amazon S3 savvis - Savvis Symphony Cloud Storage softlayer - IBM SoftLayer Cloud Storage swift - OpenStack Object Storage swisscom - Swisscom Dynamic Storage synaptic - AT&T Synaptic Storage telefonica - Telefonica Cloud Storage verizon - Verizon Cloud Storage
bucket-name	Type the name of the bucket in which data is stored in the new cloud.
hostname <hostname>	Type the hostname of the new cloud provider.
port <port number>	Type the number of the port that must be used for replicating data to the cloud. Use port 443. Port 80 is not supported.
location <location>	Optionally, specify the location.
auth-method <authentication method>	Optionally, specify the authentication method.
web-protocol <Web Protocol>	Optionally, specify the Web protocol (http or https).
storage-class <storage type>	Optionally, specify the storage type.

Example

```
CLI (config) # replication migrate-to provider type s3 bucket-name testbucket hostname myhostname
port 90
```

replication migrate-to proxy

Configures the proxy server settings for Cloud Agility.

Syntax

```
replication migrate-to proxy hostname <hostname> [port <port number>] [username <user name>] [password
<password>]
```

Parameters

hostname <hostname>	Specify a valid hostname or IP address for the replication proxy server.
port <port number>	Optionally, specify the port number for replication proxy. If you do not specify it, the default is 1080.
username <username>	Optionally, specify the name of the user who can log into the replication proxy server.
password <password>	Optionally, specify the password for the user who can access the replication proxy server. The AltaVault stores the password in the secure vault.

Usage

You must restart services after you execute the **replication migrate-to proxy hostname** command.

Example

```
CLI (config) # replication migrate-to proxy hostname ava.example.com port 80 username test password test123
```

```
CLI (config) # show replication migrate-to proxy
Hostname: ava.example.com
Port:      80
Username:  test
Enabled:   yes
```

no replication migrate-to proxy

Disables the proxy server settings for Cloud Agility.

Syntax

[no] replication migrate-to proxy

Parameters

None

Usage

Disables the proxy server settings for Cloud Agility.

Example

```
CLI (config) # no replication migrate-to proxy
```

```
CLI (config) # show replication migrate-to proxy
Hostname: 0.0.0.0
Port:    1080
Username:
Enabled: no
```

replication migrate-to proxy enable

Enables the proxy server settings for Cloud Agility.

Syntax

[no] replication migrate-to proxy enable

Parameters

None

Usage

Enables the proxy server settings for Cloud Agility while preserving the proxy settings.

Example

```
CLI (config) # replication migrate-to proxy enable
```

```
CLI (config) # show replication migrate-to proxy
```

```
Hostname: ava.example.com
```

```
Port:      80
```

```
Username: test
```

```
Enabled: yes
```

no replication migrate-to proxy enable

Disables the proxy server settings for Cloud Agility while preserving the settings.

Syntax

[no] replication migrate-to proxy enable

Parameters

None

Usage

Disables the proxy server settings for Cloud Agility while preserving the settings.

Example

```
CLI (config) # no replication migrate-to proxy enable
```

```
CLI (config) # show replication migrate-to proxy
Hostname: ava.example.com
Port:      80
Username: test
Enabled: no
```

replication migration-delay

Configures the number of days that the AltaVault must wait before migrating data from Amazon S3 to Glacier.

Syntax

replication migration-delay transition-days <number of days>

Parameters

replication migration-delay transition-days <number of days>	Specifies how long the AltaVault must wait before migrating data from S3 to Glacier.
	When you use AWS Glacier with the AltaVault, the appliance:
	1. Uploads data to Amazon S3 temporarily (for the transition-days you specify).
	2. Migrates it to Glacier.
	The default value is 0 days, which means the AltaVault migrates the data from S3 in 24 hours.

Example

```
CLI (config) # replication migration-delay transition-days 0
```

replication num-threads

Configures number of replicator threads to run.

Syntax

replication num-threads <number of threads>

Parameters

num-threads <number of threads>	Specify the number of threads to run. The thread maintains the replication count of uploaded files.
--	---

Example

```
CLI (config) # replication num threads 90
```

replication prepop-throttle

Configures how much data can be downloaded from AWS Glacier to the AltaVault in one month.

Syntax

replication prepop-throttle <monthly-retrieval-limit-in-percent>

Parameters

prepop-throttle <monthly-retrieval-limit-in-percent>	Type the percentage of data that can be downloaded from AWS Glacier to the AltaVault in one month. The default value is 5%, which is the current free allowance for Glacier. Specify "0" to completely turn the throttle off.
---	---

Usage

If you exceed the Glacier monthly retrieval allowance, it results in additional retrieval cost. Please ensure that you read Amazon Glacier documentation and understand the monthly allowance limits before you use this command.

Example

```
CLI (config) # replication prepop-throttle 5%
```

replication provider

Specifies the storage replication provider.

Syntax

replication provider type <type> bucket-name <name> hostname <hostname> port <port number>
 [location <Location>] [auth-method <Method>] [web-protocol <Web protocol>] [storage-class <Storage type>]

Parameters

type <type>	Optionally, specify one of the following types for the cloud service provider: atmos - EMC Atmos azure - Microsoft Windows Azure Storage cleversafe - Cleversafe Cloud Storage cloudian - Cloudian Cloud Storage dunkel - Dunkle Cloud Storage evault - Evault LTS2 Cloud Storage glacier - Amazon Glacier google - Google Cloud Storage IIJ - Internet Initiative Japan netapp - NetApp StorageGRID Webscale rackspace - Rackspace Cloud Files s3 - Amazon S3 savvis - Savvis Symphony Cloud Storage softlayer - IBM SoftLayer Cloud Storage swift - OpenStack Object Storage swisscom - Swisscom Dynamic Storage synaptic - AT&T Synaptic Storage telefonica - Telefonica Cloud Storage verizon - Verizon Cloud Storage
bucket-name <name>	Optionally, specify the bucket name associated with your cloud service provider account. Buckets are similar to folders. You store each object in a bucket.
hostname <hostname>	Optionally, specify the name of the host machine on which the AltaVault stores the replicated data: for example, s3.amazonaws.com or storage.synaptic.att.com.
port <port number>	Optionally, specify the port through which replication occurs. Use port 443. Port 80 is not supported.
location <location>	Optionally, specify the location.
auth-method <authentication method>	Optionally, specify the authentication method.
web-protocol <Web Protocol>	Optionally, specify the Web protocol (http or https).
storage-class <storage type>	Optionally, specify the storage type.

Example

```
CLI (config) # replication provider type synaptic bucket-name bucket1 hostname
storage.synaptic.att.com port 443
```

replication proxy

Configures the replication proxy server (server that acts as an intermediary for requests from clients).

Syntax

[no] replication proxy hostname <hostname> [port <port number>] [username <user name>] [password <password>]

Parameters

hostname <hostname>	Specify a valid hostname or IP address for the replication proxy server.
port <port number>	Optionally, specify the port number for replication proxy. If you do not specify it, the default is 1080.
username <username>	Optionally, specify the name of the user who can log into the replication proxy server.
password <password>	Optionally, specify the password for the user who can access the replication proxy server. The AltaVault stores the password in the secure vault.

Usage

The **no** command option deletes replication proxy server settings.

You must restart services after you execute the **replication proxy hostname** command and the **no replication proxy hostname** command.

Example

```
CLI (config) # replication proxy hostname myhost
```

replication proxy enable

Activates the replication proxy server (server that acts as an intermediary for requests from clients).

Syntax

[no] replication proxy enable

Parameters

None

Usage

The **no** command option disables the replication proxy server.

Example

```
CLI (config) # replication proxy enable
```

replication retention-time

Configures the time for the AltaVault must retain data in S3 for restores from AWS Glacier.

Syntax

replication retention-time <retention-days>

Parameters

retention-time <retention-days>	Specifies how long the AltaVault must keep the data in the S3 during a Glacier restore operation. When you use AWS Glacier with the AltaVault, the appliance: 1. Restores data from the cloud. 2. Stages data from Glacier in Amazon S3 temporarily. 3. Downloads the data from S3. The default value is 1 day, which means the temporary data is deleted after one day and it must be retrieved from Glacier again after one day (if required).
--	---

Example

```
CLI (config) # replication retention-time 1
```

replication s3-to-glacier

Migrates data from Amazon S3 to Amazon Glacier.

Syntax

replication s3-to-glacier

Parameters

None

Usage

Ensure that you stop the AltaVault storage optimization service (by typing **no service enable**) before you run this command.

Example

```
CLI (config) # replication s3-to-glacier
Service should be stopped before running this command
oak-sword12 (config) # no service enable
Terminating optimization service...
....
CLI (config) # replication s3-to-glacier
Cloud based deduplication is currently enabled. Disabling cloud based deduplication could take a
few hours for a large cloud bucket. Disable? (y/N) y
Cloud based deduplication turned off
Successfully switched from S3 to Glacier
S3 prefixes already enabled
CLI (config) #
```

replication schedule

Configures the time to automatically pause and resume replication.

Syntax

[no] replication schedule [pause-time <time>] [resume-time <time>]

Parameters

pause-time <yyyy/mm/dd>/<hh:mm:ss>	Optionally, specify the time at which you want replication to pause. Use the following format: HH:MM:SS.
resume-time <yyyy/mm/dd>/<hh:mm:ss>	Optionally, specify the time at which you want replication to restart. Use the following format: HH:MM:SS.

Usage

The **no** command option disables replication scheduling.

Example

```
CLI (config) # replication schedule pause-time 10:30:00 resume-time 11:30:00
```

replication resume

Resumes replication if the AltaVault paused replication due to an error.

Syntax

replication resume

Parameters

None

Example

```
CLI (config) # replication resume
```

replication s3-prefixes enable

Enables Amazon S3 object prefixes.

Syntax

replication s3-prefixes enable

Parameters

None

Usage

The AWS Import/Export prefix mechanism allows you to create a logical grouping of the objects in a bucket. The prefix value is similar to a directory name that enables you to store similar data under the same directory in a bucket. For example, if your Amazon S3 bucket name is my-bucket, and you set prefix to my-prefix/, and the file on your storage device is /jpgs/sample.jpg, then sample.jpg would be loaded to http://s3.amazonaws.com/my-bucket/my-prefix/jpgs/sample.jpg. If the prefix is not specified, sample.jpg would be loaded to http://s3.amazonaws.com/my-bucket/jpgs/sample.jpg. You can specify a prefix by adding the prefix option in the manifest.

Example

```
CLI (config) # replication s3-prefixes enable
```

replication storage-policy

Configures the storage policy for AT&T Synaptic Storage as a Service cloud provider. This command does not apply to other cloud providers.

Syntax

replication storage-policy <policy>

Parameters

storage-policy <policy1 policy 2>	Specify policy1 to use storage policy 1 (which is the default value) or policy2 to use policy 2.
	Note: The storage optimization service does not start if you use an invalid policy for AT&T Synaptic Storage cloud provider.

Usage

AT&T Synaptic Storage as a Service enables you to control how and where your data is stored. All of the policies include:

- Enterprise-grade network security
- Unlimited storage
- Available over the Internet or an AT&T VPN Service

You can use one of the following policies:

Policy 1 - Local Replication: Data stored in one location and protected using erasure coding.

Policy 2 - Remote Replication: Data stored in two locations, with a copy maintained in one data center and replicated to a geographically remote data center.

By default, all of your data objects will be stored at one site using Policy 1. For data that requires special treatment, you can specify Policy 2 via the API to keep copies at geographically diverse locations.

Erasure coding is a software-based data protection scheme that enables for data recovery in the event of hardware failures. The technology splits each data object into ten equally-sized segments, adds two parity segments, then distributes these segments across different storage nodes within the platform. Should a hardware failure result in loss of up to two of the primary segments, the system is designed to reconstruct the original data using the parity information.

Example

```
CLI (config) # replication schedule pause-time 10:30:00 resume-time 11:30:00
CLI (config) # replication storage-policy ?
<policy>
policy1      ATT Synaptic Storage Local Replication policy (default)
policy2      ATT Synaptic Storage Remote Replication policy
```

To specify a storage policy, type the following command:

```
oak-csa13 (config) # replication storage-policy policy2
Service restart required.
```

replication ssl cloud-ca

Enables custom certificate authority.

Syntax

[no] replication ssl cloud-ca

Parameters

ca-data	Allows certificate authority data in PEM format.
----------------	--

Usage

The **no** command option disables custom certificate authority.

Example

```
CLI (config) # replication ssl cloud-ca "ca-data"
```

Other Commands

This section describes miscellaneous AltaVault commands.

aws setup data partition

Formats all EBS volumes and creates a RAID0 /data partition to store the user backup data. It is useful when you launch a AltaVault Amazon Machine Image.

Syntax

aws setup data partition

Parameters

None

Usage

/data is the partition that holds the user backup data.

While the AltaVault instance was booting, you attached one or more EBS volumes. You create the /data partition using these EBS volumes.

This command takes a few minutes to complete because it formats all EBS volumes and creates a RAID0 /data partition.

Example

```
CLI (config) # aws setup data partition
```

host-label

Configures host label settings

Syntax

[no] host-label <name> {hostname <hostname> [subnet X.X.X.X/XX] | subnet X.X.X.X/XX [hostname <hostname>]}

Parameters

<name>	Specify the name of the host label. - Host labels are case sensitive and can be any string consisting of letters, the underscore (_), or the hyphen (-). There cannot be spaces in host labels. There is no limit on the number of host labels you can configure. - To avoid confusion, do not use a number for a host label. - Host label changes (that is, adding and removing hosts inside a label) are applied immediately by the rules that use the host labels that you have modified.
hostname <hostname>, ...	Specify a hostname or a comma separated list of hostnames. - Hostnames are case insensitive. - You can configure a maximum of 100 unique hostnames across all host labels. - A maximum of 64 subnets and hostnames per host label is allowed.
subnet <X.X.X.X/XX>, ...	Specify an IPv4 subnet for the specified host label or a comma separated list of IPv4 subnets. Use the format X.X.X.X/XX.

Usage

Host labels are names given to lists of hosts (IP addresses, IP subnets, and hostnames) that you can use. For example, you can specify host labels to define a set of hosts. You can configure a mixture of subnets and hostnames for each label. A maximum of 64 subnets and hostnames per host label is allowed.

Hostnames referenced in a host label are automatically resolved through a DNS. The system resolves them immediately after you add a new host label or after you edit an existing host label. The system also automatically re-resolves hostnames once daily. If you want to resolve a hostname immediately, use the **resolve host-labels** command.

Example

```
CLI (config) # host-label test hostname netapp.com, example.com subnet 192.168.0.1/32, 192.168.0.2/32, 10.0.0.0/8
```

host-label

Configures host label settings

Syntax

[no] host-label <name> {hostname <hostname> [subnet X.X.X.X/XX] | subnet X.X.X.X/XX [hostname <hostname>]}

Parameters

<name>	Specify the name of the host label. - Host labels are case sensitive and can be any string consisting of letters, the underscore (_), or the hyphen (-). There cannot be spaces in host labels. There is no limit on the number of host labels you can configure. - To avoid confusion, do not use a number for a host label. - Host label changes (that is, adding and removing hosts inside a label) are applied immediately by the rules that use the host labels that you have modified.
hostname <hostname, . . . >	Specify a hostname or a comma separated list of hostnames. - Hostnames are case insensitive. - You can configure a maximum of 100 unique hostnames across all host labels. - A maximum of 64 subnets and hostnames per host label is allowed.
subnet <X.X.X.X/XX>, . . .	Specify an IPv4 subnet for the specified host label or a comma separated list of IPv4 subnets. Use the format X.X.X.X/XX.

Usage

Host labels are names given to lists of hosts (IP addresses, IP subnets, and hostnames) that you can use. For example, you can specify host labels to define a set of hosts. You can configure a mixture of subnets and hostnames for each label. A maximum of 64 subnets and hostnames per host label is allowed.

Hostnames referenced in a host label are automatically resolved through a DNS. The system resolves them immediately after you add a new host label or after you edit an existing host label. The system also automatically re-resolves hostnames once daily. If you want to resolve a hostname immediately, use the **resolve host-labels** command.

Example

```
CLI (config) # host-label test hostname netapp.com, example.com subnet 192.168.0.1/32, 192.168.0.2/32, 10.0.0.0/8
```

resolve host-label

Forces the system to resolve host labels immediately.

Syntax

resolve host-labels

Parameters

None

Usage

You can use the **resolve host-labels** command to force a resolve instead of waiting for the daily automatic resolve operation. Every time this command is executed, the next automatic resolve operation is reset to occur 24 hours later.

Example

```
CLI (config) # resolve host-labels
```

rfsctl exec

Changes the restore throttle limit that the AltaVault uses for data retrieved from Amazon Glacier.

Syntax

```
rfsctl exec -"w prepop.restore_percent_limit_per_hour=<new_value>"
```

Parameters

new_value	Specify the value of the restore throttle limit that the AltaVault uses for data retrieved from Amazon Glacier.
------------------	---

Usage

The restore throttle alarm is applicable only when the cloud storage used is AWS Glacier.

AWS Glacier documentation specifies a monthly limit up to which no restore costs are charged for retrieving data. After this limit is exceeded, data retrieval costs can be substantial. For details, see AWS Glacier documentation.

By default, the AltaVault has a restore throttle for data retrieved from Glacier. This throttle keeps retrievals below the no-cost limit. The default value of this restore throttle is 5%. Therefore, you can use the AltaVault to restore 5% of total cloud usage in a month. The throttle is enforced on an hourly basis. Hourly data retrieval is limited to (5% of the total cloud use)/(hours per month).

You can increase the 5% restore throttle limit up to 100% or completely disable it by setting the limit to 0. You might incur data retrieval charges when you make this change.

If you increase the restore throttle limit about 5% or disable it, the restore throttling alarm appears. If your action is intentional and you do not want to see the alarm, you can disable the alarm by typing the following on the command line:

```
CLI (config) #rfsctl exec -"w prepop.enable_restore_throttle_alarm=false"
```

Example

```
CLI (config) # # rfsctl exec -"w prepop.restore_percent_limit_per_hour=<new_value>"
```

To disable the restore throttling alarm, type the following command:

```
CLI (config) #rfsctl exec -"w prepop.enable_restore_throttle_alarm=false"
```

secure-vault

Manages the secure vault password and unlocks the secure vault.

Syntax

```
secure vault new-password <password> | reset-password <old password> | unlock <password>
```

Parameters

new-password <password>	Specify an initial or new password for the secure vault.
reset-password <old password>	Specify the old secure vault password to reset it.
unlock <password>	Specify the current password to unlock the secure vault.

Usage

The *secure vault* is an encrypted file system on the AltaVault where all AltaVault SSL server settings, other certificates (the CA, peering trusts, and peering certificates) and the peering private key are stored. The secure vault protects your SSL private keys and certificates when the AltaVault is not powered on.

You can set a password for the secure vault. The password is used to unlock the secure vault when the AltaVault is powered on. After rebooting the AltaVault, SSL traffic is not optimized until the secure vault is unlocked with the **unlock <password>** parameter.

Data in the secure vault is always encrypted, whether or not you choose to set a password. The password is used only to unlock the secure vault.

To change the secure vault password

1. Reset the password with the **reset-password <password>** parameter.

2. Specify a new password with the **new-password** <password> parameter.

Example

```
CLI (config) # secure-vault unlock mypassword
```

raidgroup import

Deletes all data on a raidgroup and adds a drive.

Syntax

raidgroup import <serial_number>

Parameters

<serial_number>	Specify the serial number of the AltaVault Expansion raidgroup to which you want to add a drive.
-----------------	--

Example

```
CLI (config) # raidgroup import <serial number>
```

Displaying System Data

This section describes the **show** commands (in the configuration mode) for displaying the AltaVault information.

show ost server

This command displays the OST shares configured on AltaVault.

Syntax

show ost server

Parameters

None

Example

```
CLI (config) # show ost server
OST: Enabled
OST Server: running
SSL: Disabled
```

show ost shares

This command displays the status of the OST server on AltaVault.

Syntax

show ost shares

Parameters

None

Example

```
CLI (config) # show ost shares
Share: foo
  Share Type:      regular
  Pin:             No
```

```
No Dedup:           No
No Compression:     No
Early Eviction:     No
Users:              None
    Username:       test1
    Enabled:        Yes
```

show smb domain

This command displays the Active Directory (AD) domains joined to the AltaVault.

Syntax

show smb domain

Parameters

None

Example

```
CLI (config) # show smb domain
Domain: example.com
```

show smb log

This command displays the current log level of the SMB server.

Syntax

show smb log

Parameters

None

Example

```
CLI (config) # show smb log
SMB Log Level: err
```

show smb multichannel

This command displays SMB multichannel status on the AltaVault.

Syntax

show smb multichannel

Parameters

None

Example

```
CLI (config) # show smb multichannel
Global config:
Multichannel: Enabled
Data Interface: e0b
    Multichannel: Enabled
Data Interface: e0c
    Multichannel: Enabled
```

show smb shares

This command displays the configured SMB shares on the AltaVault.

Syntax**show smb shares [permissions]****Parameters**

permissions	Optionally, specify the permissions to access the SMB share.
--------------------	--

Example

```
CLI (config) # show smb shares
```

```
Share: smb
    Path:                /smb
    Comment:             Default SMB share
    Read only:           no
    Pinned:              no
    No Dedup:            no
    No Compression:      no
    Early Eviction:      no
```

show smb users

Displays the SMB user names added in the system.

Syntax**show smb users****Parameters**

None

Example

```
CLI (config) # show smb users
```

```
User:      foo
    Enabled: yes
    Admin:  yes

User:      bar
    Enabled: yes
    Admin:  yes
```

show datastore prepop

Displays the data store prepopulation files.

Syntax**show datastore prepop jobs [files] [dryrun]**

Parameters

jobs	Displays the status, start time, and completion time of the data store prepopulation task. Status has one of the following values: • Enqueued - The prepopulation task has just been recorded. The AltaVault has not started processing it. You do not usually see this status (unless there are a thousand prepopulation tasks) because the prepopulation process is very fast and it quickly moves to the next step in the process. • Processing - The AltaVault is identifying data that must be restored from the cloud. • Requested - The system has requested all of the data required for the prepopulation request from the cloud. • Downloading - The system has started downloading the data for the prepopulation request. When the cloud provider is Amazon Glacier, it usually takes about five hours for this state to appear. • Completed - This state indicates that the prepopulation task is complete. The start time and completion time also appear in a separate column. • Failed - This state indicates that the AltaVault did not restore all of the data and the prepopulation task failed. Check the logs to determine the reason for failure.
files	Lists that files included in each prepopulation task.
dryrun	Displays information for data store prepopulation tasks that were set up for dry run.

Example

```
CLI (config) # show datastore prepop jobs
Job: Job 4000
    Status:           Completed
    Start Time:       2013/01/03 17:32:56
    Complete Time:    2013/01/03 17:42:56

Job: Job 4001
    Status:           Completed
    Start Time:       2013/01/03 17:33:30
    Complete Time:    2013/01/03 17:42:56

Job: Job 4002
    Status:           Completed
    Start Time:       2013/01/03 17:33:58
    Complete Time:    2013/01/03 17:42:56
```

show events config

Displays the events configured on the AltaVault.

Syntax

show events config

Parameters

None

Example

```
CLI (config) # show events config
max-age:      one month
```

show files mfsck

Displays the MFSCK results file.

Syntax

show files mfsck

Parameters

None

Example

```
CLI (config) # show files mfsck
mfsck-result-20101211-132004.log
```

show files verify

Displays the Verify results file.

Syntax**show files verify****Parameters**

None

Example

```
CLI (config) # show files verify
```

show fips status

Displays Federal Information Processing Standard (FIPS) status information by feature.

Syntax**show fips status****Parameters**

None

Example

```
CLI > show fips status
CMC Autoregistration: Should not be configured in FIPS mode.
Citrix Basic Encryption: Should not be configured in FIPS mode.FIPS Mode: Disabled. You must save
the configuration and reload the system to enable FIPS mode.
```

show host-label

Displays information about the specified host label.

Syntax**show host-label <name> [detailed]****Parameters**

<name>	Specify the name of the host label.
detailed	Displays detailed hostname and subnet status information.

Example

```
CLI # show host-label test
10.0.0.0/8, 192.168.0.1/32, 192.168.0.2/32, example.com, netapp.com
```

```
CLI # show host-label test detailed
```

```
Subnets:
10.0.0.0/8, 192.168.0.1/32, 192.168.0.2/32
```

```
Host example.com:
192.0.43.10/32
Resolved: 2013/03/12 18:54:14

Host netapp.com:
192.0.43.10/32
Resolved: 2013/03/12 18:54:14

Next scheduled resolve: 2013/03/13 18:54:09
```

show hwraid disk information

Displays the disk status of all of the hardware RAID drives.

Syntax

show hwraid disk information

Parameters

None

Example

```
CLI (config) # show hwraid disk information
NOTE: The drives below are represented in [Adapter ID, Enclosure ID, Slot ID] fo
rmat
=====

Adapter serial XBEGG000032CD ID 0:
=====
[0, 16, 0] online      [0, 16, 1] online      [0, 16, 2] online      [0, 16,
3] online
[0, 16, 4] online      [0, 16, 5] online      [0, 16, 6] online      [0, 16,
7] online
[0, 16, 8] online      [0, 16, 9] online      [0, 16, 10] online     [0, 16,
11] online

Adapter serial XC9shelf10000 ID 1:
=====
[1, 29, 0] online      [1, 29, 1] online      [1, 29, 2] online      [1, 29,
3] online
[1, 29, 4] online      [1, 29, 5] online      [1, 29, 6] online      [1, 29,
7] online
[1, 29, 8] online      [1, 29, 9] online      [1, 29, 10] online     [1, 29,
11] online

Adapter serial XC9shelf20000 ID 1:
=====
[1, 29, 0] online      [1, 29, 1] online      [1, 29, 2] online      [1, 29,
3] online
[1, 29, 4] online      [1, 29, 5] online      [1, 29, 6] online      [1, 29,
7] online
[1, 29, 8] online      [1, 29, 9] online      [1, 29, 10] online     [1, 29,
11] online
```

show ip data-gateway

Displays the IP data gateway for the specified interface.

Syntax

show ip data-gateway <interface> static

Parameters

<interface>	Specify the values for the interface.
static	Displays configured data interface routes.

Example

```
CLI (config) # show ip data-gateway
Destination      Mask           Gateway
default          0.0.0.0       10.1.2.3
```

show ip data route

Displays the IP data route for the specified interface.

Syntax

show ip data route <interface> static

Parameters

<interface>	Specify the values for the interface.
static	Displays configured data interface routes.

Example

```
CLI (config) # show ip data route
```

show licenses cloud

Displays the AltaVault bucket-based licenses (if they exist).

Syntax

show licenses cloud

Parameters

None

Example

```
CLI (config) # show licenses cloud
```

show license-servers

Displays the license servers.

Syntax

show license servers

Parameters

None

Example

```
CLI (config) # show license-servers
Server Name      Port           Priority
-----
WWLicenseServer  80             0
```

show nfs

Displays the configured NFS exports.

Syntax

show nfs

Example

```
CLI (config) # show nfs
Export: AltaVault
      Path:      /
      Clients:   all
```

show ntp active-peers

Displays the NTP active peers.

Syntax

show ntp active-peers

Example

```
CLI (config) # show ntp active-peers
      remote      refid      st t when poll reach  delay  offset  jitter
=====
-208.79.16.124    72.26.198.233    3 u  116 1024  377   69.310   1.198   0.911
+ponderosa.piney 209.51.161.238    2 u  184 1024  377   76.879  -0.333   1.222
*time1.scl3.mozi .GPS.           1 u  208 1024  377    5.102    0.187   0.209
-ftp.netapp.co 10.16.0.15        4 u   68 1024  377    1.938  -5.382   0.667
+helium.constant 96.47.67.105      2 u  193 1024  377   74.093  -2.229   0.451

      remote      conf  auth  key
=====
208.79.16.124    yes   none  none
ponderosa.piney  yes   none  none
time1.scl3.mozi  yes   none  none
ftpl.netapp.c   yes   none  none
helium.constant  yes   none  none
```

show ntp authentication

Displays NTP authentication settings.

Syntax

show ntp authentication

Example

```
CLI (config) # show ntp authentication
No trusted key list or authentication keys configured.
```

show papi rest access_codes

Displays the configured REST API access codes.

Syntax

show papi rest access_codes

Example

```
CLI (config) # show papi rest access_codes
No access codes
```

show replication

Displays replication settings.

Syntax

show replication

Parameters

None

Usage

The Storage Policy appears only if the provider is AT&T Synaptic Storage.

Example

```
CLI (config) # show replication
Enable replication: yes
Provider type: s3
Hostname: s3.amazonaws.com
Port: 443
Bucket name: foobar123
Key Management Server support: Disabled
Bandwidth Limit: None
CLI (config) #
<Ctrl+C>
```

show replication bucket

Displays the contents of the replication bucket.

Syntax

show replication bucket

Parameters

None

Example

```
CLI (config) # show replication bucket
listing entries from bucket om-vbhandwa
3 entries in bucket om-vbhandwa
1.6kB (1623 bytes) in bucket om-vbhandwa:
  * 0B in 0 maps
  * 0B in 0 rbtmds
```

show replication bytes-pending

Displays the amount of data waiting to be replicated to the cloud.

Syntax

show replication bytes-pending

Parameters

None

Example

```
CLI (config) # show replication bytes-pending
Data pending replication: 0 bytes
Notification threshold:   536870912000 bytes
Clear threshold:         483183820800 bytes
```

Usage

You use this command when you migrate your data from your existing cloud provider to a new cloud provider.

show replication estimate

Displays the estimated time for replication to complete.

Syntax

show replication estimate

Parameters

None

Example

```
CLI (config) # show replication estimate
Replication time remaining: 00:00:00
```

show replication migrate-to

Displays the time it takes for replication to migrate.

Syntax

show replication migrate-to

Parameters

estimate	Displays the estimated time until migration completes.
proxy	Displays the proxy server settings for Cloud Agility.

Example

```
CLI(config) # show replication migrate-to proxy
Hostname: 10.192.6.83
Port:     443
Username:
Enabled:  no
```

show replication migration-delay

Displays the current settings for migration to AWS Glacier.

Syntax

show replication migration-delay

Parameters

None

Example

```
CLI(config) # show replication migration-delay
Migration delay: 0 days
```

show replication prepop-throttle

Displays the current prepop throttle setting for AWS Glacier.

Syntax

show replication prepop-throttle

Parameters

None

Example

```
CLI(config) # show replication prepop-throttle
Monthly retrieval limit: 5 percent
```

show replication progress

Displays the time up until which the datastore (dataslabs and metadata) has been replicated to the cloud.

Syntax

show replication progress

Parameters

None

Usage

Understanding the progress of the datastore replication from AltaVault to the cloud is an important consideration in deciding whether to initiate a disaster recovery (DR) operation. Initiating a DR operation when metadata replication is still in progress can cause issues when attempting to recover the data. This command reports replication progress, which can be used in evaluating backup operations. The message reported depends on the data replication progress:

Case 1: AltaVault storage optimization service (rfsd) is not running (error):

```
% Cannot get the replication status unless service is running.
```

Case 2: Metadata replication complete; datastore replication in progress:

```
Datastore has been replicated until: 2015/11/24 18:50:49
```

Case 3: Data replication complete; metadata replication pending:

```
Metadata replication is in progress
```

Case 4: Data and metadata replication completed:

```
Datastore has been replicated until: now
```

Note: Do not initiate DR when metadata replication is in progress.

Example

```
CLI (config) # show replication progress
```

show replication proxy

Displays the current replication proxy server settings.

Syntax

show replication proxy

Parameters

None

Example

```
CLI (config) # show replication proxy
Hostname: proxy.ww.com
Port: 22
Username: ww-user
```

show replication retention-time

Displays the current settings for retention in S3 after restoring from AWS Glacier.

Syntax

show replication retention-time

Parameters

None

Example

```
CLI (config) # show replication retention-time
Retention duration: 1 days
```

show raidgroups

Displays information about the AltaVault Expansion raidgroups connected to the head unit.

Syntax

show raidgroups

Parameters

None

Example

```
CLI (config) # show raidgroups

Shelf 0:
Serial Num: SHJMS1451000374
Product ID: AVA10S

RAID Group 0:
RAID Group ID: 000b683402220000ffe0a2e409b00506
Model: 4TB disks
Mount Point: /dev/sdb
State: imported, valid
Size: 40002199206912B
```

show tcpdump stop-trigger

Displays the configuration settings that trigger a TCP dump to stop.

Syntax

show tcpdump stop-trigger

Parameters

None

Example

```
CLI # show tcpdump stop-trigger
Tcpdump trigger enabled: no
Regex:
Delay: 30
Last triggered on: 1969/12/31 16:00:00
Last triggered by:
```

show uploads

Displays system dump files uploaded to NetApp Support.

Syntax

show uploads

Parameters

None

Usage

The **show uploads** command shows the system dump files that have been uploaded to NetApp Support or are in progress. The display shows up to 100 upload statistics, includes whether the upload is completed or in progress, and indicates whether or not an error occurred during the upload process.

Example

```
CLI # show uploads
```

show upload-sysdump

Displays the configuration settings for uploading the alarm-based automatic system dump to the NetApp Support site.

Syntax

show upload-sysdump

Parameters

None

Example

```
CLI # show upload-sysdump
Auto Upload Sysdump Enabled: yes
```

show vif

Displays details about the virtual interface

Syntax

show vif

Parameters

None

Example

```
CLI # show vif
```

show vif configured

Displays the virtual interface configuration.

Syntax**show vif configured****Parameters**

None

Example

```
CLI # show vif configured
```

show vlan

This command displays the VLAN tagging settings.

Syntax**show vlan [interface <interface>] [configured]****Parameters**

interface <interface>	Displays details of VLAN tagging settings for physical or virtual interfaces. If the interface is missing, it will display all the VLAN tagging settings.
configured	Shows configured settings or active settings read from /proc/net/vlan/config.

Example

```
CLI (config) # show vlan
e0a:
  vid: 2
  vid: 3
e0b:
  vid: 4
```

debug health-report enable

Enables the reporting of product health information.

Syntax**[no] debug health-report enable****Parameters**

None

Usage

NetApp has enhanced its product health reporting. A single encrypted HTTPS connection is now opened from each managed device and periodically delivers anonymized information to secure servers located at comms.usage.netapp.com:443. This reporting is enabled by default. To disable reporting of product health information, use the **no debug health-report enable** command.

Example

```
CLI (config) # no debug health-report enable
```

debug uptime-report enable

Enables the reporting of product usage information.

Syntax**[no] debug uptime-report enable****Parameters**

None

Usage

NetApp has enhanced its product usage reporting by directing a periodic DNS request to a dynamically generated host ending in updates.netapp.com.

This reporting is enabled by default. To disable reporting of product health information, use the **no debug uptime-report enable** command.

Example

```
CLI (config) # no debug uptime-report enable
```

datamigration send dest-ip <ipaddress1,ipaddress2...>

Sends data from source appliance to target appliance.

Syntax**datamigration send dest-ip <ipaddress1, ipaddress2....>****Parameters**

<destination IP address>	Single IP address or comma separated list. For example, 192.168.1.2 or 192.168.1.2,192.168.1.3.
---------------------------------------	---

Usage

This command sends the data from source appliance to target appliance. One or more destination IP addresses can be provided as the input parameter. It is recommended to use multiple destination IP addresses as it provides faster data transfer and fault tolerance.

Example

```
CLI (config) # datamigration send dest-ip 1.2.3.4,5.6.7.8
```

```
Validating data migration state with receiver
```

```
Sending configuration to receiver
```

```
Configuration successfully sent to receiver
```

```
Checking if configuration is imported on receiver
```

```
Transferring datastore
```

```
Waiting for target to be ready for deduplication index synchronization
```

```
Deduplication index transfer progress = 100.00% ETA = DONE
```

```
Head Unit:
```

```
Metadata transfer progress = 77.67% ETA = 0:00:01
```

```
Data transfer progress = 4.09% ETA = 0:25:00
```

```
Raidgroup - 1
```

```
Metadata transfer progress =70.00% ETA = 0:00:05
```

```
Data transfer progress = 4.72% ETA = 0:21:31
```

```
Throughput of network interface foo: 938.61 Mbps
```

datamigration send dest-ip <ipaddress1,ipaddress2...> metadata-only

Sends metadata only from source appliance to the target appliance.

Syntax

datamigration send dest-ip <ipaddress1, ipaddress2....> metadata only

Parameters

<destination IP address>	Single IP address or comma separated list. For example, 192.168.1.2 or 192.168.1.2,192.168.1.3.
---	---

Usage

This command sends only the metadata from source appliance to target appliance. It does not transfer local data cache to the target appliance.

Example

```
CLI (config) # datamigration send dest-ip 1.2.3.4,5.6.7.8 metadata-only
```

```
Validating data migration state with receiver
```

```
Sending configuration to receiver
```

```
Configuration successfully sent to receiver
```

```
Checking if configuration is imported on receiver
```

```
Transferring datastore
```

```
Waiting for target to be ready for deduplication index synchronization
```

```
Deduplication index transfer progress = 100.00% ETA = DONE
```

```
Head Unit:
```

```
Metadata transfer progress = 77.67% ETA = 0:00:01
```

```
Raidgroup - 1
```

```
Metadata transfer progress =70.00% ETA = 0:00:05
```

```
Throughput of network interface foo: 526.44 Mbps
```

datamigration send stop

Stops data migration on the source appliance.

Syntax

datamigration send stop

Parameters

None

Usage

This command stops data migration in progress on the source appliance. Restarting data migration after this command, will continue the migration from where it was stopped.

Example

```
CLI (config) # datamigration send stop
```

datamigration send reset

Resets incomplete data migration on the source appliance.

Syntax

datamigration send reset

Parameters

None

Usage

This command deletes the states associated with previous incomplete data migration. This is used to start data migration from the beginning again.

Example

```
CLI (config) # datamigration send reset
CLI (config) #
```

datamigration receive

Receives data from the source appliance.

Syntax

datamigration receive

Parameters

None

Usage

This command allows the target or AltaVault appliance to receive data from source or SteelStore appliance. This is the first step in data migration from SteelStore to AltaVault.

Example

```
CLI (config) # datamigration receive
```

Enter the passphrase to import configuration from remote appliance. Simply hit <enter> if there is no passphrase configured:

Ready to receive data from source appliance.

Waiting to import configuration

Configuration import was successful

Ready to synchronize deduplication index

datamigration receive reset

Resets incomplete data migration on the target appliance.

Syntax

datamigration receive reset

Parameters

None

Usage

This command deletes the states associated with previous incomplete data migration. This is used to start data migration from the beginning again.

Example

```
CLI (config) # datamigration receive reset
```

Reset completed. Before restarting data migration receiver, format local datastore.

Do you want to format local datastore? (y/N)y

Format local datastore successfully

```
CLI (config) #
```

datamigration receive stop

Stops data migration on the target appliance.

Syntax

datamigration receive stop

Parameters

None

Example

```
CLI (config) # datamigration receive stop
```

```
CLI (config) #
```

show datamigration status

Displays latest data migration status.

Syntax

show datamigration status

Parameters

None

Usage

This command displays the latest status of data migration. It can be issued both on the source and target appliance.

Example

```
CLI (config) # show datamigration status
Data migration: Not running
Last status: Reset
CLI (config) # show datamigration status
Data migration: Running
Last status:
Validating data migration state with receiver
```

Entering KMIP commands

This section describes the **KMIP** commands for AltaVault.

show keymgmt objects [name *]

Displays the registered KMIP objects (symmetric keys and secret data objects).

Syntax

show keymgmt objects [name *]

Parameters

name	Specify the name of the server.
------	---------------------------------

Example

```
(config) # show keymgmt objects
Object name: TestKey
  Server: keyserver
  Type: SECRET_DATA

Object name: ava_key_1
  Server: keyserver
  Type: SYMMETRIC_KEY
```

show keymgmt servers [name *]

Displays the registered KMIP servers.

Syntax

show keymgmt servers [name *]

Parameters

server	Specify the name of the server.
---------------	---------------------------------

Example

```
(config) # show keymgmt servers
Server name: keyserver
  Host: 172.16.34.199
  Port: 5696
  Protocol: 0
  Username: testuser
```

keymgmt server * host * [port *] [kmip-version *] [username *] [password *]

Registers a new KMIP server.

Syntax

keymgmt server * host * [port *] [kmip-version *] [username *] [password *]

Parameters

server	Specify the name of the server.
host	Specify the hostname.
port	Specify the port number.
kmip-version	Specify the KMIP version (1.0, 1.1, 1.2, or 1.3).
username	Specify the username to log in to the server.
password	Specify the password to log in to the server.

Example

```
(config) # keymgmt server keyserver host 1.2.3.4 port 5696 kmip-version 1.0 username user password
password
```

keymgmt server * import-cert *

Imports a CA certificate to use when verifying KMIP server's SSL certificate.

Syntax

keymgmt server * import-cert *

Parameters

server	Specify the name of the server.
import-cert	Specify the CA certificate data in PEM format.

Example

```
(config) # keymgmt server keyserver import-cert "-----BEGIN CERTIFICATE-----
...snip...
> -----END CERTIFICATE-----"
```

no keymgmt server *

Deletes a KMIP server.

Syntax

no keymgmt server *

Parameters

server	Specify the name of the server.
---------------	---------------------------------

Example

```
(config) # no keymgmt server keyserver
```

no keymgmt object *

Deletes a KMIP object. This does not delete the object from the KMIP server. It only deletes the configuration in AltaVault associated with that object.

Syntax

no keymgmt object*

Parameters

object	Specify the name of the KMIP object.
---------------	--------------------------------------

Example

```
(config) # no keymgmt object Testkey
```

keymgmt object * server * uuid * object-type *

Adds a KMIP object.

Syntax

keymgmt object * server * uuid * object-type *

Parameters

object	Specify the name of the KMIP object.
server	Specify the name of the KMIP server.
uuid	Specify the UUID of KMIP object.
object-type	Select symmetric_key to manage datastore encryption. Or, select secret_data to manage cloud authentication.

Example

```
(config) # keymgmt object TestKey server keyserver uuid 12345 object-type SYMMETRIC_KEY
```

keymgmt register secret-data

Registers cloud authentication credentials with Key Management Server (KMS). This allows users to fetch UUID of secret data (cloud auth keys) key object automatically from KMS.

Syntax

keymgmt register secret-data <secret-data-name> value <secret-data-value> server <KMS sever name>

Parameters

secret-data {name}	Specify the name of the secret data.
value	Specify the value of the secret data.
server	Specify the KMS server.

Example

```
sankaras-madison (config) # keymgmt register secret-data ljk value asd server test
```

keymgmt register key * type SYMMETRIC_KEY server *

Registers the current datastore encryption key as a KMIP symmetric key object to the server.

Syntax

```
keymgmt register key * type SYMMETRIC_KEY server *
```

Parameters

key	Specify the name of KMIP key.
type	Specify the SYMMETRIC_KEY.
server	Specify the name of the server.

Example

```
(config) # keymgmt register key TestKey type SYMMETRIC_KEY server keyserver
```

replication auth keymgmt type *

These commands are the equivalent of the "replication auth type * ..." commands, except instead of specifying the actual cloud credentials, each parameter after the type parameter should be the name of the KMIP secret data object which contains that cloud credential.

Syntax

```
replication auth keymgmt type * {
atmos subtenant-id <ID> uid <ID> shared-secret <string> |
azure pri-acc-key <key> sec-acc-key <key> |
cleversafe acc-key-id <key> |
cloudian acc-key-id <key> |
evault acc-key-id <key> |
glacier acc-key-id <ID> secret-acc-key <key> |
google client-id <ID> project-id <ID> private-key <path> |
iij acc-key-id <key> secret-acc-key <key>
rackspace username <user name> api-acc-key <key> |
s3 auth-method standard acc-key-id <ID> secret-acc-key <key> |
s3 auth-method sts idp-url <URL> idp-method <Method> params <Parameter> |
savvis subtenant-id <ID> uid <ID> shared-secret <string> |
softlayer username <user name> api-acc-key <key> |
swift username <user name> password <password>
telefonica acc-key-id <ID> secret-acc-key <key> |
verizon acc-key-id <ID> secret-acc-key <key> |
```

}

Parameters

type	Specify the cloud provider.
	Additional parameters depend on the cloud provider type.

Example

```
(config) # replication auth keymgmt type s3 auth-method standard acc-key-name acc_key sa-key-name
sec_key
```

datastore encryption keymgmt enable key *

Enables key management of the datastore encryption key using an existing KMIP key. The key must be an AES256 key.

Syntax

datastore encryption keymgmt enable key *

Parameters

key	Specify the KMIP object.
------------	--------------------------

Example

```
(config) # datastore encryption keymgmt enable key TestKey
```

no datastore encryption keymgmt enable

Disables key management of the datastore encryption key using an existing KMIP key. Either the original key must be imported, or the datastore must be formatted to use a new key.

Syntax

no datastore encryption keymgmt enable

Parameters

None

Example

```
(config) # no datastore encryption keymgmt enable
```

Disabled KMIP for datastore encryption. Generate or import datastore encryption key.

show datastore encryption keymgmt

Displays the current key management setting for the datastore encryption key.

Syntax

show datastore encryption keymgmt

Parameters

None

Example

```
CLI (config) # show datastore encryption keymgmt
```

Encryption with Key management server: Enabled

Key name: TestKey

CHAPTER 5 Troubleshooting

This section contains a table of commands to provide a quick reference for troubleshooting.

Problem	Commands
General	“show bootvar,” “show bootvar”
	“show logging”
	“logging local”
	“show info”
	“show version”
Start, Stop, and Reboot	“reload”
	“service enable”
	“service restart”
Connectivity Issue	“ping”
	“traceroute”
	“show bootvar”
Data Store	“disable,” “datastore prepop”
Hardware	“show stats cpu”
	“show stats ecc-ram”
	“show stats fan”
	“show hardware error-log”
	“show hardware watchdog”
RAID	“show raid diagram”
	“show raid error-msg”
	“show raid info”
Upgrade and Boot	“show images”
	“show bootvar”
Collecting System Data for NetApp Technical Support	“debug generate dump”

Copyright Information

© 2016 NetApp, Inc. All rights reserved.

No portions of this document may be reproduced without prior written consent of NetApp, Inc. Specifications are subject to change without notice. NetApp, the NetApp logo, Go Further, Faster, ASUP, AutoSupport, Campaign Express, Cloud ONTAP, Clustered Data ONTAP, Customer Fitness, Data ONTAP, DataMotion, Fitness, Flash Accel, Flash Cache, Flash Pool, FlashRay, FlexArray, FlexCache, FlexClone, FlexPod, FlexScale, FlexShare, FlexVol, FPolicy, GetSuccessful, LockVault, Manage ONTAP, Mars, MetroCluster, MultiStore, NetApp Insight, OnCommand, ONTAP, ONTAPI, RAID-DP, SANtricity, SecureShare, Simplicity, Simulate ONTAP, Snap Creator, SnapCopy, SnapDrive, SnapIntegrator, SnapLock, SnapManager, SnapMirror, SnapMover, SnapProtect, SnapRestore, Snapshot, SnapValidator, SnapVault, StorageGRID, Tech OnTap, Unbound Cloud, WAFL and Whitewater are trademarks or registered trademarks of NetApp, Inc. and its affiliated entities in the United States and/or other countries. AltaVault [and Riverbed] are trademarks of Riverbed Technology used pursuant to license. Any other brands or products are trademarks or registered trademarks of their respective holders and should be treated as such. A current list of certain of NetApp trademarks is available on the Web at <http://www.netapp.com/us/legal/netapptmlist.aspx>.

Trademark Information

© 2016 NetApp, Inc. All rights reserved.

No portions of this document may be reproduced without prior written consent of NetApp, Inc. Specifications are subject to change without notice. NetApp, the NetApp logo, Go Further, Faster, ASUP, AutoSupport, Campaign Express, Cloud ONTAP, Clustered Data ONTAP, Customer Fitness, Data ONTAP, DataMotion, Fitness, Flash Accel, Flash Cache, Flash Pool, FlashRay, FlexArray, FlexCache, FlexClone, FlexPod, FlexScale, FlexShare, FlexVol, FPolicy, GetSuccessful, LockVault, Manage ONTAP, Mars, MetroCluster, MultiStore, NetApp Insight, OnCommand, ONTAP, ONTAPI, RAID-DP, SANtricity, SecureShare, Simplicity, Simulate ONTAP, Snap Creator, SnapCopy, SnapDrive, SnapIntegrator, SnapLock, SnapManager, SnapMirror, SnapMover, SnapProtect, SnapRestore, Snapshot, SnapValidator, SnapVault, StorageGRID, Tech OnTap, Unbound Cloud, WAFL and Whitewater are trademarks or registered trademarks of NetApp, Inc. and its affiliated entities in the United States and/or other countries. AltaVault [and Riverbed] are trademarks of Riverbed Technology used pursuant to license. Any other brands or products are trademarks or registered trademarks of their respective holders and should be treated as such. A current list of certain of NetApp trademarks is available on the Web at <http://www.netapp.com/us/legal/netapptmlist.aspx>.

How to Send Your Comments

You can help us to improve the quality of our documentation by sending us your feedback.

Your feedback is important in helping us to provide the most accurate and high-quality information. If you have suggestions for improving this document, send us your comments by email to doccomments@netapp.com. To help us direct your comments to the correct division, include in the subject line the product name, version, and operating system.

You can also contact us in the following ways:

- NetApp, Inc., 495 East Java Drive, Sunnyvale, CA 94089 U.S.
- Telephone: +1 (408) 822-6000
- Fax: +1 (408) 822-4501
- Support telephone: +1 (888) 463-8277

Index

A

- aaa accounting per-command default 59
- aaa authentication cond-fallback 59
- aaa authentication console-login default 60
- aaa authentication login default 60
- aaa authorization map default-user 60
- aaa authorization map order 61
- aaa authorization per-command default 61
- Access Control List 74
- access enable 74
- access inbound rule add 74
- access inbound rule edit 75
- access inbound rule move 76
- alarm clear 54
- alarm clear-threshold 55
- alarm enable 55
- alarm error-threshold 57
- alarm rate-limit 58
- alarms reset-all 58
- archival enable 115
- arp 117
- asup 8
- asup send message 8
- asup send test email 8
- authentication policy enable 69
- authentication policy login max-failures 70
- authentication policy password 70
- authentication policy template 71
- authentication policy user lock never 72
- authentication policy user login-failures reset 72
- aws setup data partition 181

B

- banner login 81
- banner motd 81
- battery relearn 135
- boot bootloader password 114

C

- clear arp-cache 27
- clear hardware edac-ue-alarm 28
- clear hardware error-log 28
- CLI
 - command negation 5
 - connecting 3
 - online help 5
 - overview of 4
 - saving configurations 6
- cli clear-history 81

- cli default auto-logout 81
- cli default paging enable 82
- cli session 82
- clock set 28
- clock timezone 117
- configuration bulk export 92
- configuration bulk import 92
- configuration copy 93
- configuration delete 94
- configuration factory 94
- configuration fetch 94
- configuration jump-start 95
- configuration jump-start command, restarting the wizard 6
- configuration merge 95
- configuration move 96
- configuration new 96
- configuration revert keep-local 96
- configuration revert saved 97
- configuration switch-to 97
- configuration upload 97
- Configuration wizard, restarting 6
- configuration write 98
- configure terminal 29

D

- datamigration receive 200
- datamigration receive reset 201
- datamigration receive stop 201
- datamigration send dest-ip 198
- datamigration send dest-ip metadata 199
- datamigration send reset 200
- datamigration send stop 200
- datastore encryption 147
- datastore encryption keymgmt enable key 206
- datastore encryption password 148
- datastore encryption reset-key 149
- datastore encryption rotate-key 148
- datastore find orphans 149
- datastore format all 149
- datastore format local 149
- datastore fsck 150
- datastore guid reset 152
- datastore integrity check 150
- datastore prepop 150
- debug generate dump 132
- debug health-report enable 197

Index

debug uptime-report enable 197
disable 29

E

email domain 98
email from-address 99
email mailhub 99
email mailhub-port 99
email notify events enable 100
email notify events recipient 100
email notify failures enable 100
email notify failures recipient 101
email send-test 101
enable 9
exit 9

F

file debug-dump upload 132
file mfsck delete 153
file mfsck upload 153
file process-dump delete 133
file process-dump upload 133
file stats delete 29
file stats move 29
file stats upload 30
file tcpdump 30
file upload clear-stats 133
file upload stop 134
file verify delete 154
file verify upload 155
fips enable 152

H

hardware watchdog enable 115
hardware watchdog shutdown 116
host-label 181, 182
hostname 117
hwraid beacon-start 135
hwraid beacon-stop 135
hwraid disk-add 135
hwraid disk-fail 136

I

image boot 114
image delete 30
image delete-all 31
image fetch 31
image install 31
image move 32
image upgrade 32
interface 118
internal show raw-stats 118
ip data route 119
ip data-gateway 119
ip default-gateway 119
ip domain-list 120
ip fqdn override 120
ip host 120
ip name-server 121
ip route 121

J

job command 129
job comment 129
job date-time 130

job enable 130
job execute 130
job fail-continue 131
job name 131
job recurring 131

K

keymgmt object 204
keymgmt register key 205
keymgmt register secret-data 204
keymgmt server 203

L

license install 114
License virtual-model 115
logging 110
logging facility user 8
logging files delete 110
logging files rotation criteria frequency 110
logging files rotation criteria size 111
logging files rotation force 111
logging files rotation max-num 111
logging filter 112
logging local 113
logging trap 113

M

Media Independent Interface 124
mfsck start check-type 154
mfsck stop 154

N

NetApp AltaVault appliance, protect access
to 74
nfs enable 156
nfs export add name 156
nfs export modify name 158
nfs export remove name 160
nfs export unpin 159
no datastore encryption keymgmt enable 206
no keymgmt object 204
no keymgmt server 204
no replication migrate-to proxy 172
no replication migrate-to proxy enable 173,
174
ntp disable 121
ntp enable 122
ntp peer 122
ntp server 122
ntp server enable 123
ntpdate 32

O

ost enable 136, 137
ost share add 137
ost share modify 137
ost share remove 138
ost share unpin 138
ost user add 138
ost user change-passwd 139
ost user enable 139
ost user remove 139

P

papi rest access_code generate 159
papi rest access_code import 160

ping 9
ping6 10

R

radius-server host 62
radius-server key 62
radius-server retransmit 63
radius-server timeout 63
raid alarm silence 136
rbm user 63
reload 32
replication auth keymgmt type 205
replication auth type 161
replication batch-size 166
replication bw-limit 166
replication bw-limit schedule 166
replication bw-limit schedule enable 167
replication enable 167
replication migrate-to auth type 168
replication migrate-to enable 167
replication migrate-to provider type 169
replication migrate-to proxy 170
replication migration-delay 174
replication num-threads 174
replication prepop-throttle 175
replication provider 175
replication proxy 176
replication proxy enable 177
replication resume 179
replication retention-time 177
replication s3-prefixes 178
replication s3-prefixes enable 179
replication schedule 178
replication storage-policy 179
resolve host-labels 182
rfsctl exec 183

S

Secure access by inbound IP address 74
secure-vault 183
service enable 116
service restart 116
share-stats generate 65
shelf import 184
show aaa 42
show access inbound rules 11
show access status 11
show alarm 11
show alarms 12
show arp 42
show authentication policy 73
show banner 43
show bootvar 12
show cli 13
show clock 13
show configuration 43
show configuration files 44
show configuration running 44
show datamigration status 201
show datastore encryption keymgmt 206
show datastore prepop 186
show email 14
show events config 187
show files debug-dump 45
show files mfsck 187

show files process-dump 45
show files stats 45
show files tcpdump 45
show files verify 188
show fips status 153, 188
show hardware all 46
show hardware error-log 14
show hardware watchdog 14
show host-label 188
show hosts 15
show hwraid disk information 189
show images 15
show info 15
show interfaces 46
show ip data route 190
show ip data-gateway 189
show ip default-gateway 47
show ip route 47
show job 47
show jobs 47
show keymgmt objects 202
show keymgmt servers 202
show licenses 48
show licenses cloud 190
show license-servers 190
show log 49
show logging 16
show nfs 191
show ntp 16
show ntp active-peers 191
show ntp authentication 191
show ost server 184
show ost shares 184
show papi rest access_codes 191
show radius 49
show raid diagram 17
show raid error-msg 17
show raid info 17
show raid physical 18
show rbm user 58
show rbm users 59
show remote ip 49
show replication 192
show replication bucket 192
show replication bytes-pending 192
show replication estimate 193
show replication migrate-to 193
show replication migration-delay 193
show replication prepop-throttle 194
show replication progress 194
show replication proxy 194
show replication retention-time 195
show running-config 50
show service 18, 22
show shelves 195
show smb domain 185
show smb log 185
show smb multichannel 185
show smb shares 185
show smb users 186
show snmp 19
show snmp acl-info 19
show snmp ifindex 20
show snmp usernames 20

Index

- show ssh server 20
- show stats alarm 21
- show stats cpu 23
- show stats ecc-ram 24
- show stats fan 24
- show stats memory 50
- show tacacs 50
- show tcpdump stop-trigger 195
- show tcpdump-x 24
- show terminal 24
- show uploads 196
- show upload-sysdump 196
- show userlog 51
- show usernames 51, 52, 73
- show version 25
- show vif 196
- show vif configured 196
- show vlan 197
- show web 25
- show web prefs 26
- show web ssl cert 26
- smb domain leave 140
- smb domain refresh 141
- smb enable 141
- smb log 141
- smb multichannel enable 142
- smb share add 142
- smb share modify 143
- smb share permission add 145
- smb share permission modify 145
- smb share permission remove 145
- smb share remove 144
- smb share unpin 144
- smb user add 146
- smb user disable 146
- smb user enable 146
- smb user password 147
- smb user remove 147
- SNMP
 - ACLs 101
- snmp-server acl 102
- snmp-server community 102
- snmp-server contact 103
- snmp-server enable 103
- snmp-server group 103
- snmp-server host 104
- snmp-server host version 104
- snmp-server ifindex 105
- snmp-server ifindex-persist 105
- snmp-server ifindex-reset 105
- snmp-server listen enable 106
- snmp-server listen interface 106
- snmp-server location 106
- snmp-server security-name 107
- snmp-server trap-interface 107
- snmp-server trap-test 108
- snmp-server user 108
- snmp-server view 109
- ssh server allowed-ciphers 77
- ssh server enable 77
- ssh server listen enable 78
- ssh server listen interface 78
- ssh server max-auth-tries 79
- ssh server user 79

- ssh server v2-only enable 80
- stats alarm 33
- stats clear-all 35
- stats convert 33, 35
- stats email schedule 134
- stats export 35
- stats restore 134
- stats restore continue 39

T

- tacacs-server first-hit 66
- tacacs-server host 66
- tacacs-server key 67
- tacacs-server retransmit 67
- tacacs-server timeout 67
- tcpdump 39
- tcpdump stop-trigger delay 127
- tcpdump stop-trigger enable 128
- tcpdump stop-trigger restart 128
- tcpdump-x all-interfaces 125
- tcpdump-x capture-name stop 126
- tcpdump-x interfaces 127
- terminal 10
- traceroute 41
- traceroute6 41

U

- upgrade firmware 10
- upload-sysdump enable 134
- username disable 68
- username password 69
- username password 0 68
- username password 7 68

V

- verify start 155
- verify stop 155
- View-Based Access Control Mechanism 101
- vif name 123

W

- web auto-logout 83
- web auto-refresh timeout 83
- web enable 83
- web http enable 84
- web http port 84
- web http redirect 84
- web httpd listen enable 85
- web httpd listen interface 85
- web httpd timeout 85
- web https enable 86
- web https port 86
- web prefs log lines 86
- web prefs login default 86
- web proxy host 87
- web rest-server enable 87
- web session renewal 88
- web session timeout 88
- web snmp-trap conf-mode enable 88
- web soap-server enable 89
- web soap-server port 89
- web ssl cert generate 89
- web ssl cert generate-csr 90
- web ssl cert import-cert 90
- web ssl cert import-cert-key 91

web ssl protocol sslv3 91
web ssl protocol tlsv1 91
Wizard, restarting 6
write memory 98
write terminal 98